

HP Cloud OS for Moonshot

Version 1.0

Administration Dashboard Help



Contents

Overview	6
Purpose of this document	6
Target Audience	6
Document Conventions	6
The Administration Dashboard	7
Cloud Tab	8
Region Tab	9
Project Tab	9
Settings Link	10
User Roles and Their Tasks	11
Admin User Tasks	11
Cloud Administrator Tasks	12
Cloud Architect Tasks	12
Project Administrator Tasks	12
Project User Tasks	13
Working with Cloud Tab	14
View Cloud Services	14
View Domain Details	15
Manage Projects	15
Create a Cloud Project	16
Modify a Cloud Project.....	18
View Cloud Project Usage Summary.....	19
Modify Compute Limits.....	19
Add or Remove a Project User	20
Delete a Cloud Project	21
Restore a Cloud Project.....	21
Manage Users.....	21
Create a Cloud User	22
Edit a Cloud User	23
Disable a Cloud User	24
Enable a Cloud User	24
Delete a Cloud User	24
Restore a Cloud User	25
Manage Roles	25

Create a Cloud Role	26
Edit a Cloud Role	26
Delete a Cloud Role	27
Manage Images.....	27
Create a Cloud Image.....	27
Edit a Cloud Image.....	31
Delete a Cloud Image.....	31
Launch a Cloud Image	32
Manage Moonshot Chassis	33
Datacenter View.....	34
Single Chassis View	38
Changing the Power Status of a Cartridge/Node	40
Changing the Maintenance mode of a Cartridge or a Chassis	41
Search a Cartridge	41
Search a Node	41
View Events Log	42
Working with Region Tab	43
Region Overview	43
Region Info	43
Manage Region Instances	44
Edit a Region Instance.....	45
Soft Reboot an Instance	45
Terminate Region Instance(s)	46
Force Delete an Instance.....	46
View Console	46
Manage Images.....	46
Create a Region Image	47
Edit a Region Image	50
Delete a Region Image	50
Launch a Region Image	51
Manage Networks.....	52
Edit a Network	52
Manage Flavors.....	53
Create a Flavor	53
Edit a Region Flavor	55

Delete a Region Flavor	55
View a Region Flavor Extra Specifications	56
Create a Region Flavor Extra Specifications	57
Edit a Region Flavor Extra Specifications	57
Delete a Region Flavor Extra Specifications	57
Working with Project Tab	58
Project Overview	58
Manage Provisioning	59
Workloads	59
Manage Running Topologies	81
Manage Deployment Profiles	84
Manage Topology Designs	85
Manage Resource Pool	101
Manage Infrastructure	105
Manage Project Instances	105
Manage Project Images	108
Manage Networks	114
Manage Access and Security	115
View Keypair List	115
Create Keypairs	116
Delete Keypairs	116
Import Keypairs	117
Delete Multiple Keypairs	117
Download API Access	118
Access Authentication Token	118
Manage Updates and Extensions	119
Configure Credentials	119
View the Updates List	120
Import an Update	121
Download Updates or Extensions	122
Publish an Update or Extension	122
Settings Tab	123
Customize Site Settings	123
To Change the Log Level	124
Enable Extra Logging	124

Change Proxy Settings.....	124
Customize User Settings	124
Change Password	125
About HP Cloud OS for Moonshot Administration Dashboard	125
Help	125

Overview

HP Moonshot Servers are designed and tailored for specific workloads to deliver optimum performance. These support a wide range of complex IT demands right from cloud based applications to Social Media, Big Data and Mobility. HP Moonshot is the world's first software defined web server that will accelerate innovation while delivering breakthrough efficiency and scale.

HP Cloud OS for Moonshot is an enterprise ready product used to manage Moonshot Chassis, discover Moonshot Servers from the managed Moonshot Chassis, provision the given workload based on Moonshot Server capabilities such as Static Web, HDI, Online Gaming, etc. It also enables the Cloud Administrator to setup multiple project sharing across the discovered Moonshot Servers.

The IT Administrators need to plan, prepare and follow a defined process to successfully setup, configure and install the HP Cloud OS for Moonshot.

 

Purpose of this document

The document provides comprehensive instructions on the post installation step up, process and details that are required to be followed after installing HP Cloud OS for Moonshot. The document is designed to help different users to navigate through the Administration Dashboard which is visible once the Cloud environment is setup. It provides detailed instructions on the different options that are available in the dashboard for the user to customize the environment.

Target Audience

This document is primarily designed for the users of the Administration Dashboard.

Document Conventions

Convention	Description
Text in Bold	Tab names, Field names, Section names.
<i>Text in Blue and Italics</i>	Field values that are to be entered.
	Checkbox
Note	Information to remember
<i>URL</i>	URLs of webpages
 Important	Very important information

The Administration Dashboard

The HP Cloud OS for Moonshot Administration Dashboard is the interface you'll use to manage your cloud after the cloud environment is created in the Operational Dashboard.

You can access the Administration Dashboard via different user roles to perform the tasks assigned to each role. Apart from the basic functions, such as creating projects, users, roles, resource pools, and topology templates, HP Cloud OS for Moonshot provides two major features to enhance your cloud experience:

- **Moonshot Management**
- **Workload Service**

⇒ Moonshot Management

Managing the IT resources in a scalable, dynamic cloud is challenging. To have a simplified and enhanced cloud management experience, HP Cloud OS for Moonshot provides a Single Pane of Glass (SPOG) view with the Chassis Manager.

The Chassis Manager caters to three important requirements of a Cloud Administrator.

1. Display an overall perspective of the datacenter, hosted servers and health of chassis in the **Datacenter View**
2. Provide detailed information of individual chassis host and its health status in the **Single Chassis View**
3. Server management with the Power On/Off actions and Maintenance action

Datacenter View

It provides an overview of the hosted chassis in a datacenter. In this view, Cloud Administrator is able to add/delete chassis, which then goes on to discover all cartridges and nodes of a chassis. At a glance, the user is able to comprehend the datacenter health and view critical events that need immediate attention.

Single Chassis View

It provides in-depth information of a selected chassis. In this view, the user is able to grasp the overall structure and health of the contained cartridges and nodes.

A drill-down to individual cartridges or nodes provides detailed information in terms of configuration, power status, health status, workload information etc.

Event information at individual chassis level helps to monitor chassis events.

The user is also able to perform power Off/On operations on individual cartridges and nodes.

For more details on working with Moonshot Chassis, refer to the [Moonshot Management](#) section.

⇒ Workload Service

In Cloud Enterprise IT, a typical goal is to deploy a composite service, which is comprised of different application components that cater to different aspects of a service. Each application will have its own computing pattern defining its specific workload and hence needs specialized deployment of infrastructure elements. Namely: Compute, Storage and Network. The Workload service aims to facilitate the end user in deployment of a composite service in user-friendly manner. For details on creating and provisioning a workload, refer to the [Workloads](#) section.

How to access the Administration Dashboard

Before you access the Administration Dashboard, ensure that the Cloud Environment is up and running.

You can access the HP Cloud OS for Moonshot Administration Dashboard in either of the following ways:

- In your browser window, type the public IP address of your Cloud Controller Node in the following format `https://<Public IP Address>`

OR

- From the Operational Dashboard, click **Manage Clouds->More->Launch Dashboard**

The Administration Dashboard menu bar displays three different tabs: **Cloud**, **Region** and **Project**. Each active tab displays options in the left panel. You can view tabs and options only if you have the required privileges. The dashboard also displays the currently logged in user, License Validity, Settings link, Help link and the Sign Out option on the top right corner of the screen.

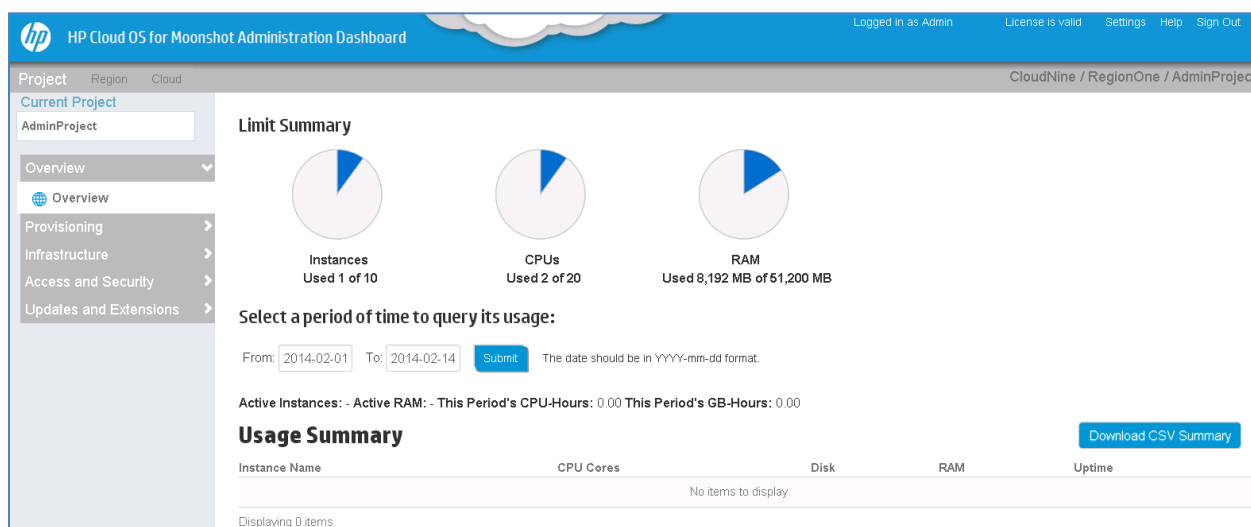


Figure 1: HP Cloud OS for Moonshot Administration Dashboard

Cloud Tab

The tab displays different options in the left panel. The following table describes each option.

Panel Option	Description
Services	Allows you to view information related to cloud services.
Domains	Allows you to view domain information.
Projects	Allows you to manage projects, add users and add roles using this option.
Users	Allows you to create new users and modify and delete existing users.
Roles	Allows you to create a new role and displays a list of existing cloud roles. You can also delete an existing role.

Images	Allows you to create, view, modify, launch and delete all from which instances can be launched.
Moonshot Management	Allows you to manage Moonshot Chassis and Moonshot servers. It also enables you to discover and allocate Moonshot Servers for provisioning.

Region Tab

The Region tab displays the following option to work with in the compute region.

Panel Option	Description
Overview	Allows you to view the detailed usage summary of a region. By default, it is displayed for the current month.
Info	Displays the details of the Compute Services and Default Quotas.
Instances	Displays the list of instances.
Images	This option allows you to create, view, modify, launch and delete images.
Networks	This tab provides a way to view networks details
Flavors	Displays the list of flavors in the region. You can create, modify, delete flavors and also view extra specifications of the selected flavor.

Project Tab

This tab allows you to use the following options.

Panel Option	Description
Overview	
Overview	Allows you to view the detailed usage summary of a project. By default, it is displayed for the current month.
Provisioning	
Workloads	Displays Workload services. These services aim to facilitate you in deployment of a composite service comprising of different applications and hence different workloads.
Running Topologies	Displays a list of topologies that have been provisioned from deployment profiles.
Deployment Profiles	Displays a list of published topology designs. These profiles can be provisioned.

Topology Designs	Displays a list of topology designs. A topology design is used for straightforward IaaS deployments, and allows you to design in a free-form layout where connection relationships implicitly define the service fulfillment lifecycle.
Resource Pools	Records that define the access to a specific cloud provider, resources that are made available by the provider and services associated with the resources.
Infrastructure	
Instances	Displays the list of running instances.
Images	Displays all the images (QCOW2 format) that can be launched to create new instances.
Networks	You can view the network details using this option.
Access and Security	
Access & Security	This option allows you create and manage Keypairs, view API Endpoints and view Authentication Token.
Updates and Extensions	
Updates and Extensions	This option allows you to download content files from HP Cloud OS Delivery Network (CODN) and use it in your cloud environment.

Settings Link

The Settings link is visible with all its options to the Admin User and Cloud Administrator. The **Site** option is not visible to other users. It displays the following options:

Panel	Description
Site	Allows you to change the site settings as per your requirements.
User	Allows you to select various user settings such as language, time zone and items per page
Password	Allows you to change your password.
About	Allows you to view version and copyright information.

User Roles and Their Tasks

The HP Cloud OS for Moonshot Administration Dashboard can be accessed by different users. Each user role is customized and has different privileges attached to it. The Administration Dashboard displays differently for each user role. Different user roles and their privileges are defined in the table below:

S.No	Role	Working Tab	Privileges
1	Cloud Administrator or Cloud Admin	All Tabs (Cloud, Region, Project)	Cloud Administrator has all the privileges associated with the cloud and HP Cloud OS for Moonshot services including the assigning projects and resources to the users. Cloud Administrators have global permissions across cloud including all regions and projects. Cloud Administrators are members of every project by design.
2	Administrator or Admin User	All Tabs (Cloud, Region, Project)	Admin role is best suited to create projects, and create users and assign the users to project. The Admin role can view domains and services, and delete protected images.
3	Cloud Architect	Project Tab	Cloud Architect creates topology designs and deployment profiles for the assigned projects.
4	Project Administrator or Project Admin	Project Tab	Project Administrator has the privileges to modify and delete project resources and content. Multiple users can be assigned the role of Project Administrator. A Project Administrator is explicitly added as a member of a project or multiple projects.
5	Project User	Project Tab	Owns only the content and resources they create. Project users can modify or delete the content and resources they own. They can also use resources that are shared with their project or cloud.

The following section describes the Administration Dashboard tasks for each of the user roles. Generally, the privilege hierarchy gives each role all the rights of the roles beneath it. For example, a Project Administrator can perform all the tasks of a Project user, plus some additional tasks.

Admin User Tasks

The Admin user has the privileges to create projects and users for the projects. Admin user can view domains and services, and delete protected images. Generally, the Admin user works on the AdminProject and performs the below mentioned tasks:

- [Change Settings](#)
- [Create Projects](#)
- [Create Users](#)
- [View Domains](#)
- [View Services](#)

Cloud Administrator Tasks

After the cloud is created, the Cloud Administrators can focus on day-to-day cloud administration tasks. Although Cloud administrators can access all the tabs in the Administration Dashboard, they primarily concentrate on the following tasks.

- [*Cloud Tab Tasks*](#)
- [*Region Tab Tasks*](#)
- [*Manage Updates and Extensions*](#)
- [*Manage Workloads*](#)
- [*Manage Resource Pools*](#)
- [*Working with Access and Security*](#)
- [*Administration Dashboard Settings*](#)

Cloud Architect Tasks

The role of the Cloud Architect involves working with creating topology designs and deployment profiles. Once the cloud and projects are created by the Cloud Administrator, Cloud Architects can focus on day-to-day cloud architect tasks. Cloud architects are mostly concerned with creating topology designs and deployment profiles. They have the privileges to perform the following tasks:

- [*Working with Topology Designer*](#)
- [*Project Overview*](#)
- [*Manage Running Topologies*](#)
- [*Manage Deployment Profiles*](#)
- [*Manage Resource Pools*](#)
- [*Manage Instances*](#)
- [*Manage Images*](#)
- [*Manage Updates and Extensions*](#)
- [*Using Deployed Workloads*](#)

Project Administrator Tasks

The Project Administrators focus on their day-to-day tasks of monitoring and maintaining project resources and content. Project administrators have all the rights of project users, as well the rights to modify or delete project resources and content. Project Administrators can work on all the projects of which they are the members and perform all project related tasks.

Project Administrators maintain projects and performs the following tasks:

- [*Working with Topology Designer*](#)
- [*Project Overview*](#)

- [*Manage Running Topologies*](#)
- [*Manage Deployment Profiles*](#)
- [*Manage Resource Pools*](#)
- [*Manage Instances*](#)
- [*Manage Images*](#)
- [*Manage Networks*](#)
- [*Working with Access and Security*](#)
- [*Using Deployed Workloads*](#)
- [*Administration Dashboard Settings*](#)

Project User Tasks

The Project Users work on the project tasks. They create topology designs and deployment profiles, and work with the different Project tab options.

Project Users perform the following tasks:

- [*Working with Topology Designer*](#)
- [*Viewing Project Overview*](#)
- [*Manage Running Topologies*](#)
- [*Manage Deployment Profiles*](#)
- [*Manage Resource Pools*](#)
- [*Working with Project Instances*](#)
- [*View Project Images*](#)
- [*Manage Networks*](#)
- [*Using Deployed Workloads*](#)
- [*Working with Access and Security*](#)
- [*Administration Dashboard Settings*](#)

Working with Cloud Tab

Only the Cloud Administrator can view the Cloud Tab. To work with the Cloud Tab, do the following.

- Login to the HP Cloud OS for Moonshot Administration Dashboard with the Cloud Administrator credentials.
The Administration Dashboard is displayed with a menu bar at the top displaying three tabs: **Project**, **Region** and **Cloud**.
- Click **Cloud** Tab to activate it.
The screen displays the current cloud name and the options in the left panel.

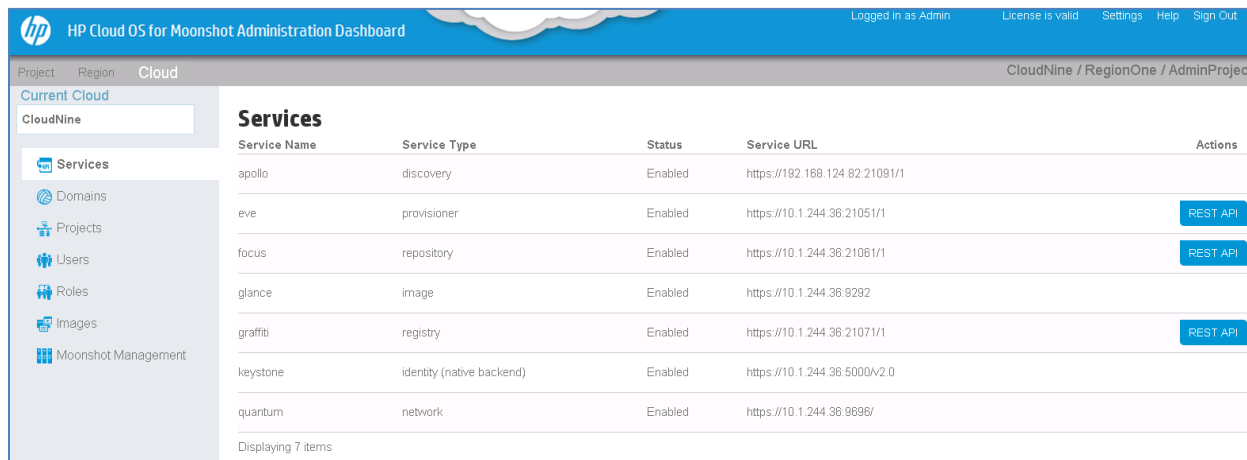


Figure 2: Cloud Tab

View Cloud Services

The **Services** option in the left panel displays the list of cloud services that are enabled for your cloud environment. By default, Services is the active option.

To view the cloud services, do the following:

1. Click **Cloud** Tab to select it.
2. From the options in the left panel, select **Services** to display the Services page.

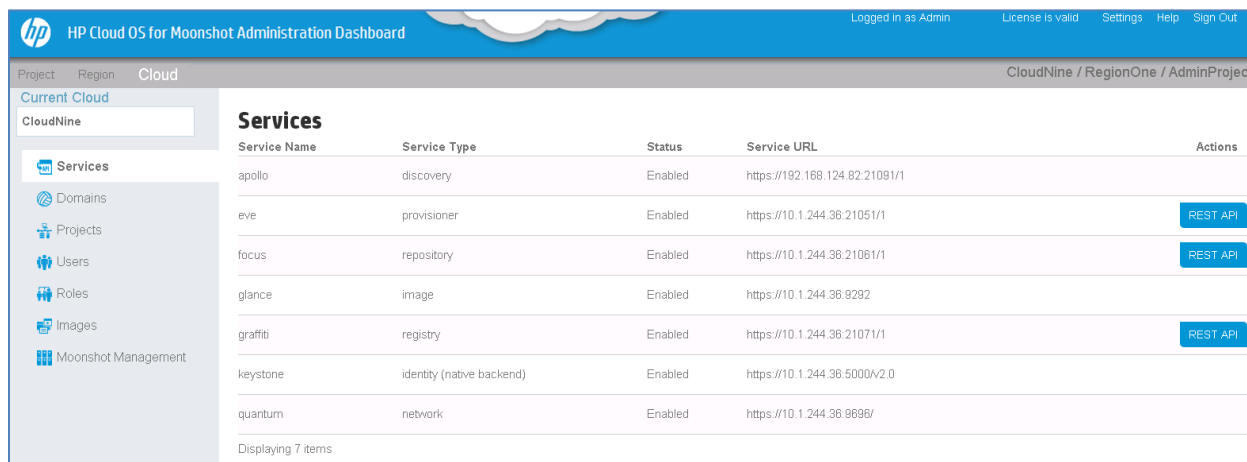


Figure 3: Services Option in Cloud Tab

The page displays the following details for each of the services:

- **Service Name:** Displays the name of the service.
- **Service Type:** Displays the type of service.
- **Service URL:** This column shows the IP address where the service is running.
- **Status:** Whether enabled.
- **Actions:** If a service supports Rest APIs, option to open Rest API displays under the **Actions** column.

View Domain Details

The Domain option displays all the domain related details. Currently, only one domain is visible because we are supporting a single domain. To view all the domain related details, do the following:

1. Click **Cloud** Tab to select it
2. From the options in the left panel, select **Domains**.
The domain is displayed in a table in the right pane.
3. Click Default to display a screen with the details of the Default domain.

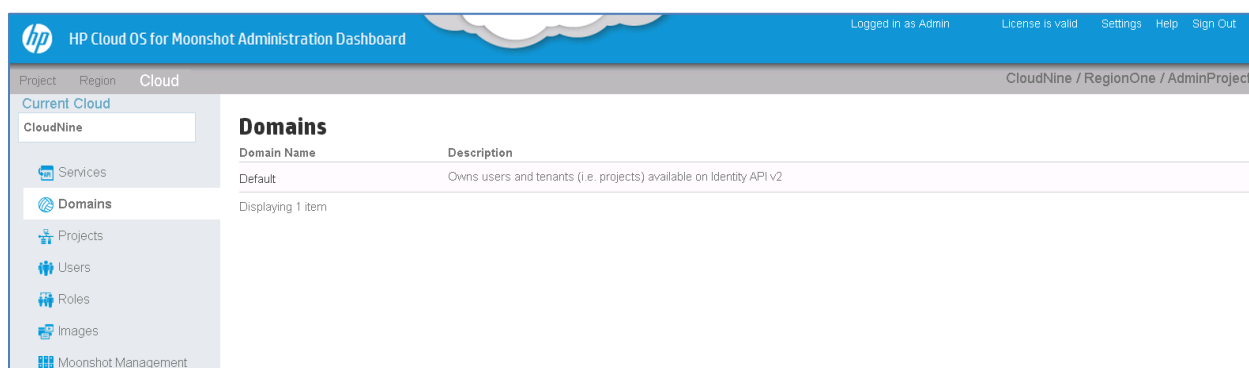


Figure 4: Domains Page

Manage Projects

Project is a grouping that allows users within each group to view and use the same set of resources. Projects protect topology templates, resources and infrastructure design from being visible to all users. Only the Cloud Administrator can create projects. Using the Projects option the Cloud Administrator can create new projects, assign users to the projects and define the compute limits for each project.

To view the list of projects, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Projects**.
The list of projects is displayed in a table in the right pane.

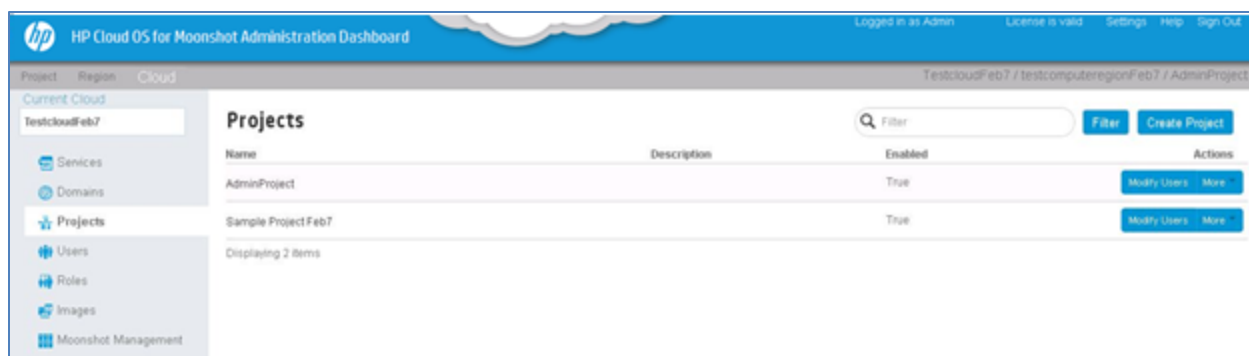



Figure 5: Cloud Projects Page

- To view the details of a particular project, in the  **Filter** box, enter few characters of the project name.
The project details are displayed in the Projects page.
- Click the Project Name to display an Overview screen with detailed project information. It displays the information related to project name, ID, default users and their roles etc.

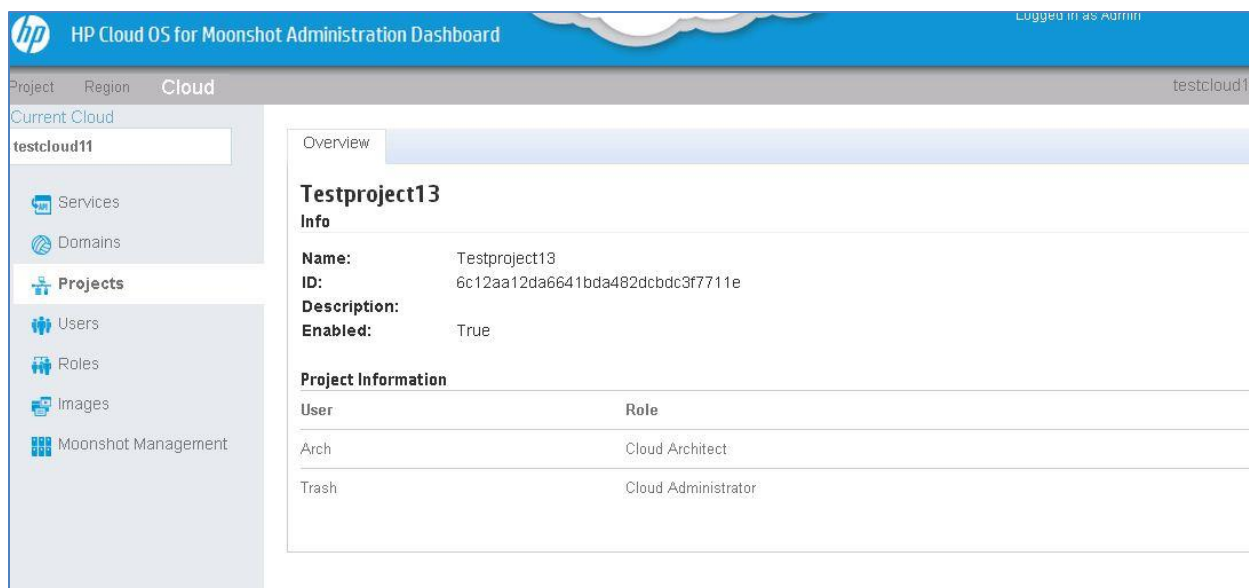



Figure 6: Project Overview Page

Create a Cloud Project

Use this option to create a new project, associate users to it, integrate applications and tools to it and define limits for it.

To create a project, do the following:

- Click the **Cloud** Tab to select it.
- From the options in the left panel, select **Projects** to display the Projects page.
- Click **Create Project** displayed on the top right in the right pane.
Create Project dialog box is displayed with four different tabs: **Project Info**, **Project Members**, **Integrations** and **Compute Limits**. By default, Project Info is the active tab.

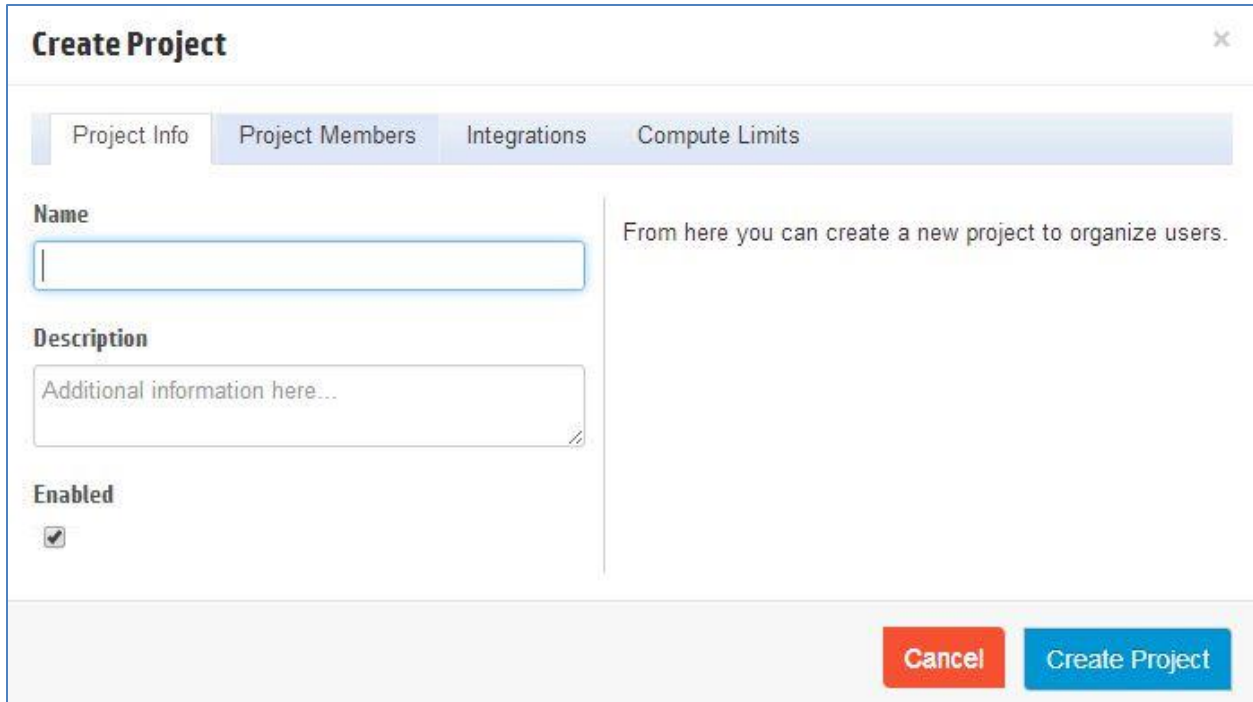




The 'Create Project' dialog box features a title bar with a close button (X). Below the title bar are four tabs: 'Project Info' (selected), 'Project Members', 'Integrations', and 'Compute Limits'. The 'Project Info' tab contains three main sections: a 'Name' section with a text input field, a 'Description' section with a larger text area containing the placeholder 'Additional information here...', and an 'Enabled' section with a checked checkbox. To the right of these input fields is a vertical line, and to the right of the line is the text 'From here you can create a new project to organize users.' At the bottom right of the dialog are two buttons: a red 'Cancel' button and a blue 'Create Project' button.

Figure 7: Create a Project Dialog Box

4. In the **Project Info** Tab, do the following:


- In the **Name** box, enter the name of the project.
- In the **Description** box, enter the description for the project.
- By default **Enabled** is selected.
This means that the project content is available to all the users assigned to it.

5. Click to activate the **Project Members** Tab.
It displays two columns **Available Users** and **Project Members**.
Do the following:

- From **Available Users** column, select a user.
- Click  against a user to add the user to the **Project Members** column.
This adds the user to the project.
- To add a role to the user, in the **Project Members** column, click  to display the role list.
- Select the role.
The user is assigned to the selected role in the project.
- (Optional) Click  against the project member to remove from the project.

Note: This is an optional step at the initial stage of project creation as no users are displayed, once you create the users, they will be visible in the list of Available Users.

6. (Optional) In the **Integrations** Tab, do the following:

- (Optional) Click  to select it, if no default Resource Pool exists and you want to create one.
The Resource Pool is created as part of the project creation. A default resource pool is created for each region in the domain.

7. In the **Compute Limits** Tab, you can set the default limits for the compute resources in the project for example: total CPUS's, total instances that can be created, Keypairs etc. Do the following:
 - From the **Region** drop-down list, select the region.
By default, the current region is displayed.
 - In the **RAM (MB)**, **Keypairs**, **CPU Cores**, **Instances**, **Metadata Items** boxes, default values are displayed. You can make the changes as required.
8. Click **Create Project**.
A message is displayed on successful project creation. The project is displayed with a system generated project ID.

Modify a Cloud Project

Use this option to make the changes to the project details.

To modify project details, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Projects** to display the Projects page with a list of projects.
3. Click **More** drop-down list against the project that you want to edit.
4. Select **Edit Project**.
The Edit Project dialog box is displayed with three tabs: **Project Info**, **Project Members** and **Compute Limits**. By default, Project Info is the active tab.

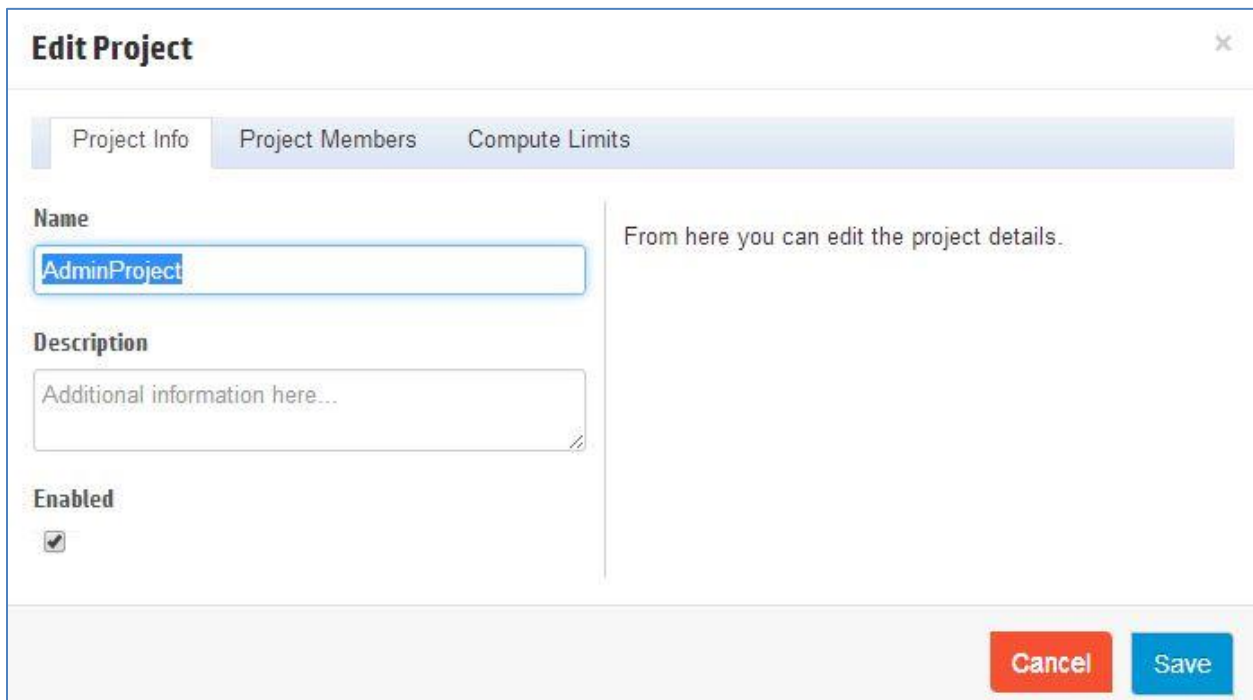


Figure 8: Edit Project Dialog Box

5. Select each tab and make the required changes.
6. Click **Save** to save the changes.

View Cloud Project Usage Summary

Use this option to view the usage summary in a project. The usage summary gives the details of the resources being used in a particular project.

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Projects** to display the Projects page with a list of projects.
3. Click **More** drop-down list against the project for which you want to view usage summary.
4. Select **View Usage**.
Project Usage Summary page is displayed with the details of the current month.

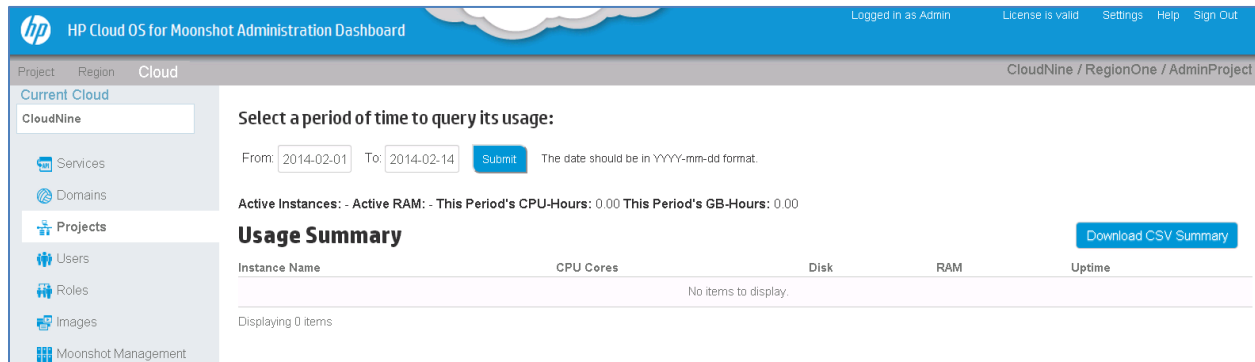


Figure 9: Project Usage Summary

5. To view the details of a different month, click **From** and **To** boxes to display a calendar.
6. Select dates and click **Submit**.
The details for the selected month are displayed.
7. Click **Download CSV Summary** to view a text file in Microsoft Excel with the details of the usage summary.

Modify Compute Limits

This option allows you to edit the compute limits that are defined in your project. To modify limits, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Projects** to display the Projects page with a list of projects.
3. Click **More** drop-down list against the project for which you want to edit the limits.
4. Select **Modify Compute Limits** to display the Edit Project dialog box.
By default, Compute Limits is the active tab.

The screenshot shows the 'Edit Project' dialog box with the 'Compute Limits' tab selected. The 'Region' dropdown is set to 'RegionOne'. To the right, a text box explains that absolute limits can be set for the project in the specified compute region. Below this, a section titled 'Absolute Compute Limits for RegionOne' contains five input fields: 'CPU Cores' (20), 'Instances' (10), 'Key Pairs' (100), 'Metadata Items' (128), and 'RAM (MB)' (51200). At the bottom right are 'Cancel' and 'Save' buttons.

Absolute Compute Limits for RegionOne	
CPU Cores	20
Instances	10
Key Pairs	100
Metadata Items	128
RAM (MB)	51200

Figure 10: Modify Compute Limits Dialog Box



5. Make the required changes.
6. Click **Save** to apply the changes.

Add or Remove a Project User

You can add a new user to the project or remove an existing user from the project.

To add or remove a project user, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Projects** to display the Projects page with a list of projects.
3. Click **Modify Users** against the project for which you want to make changes.
The Edit Project dialog box is displayed with three tabs:- **Project Info**, **Project Members** and **Compute Limits**. By default, Project Members is the active tab and displays two columns: **Available Users** and **Project Members**.

4. To add a user to the project from the **Available Users** column, click  to add the user to the **Project Members** column.
5. To remove the user, click  against the user in the **Project Members** column to remove the user.
6. Click **Save** to save the details.

Delete a Cloud Project

To delete a project, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Projects** to display the Projects page with a list of projects.
3. Click **More** drop-down list against the project which you want to delete.
A confirmation dialog box is displayed.

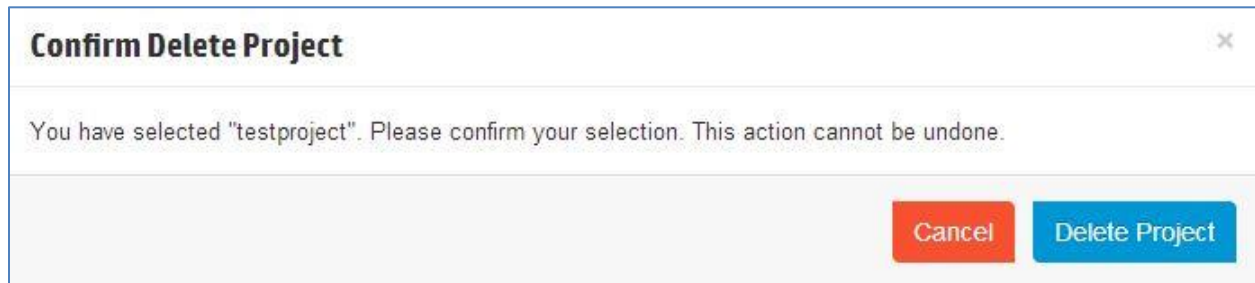


Figure 11: Delete Project

4. Select **Delete Project**.
5. Click **Delete Project** to delete the project.
The project is marked for deletion and (~) is displayed against the project name.

Restore a Cloud Project

To restore a deleted project, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Projects** to display the Projects page with a list of projects.
3. Click **Restore** displayed against the project to restore.

Manage Users

You can create different users and assign different roles and projects to them. To view the list of different cloud users, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Users** to display the Users page with a list of users.

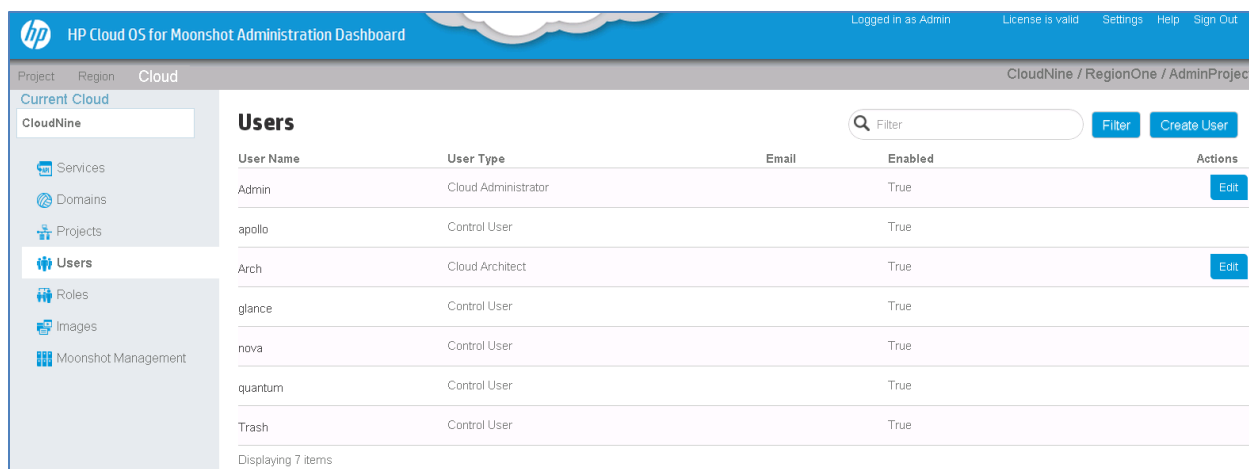


Figure 12: Cloud Users Page

3. Click User Name to view the user details.

Create a Cloud User

Use this option to create a cloud user and set general attributes for the user. You can also assign a project specific and cloud specific role to the user through this option.

To create a cloud user, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Users** to display the Users page.
3. Click **Create User** displayed on the top right corner in the right pane. Create User dialog box is displayed with three different tabs: **User**, **Project** and **Cloud**. By default, User is the active tab.

User

Project

Cloud

User Name

Email

Password

Confirm Password

From here you can set general attributes for the new user.

Cancel

Create User

Figure 13: Create User Dialog Box

4. In the **User** Tab, do the following:
 - In the **User Name** box, enter the name of the user.
 - (Optional) In the **Email** box, enter the email-ID for the user.
 - In the **Password** box, enter the password.
 - In the **Confirm Password** box, re-enter the password to verify it.
5. In the **Project** Tab, do the following:
 - From **Primary Project** drop-down list, select the project to which you want to add the user.
 - From **Project Role** drop-down list, select the role to that you want to assign to the user.


Note: The role defined in the Project Tab is specific to the selected project.

6. (Optional) In the **Cloud** Tab, do the following:
 - From the **Cloud Role** drop-down list, select the cloud role for the user.
7. Click **Create User** to create the user.
A message is displayed on successful creation.

Edit a Cloud User

Use this option to edit the attributes of a cloud user. You can modify the User and Cloud related information here and for modifying the project related attributes refer to [Modify Users](#) section. To modify the user details, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Users** to display the Users page.
3. Click **Edit** against the user whom you want to edit.
Update User dialog box is displayed with only two tabs: **User** and **Cloud**.

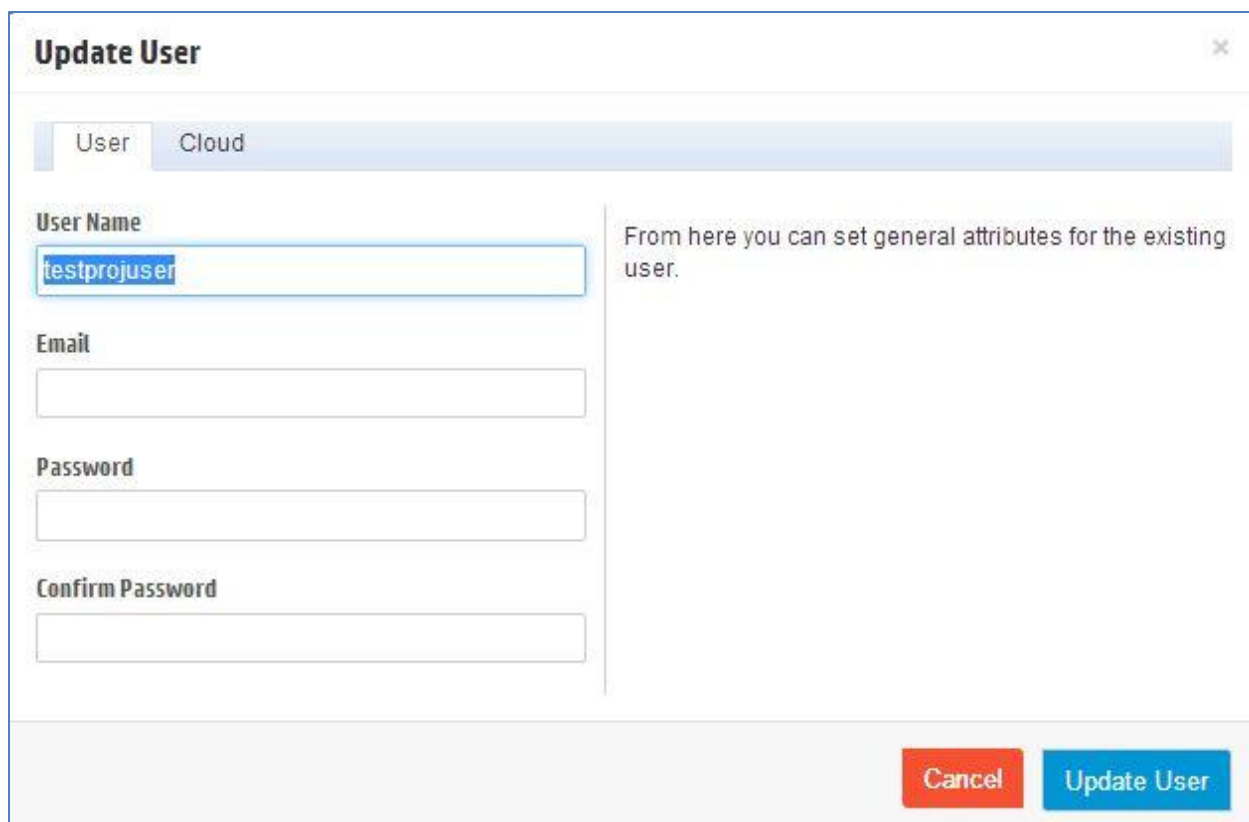

The image shows a dialog box titled "Update User" with a close button (X) in the top right corner. Inside the dialog, there are two tabs: "User" and "Cloud". The "User" tab is selected. On the left side of the tab, there are four input fields labeled "User Name", "Email", "Password", and "Confirm Password". The "User Name" field contains the text "testprojuser". On the right side of the tab, there is a text area with the message: "From here you can set general attributes for the existing user." At the bottom right of the dialog, there are two buttons: a red "Cancel" button and a blue "Update User" button.

Figure 14: Edit User Dialog Box

4. Make the required changes.
5. Click **Update User** to save the details.

Disable a Cloud User

To disable the cloud user from logging in, do the following:

1. Click **Cloud** Tab to select it.
2. From the options in the left panel, select **Users** to display the Users page.
3. Click **More** drop-down list against the user whom you want to disable and select **Disable User** from the drop-down list.
The user is disabled and the Enabled field status changes to **False**.

Enable a Cloud User

- To enable the user again, select **Enable User** from the **More** drop-down list against the user.
The Enabled field status changes to **True**.

Delete a Cloud User

The delete option marks the user for deletion.

Do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Users** to display the Users page.
3. Click **More** drop-down list against the user whom you want to delete.
4. Select **Delete User** from the drop-down list.
A confirmation box is displayed.
5. Click **Delete User**. The user is marked for deletion by adding a tilde mark (~) against it.

Restore a Cloud User

To restore a deleted user, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Users** to display the Users page.
3. Click **Restore User** against the user whom you want to restore.
A confirmation box is displayed.
4. Click **Restore**. A message is displayed on successful restoration.

Once the user is restored, you need to manually assign the user to the previously assigned project.

Manage Roles

Each role has different privileges assigned to it. Based on the privileges, the users can access the project resources.

HP Cloud OS for Moonshot has defined several roles/personas that represent users with different responsibilities within the cloud. These roles manage resources within the cloud within their respective realms.

Use this option to assign privileges to different users.

To view the list of roles, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Roles** to display the Roles page with a list of roles.



Figure 15: Cloud Roles Option

3. Click Role Name to view all the related details of the selected role.

Create a Cloud Role

To create a cloud role, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Roles** to display the Roles page.
3. Click **Create Role** displayed on the top right corner in the right pane.
Create Role dialog box is displayed.

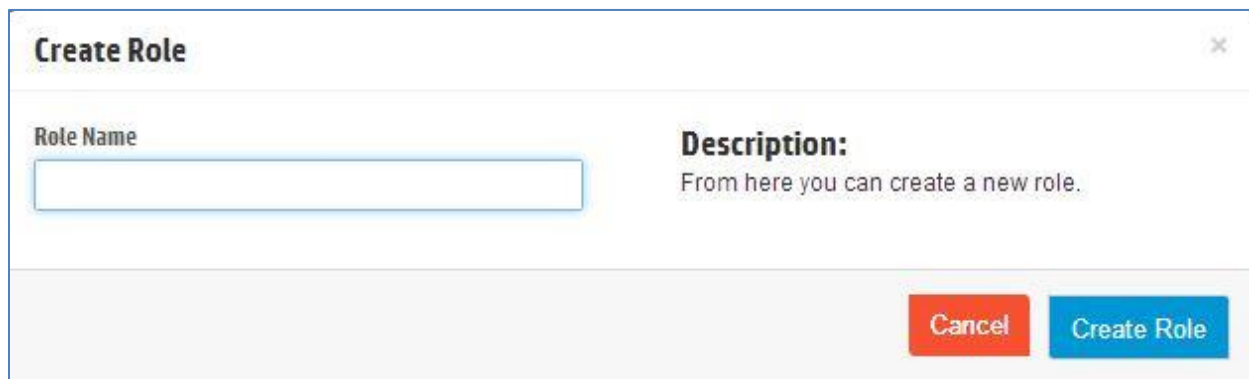
The image shows a 'Create Role' dialog box. It has a title bar with the text 'Create Role' and a close button (X). The main area is divided into two sections. The left section is labeled 'Role Name' and contains a text input field. The right section is labeled 'Description:' and contains the text 'From here you can create a new role.' At the bottom right of the dialog box, there are two buttons: a red 'Cancel' button and a blue 'Create Role' button.

Figure 16: Create Role Dialog Box

4. In the **Role Name** box, enter the name of the role.
5. Click **Create Role** to create a new role.
The role is added to the role list and is displayed in the alphabetical order.

Edit a Cloud Role

Use this option to modify the role. You can only edit the role name.

To edit a cloud role, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Roles** to display the Roles page.
3. Click **Edit** against the role that you want to modify to display Update Role dialog box.

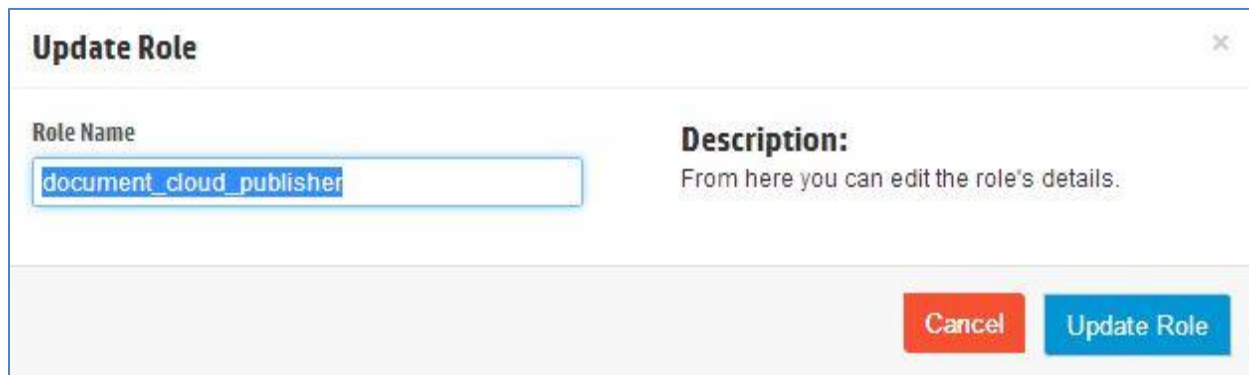
The image shows an 'Update Role' dialog box. It has a title bar with the text 'Update Role' and a close button (X). The main area is divided into two sections. The left section is labeled 'Role Name' and contains a text input field with the text 'document_cloud_publisher' entered. The right section is labeled 'Description:' and contains the text 'From here you can edit the role's details.' At the bottom right of the dialog box, there are two buttons: a red 'Cancel' button and a blue 'Update Role' button.

Figure 17: Edit Role Dialog Box

4. Make the required changes.
5. Click **Update Role** to update the changes.

Delete a Cloud Role

To delete a cloud role, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Roles** to display the Roles page.
3. Click **More** drop-down list against the role that you want to delete.
4. Select **Delete Role** to display a confirmation box.
5. Click **Delete Role** to delete the role.
The role is deleted from the role list.

Note: You cannot delete the Admin and Arch roles.

Manage Images

Cloud Administrator can create, modify and publish cloud images. The scope of an image can be set within a cloud or within a region. The image is required for installing an Operating System in an instance.

To create images, refer to the Cloud Image Builder document for more details.

To view the list of cloud images, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Images** to display the Images page with a list of images.

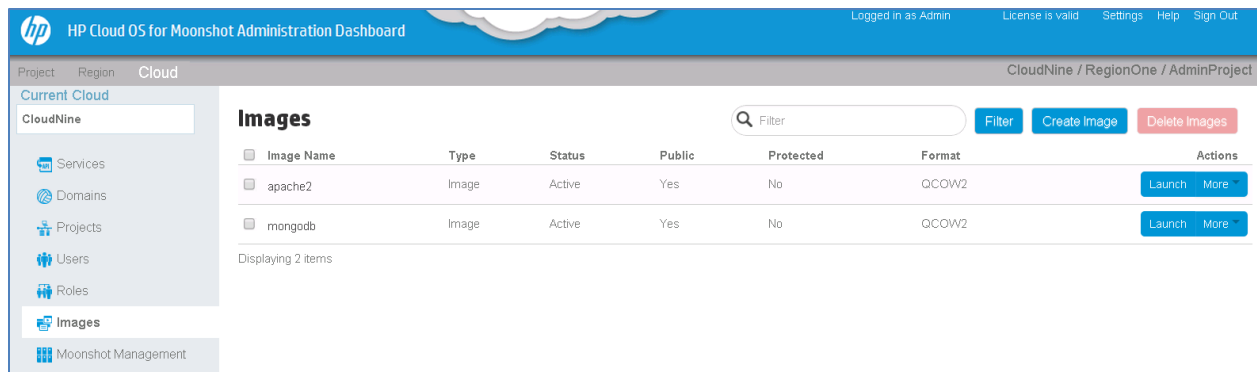


Figure 18: Cloud Images Option

3. Click Image Name to view the image details and specifications.

Create a Cloud Image

To create cloud images, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Images** to open the Images page.


Note:

It is mandatory to create image types such as *QCOW2* and *AMI* with associated *Amazon Kernel Image (AKI)* and *Amazon RAMdisk Image (ARI)*. It is suggested to create the images in the following sequence: *Amazon Kernel Image (AKI)*, *Amazon RAMdisk Image (ARI)* and *QCOW2*.

The **Kernel Image** drop-down list and **RAM Disk Image** drop-down list is displayed when the selected format is *QCOW2* or *AMI*.

To create AKI images, do the following:

- Click **Create Image** to open a Create an Image dialog box.

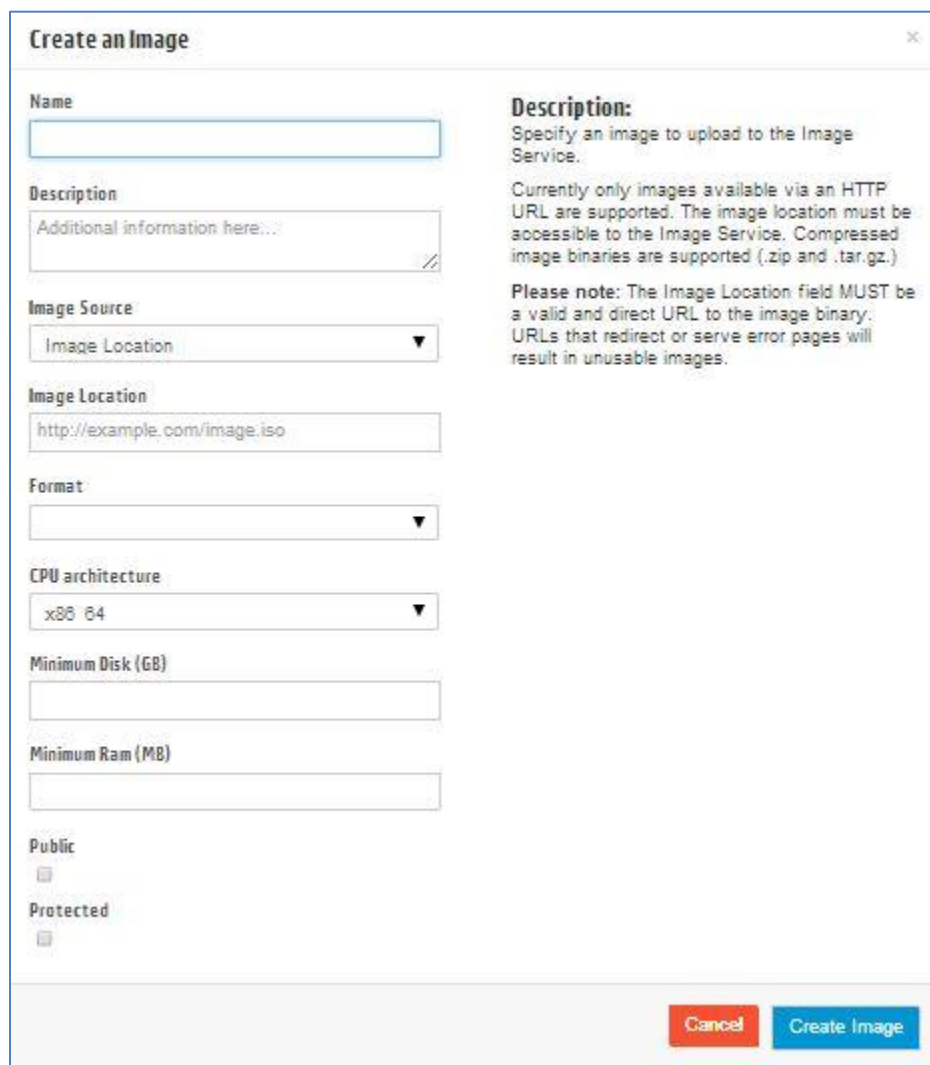The image shows a 'Create an Image' dialog box with a title bar and a close button. It contains several input fields and dropdown menus. On the right side, there is a 'Description' section with explanatory text and a 'Please note' warning. At the bottom right, there are 'Cancel' and 'Create Image' buttons.

Create an Image

Name

Description

Image Source

Image Location

Format

CPU architecture

Minimum Disk (GB)

Minimum Ram (MB)

Public
☐

Protected
☐

Description:
Specify an image to upload to the Image Service.

Currently only images available via an HTTP URL are supported. The image location must be accessible to the Image Service. Compressed image binaries are supported (.zip and .tar.gz.)

Please note: The Image Location field MUST be a valid and direct URL to the image binary. URLs that redirect or serve error pages will result in unusable images.

Cancel **Create Image**

Figure 19: Create Image Dialog Box

- In the **Name** box, enter a name for the image.
- (Optional) In the **Description** box, enter description for the image.
- From the **Format** drop-down list, select the format as AKI.
- From the **Image Source** drop-down list, do either of the following:

- Select *Image location* from the drop-down list.
The Image Location box is displayed.
- In the **Image Location** box, enter the HTTP URL to load the AKI image from.

OR

- Select *Image File* from the drop-down-list.
The **Choose File** option is displayed.
- Click **Choose File** to browse the AKI image.
- Select the AKI Image to upload.
- The **CPU Architecture** drop-down list displays *x86_64* by default.
The moonshot hardware supports the above specification.
- In the **Minimum Disk** box, specify a minimum size required to boot image.
If no input is entered, the minimum value defaults to 0.
- In the **Minimum Ram** box, specify a minimum size required to boot image.
If no input is entered, the minimum value defaults to 0.
- Click ☐ against **Public** to select it.
This will make the image visible to all users.
- Click ☐ against **Protected** to select it. This makes the image as editable but cannot be deleted.
- Click **Create Image**. A message is displayed on successful creation.

Note: ARI and AKI images are only listed in the Region Tab. Cloud and Project Tabs display images from which an instance can be launched such as QCOW2, AMI etc.

To create the ARI image, do the following:

- Click **Create Image** to open a Create an Image dialog box.
- In the **Name** box, enter a name for the image.
- From the **Format** drop-down list, select the format as *ARI*.
- From the **Image Source** drop-down list, do either of the following:
 - Select *Image location* from the drop-down list.
The Image Location box is displayed.
 - In the Image Location box, enter the HTTP URL to load the ARI image from.

OR

- Select *Image File* from the drop-down-list.
The **Choose File** option is displayed.
- Click **Choose File** to browse the ARI image.
- Select the ARI Image to upload.
- The **CPU Architecture** drop-down list displays *x86_64* by default.
The moonshot hardware supports the above specification.
- In the **Minimum Disk** box, specify a minimum size required to boot image.
If no input is entered, the minimum value defaults to 0.
- In the **Minimum Ram** box, specify a minimum size required to boot image.
If no input is entered, the minimum value defaults to 0.

- Click ☐ against **Public** to select it.
This will make the image visible to all users.
- Click ☐ against **Protected** to select it.
This makes the image as editable but cannot be deleted.
- Click **Create Image**.
A message is displayed on successful creation.

Note: ARI and AKI images are only listed in the Region Tab. Cloud and Project Tabs display images from which an instance can be launched such as QCOW2, AMI etc.

To create QCOW2, do the following:

- Click **Create Image** to open a Create an Image dialog box.
- In the **Name** box, enter a name for the image.
- From the **Format** drop-down list, select the format as [QCOW2-QEMU Emulator](#).
- From the **Image Source** drop-down list, do either of the following:
 - Select Image location from the drop-down list.
The Image Location box is displayed.
 - In the Image Location box, enter the HTTP URL to load the QCOW2 image from.
- OR
- Select Image File from the drop-down-list.
The Choose File option is displayed.
- Click Choose File to browse the QCOW2 image.
- Select the QCOW2 Image to upload.
- The **CPU Architecture** drop-down list displays [x86_64](#) by default.
The moonshot hardware supports the above specification.
- In the **Minimum Disk** box, specify a minimum size required to boot image.
If no input is entered, the minimum value defaults to 0.
- In the **Minimum Ram** box, specify a minimum size required to boot image.
If no input is entered, the minimum value defaults to 0.
- Click ☐ against **Public** to select it.
This will make the image visible to all users.
- Click ☐ against **Protected** to select it.
This makes the image as editable but cannot be deleted.
- From the **Kernel Image** drop-down list, select the corresponding kernel image.
- From the **RAM Disk Image** drop-down list, select the corresponding RAM disk image.
- Click **Create Image**. A message is displayed on successful creation. The image displays in the table in the Images page.


Note:

- * Do not navigate from the page while the image is being created.
- * Use different names while creating images.

Edit a Cloud Image

To edit an image, do the following:

1. Click the **Cloud** Tab to select it.
2. From the options in the left panel, select **Images** to open the Images page.
3. Click **More** drop-down list displayed against the image that you wish to edit and select **Edit Image**. The Edit Image dialog box is displayed.

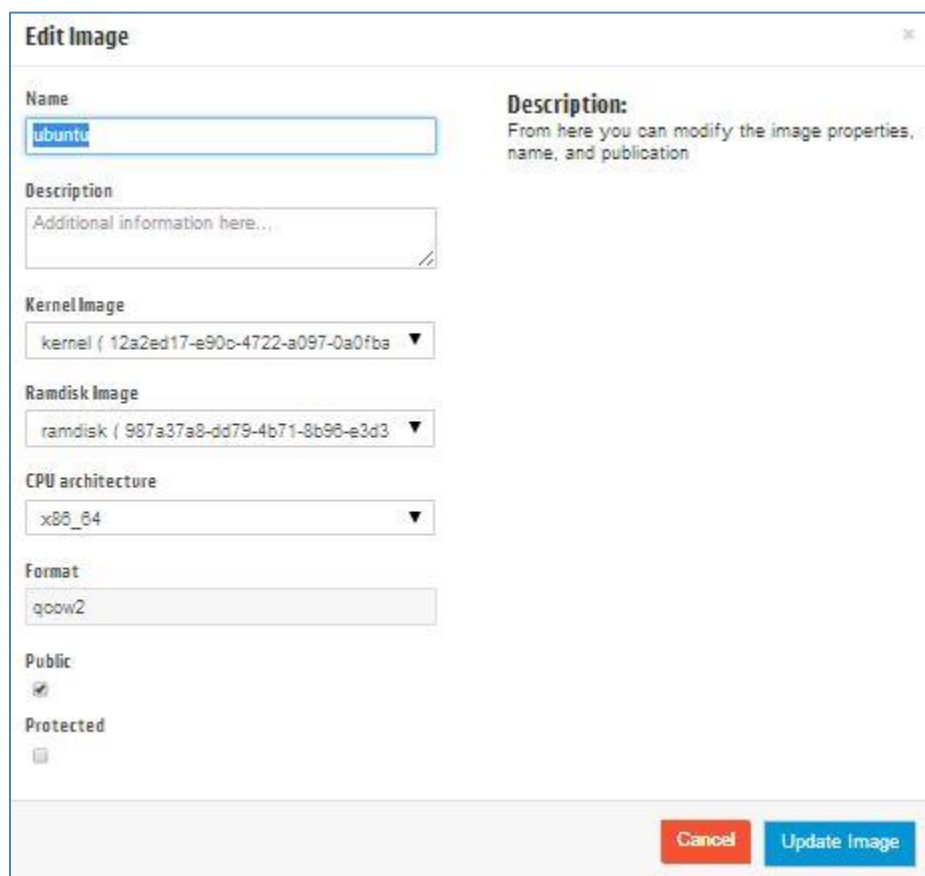

Edit Image

Name: ubuntu

Description: Additional information here...

Kernel Image: kernel (12a2ed17-e90c-4722-a097-0a0fba)

Ramdisk Image: ramdisk (987a37a8-dd79-4b71-8b98-e3d3)

CPU architecture: x86_64

Format: qcow2

Public: ☒

Protected: ☐


Buttons: Cancel, Update Image

Figure 20: Edit Image Dialog Box

4. Make the required changes.
5. Click **Update Image** to update the changes.

Delete a Cloud Image


1. Click the **Cloud** Tab to activate it.
The tab displays options in the left panel.
2. From the left panel, select **Images** to display the Images page.
3. Click **More** drop-down list displayed against the image that you wish to delete and select **Delete Image**.
A message is displayed to ask your confirmation. The image is deleted once your confirmation is received.

- To delete a group of images, click  to select the image/images that you want to delete and click **Delete Images**.
The images are deleted and removed from the image list.

Launch a Cloud Image

To launch an image in the Administration Dashboard, do the following:

- Click the **Cloud** Tab to select it.
- From the options in the left panel, select **Images** to display the Images page.
- Select **Launch** against the image listed in the table.
A Launch Instance dialog box displays with four tabs: **Details** Tab, **Access & Security** Tab, **Networking** Tab and **Post-Creation** Tab. By default, Details is the active tab.

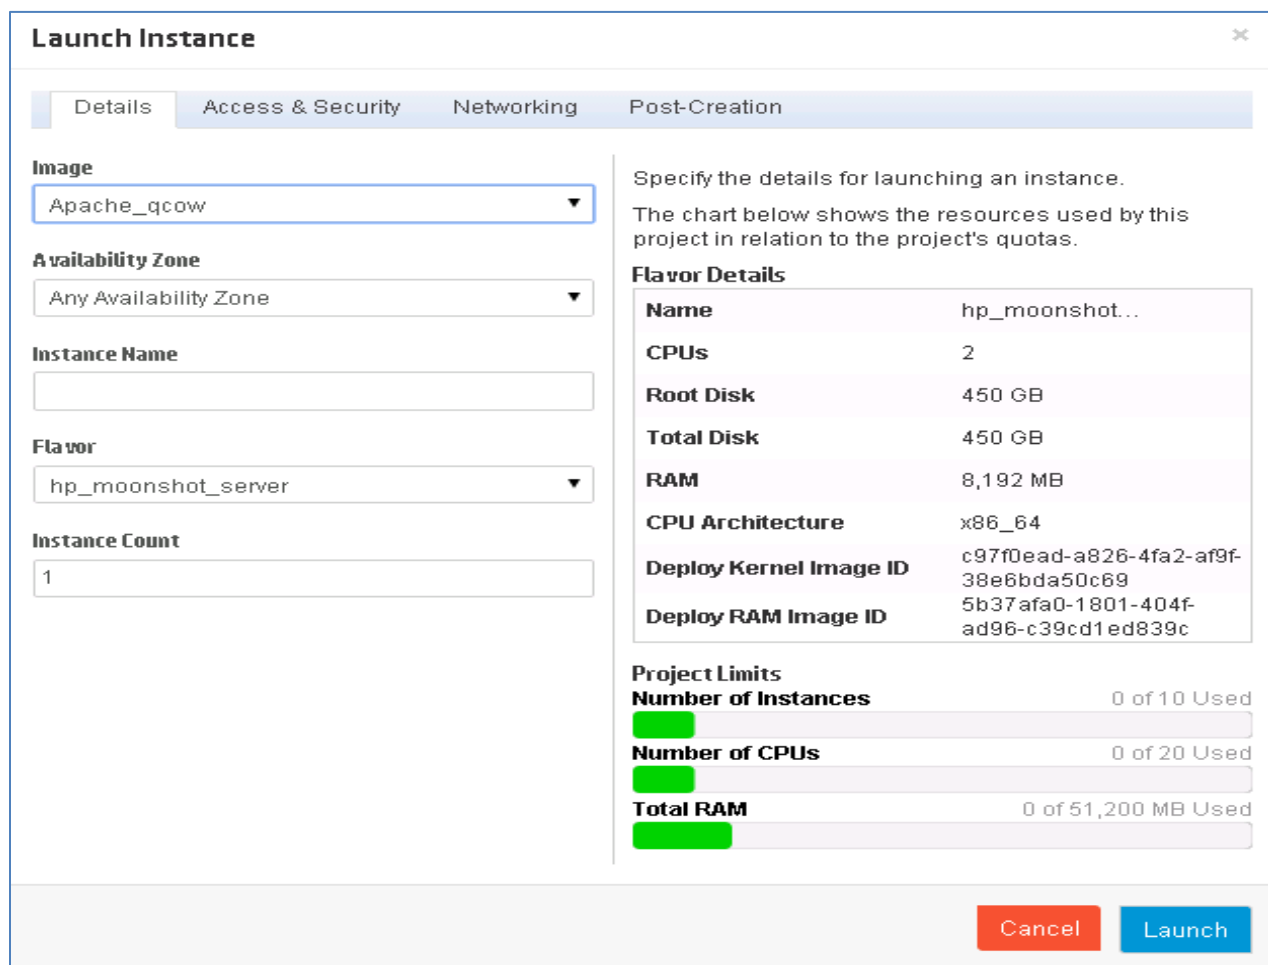

Launch Instance

Details | Access & Security | Networking | Post-Creation

Image
Apache_qcow

Availability Zone
Any Availability Zone

Instance Name

Flavor
hp_moonshot_server

Instance Count
1

Specify the details for launching an instance.
The chart below shows the resources used by this project in relation to the project's quotas.

Flavor Details

Name	hp_moonshot...
CPUs	2
Root Disk	450 GB
Total Disk	450 GB
RAM	8,192 MB
CPU Architecture	x86_64
Deploy Kernel Image ID	c97f0ead-a826-4fa2-af9f-38e6bda50c69
Deploy RAM Image ID	5b37afa0-1801-404f-ad96-c39cd1ed839c

Project Limits

Number of Instances	0 of 10 Used
Number of CPUs	0 of 20 Used
Total RAM	0 of 51,200 MB Used

Cancel Launch

Figure 21: Launch Image Dialog Box

- On the **Details** Tab, do the following:
 - From the **Instance Source** drop-down list, select the image.
 - From the **Image** drop-down list, select the value.
 - In the **Instance Name** box, enter a name for the instance.

- From the **Flavor** drop-down list, select the Baremetal flavor.
This is default flavor that is created.
 - In the **Instance Count** box, enter **1** or more than 1.
The flavor details are displayed on the right side of the dialog box.
5. On the **Access and Security** Tab, do the following:
 - From the **Keypair** drop-down list, select value from the list.
 6. On the **Networking** Tab, no networks are listed in the **Selected Networks** section.
 - Select the network from the **Available networks** section.
 7. Click **Launch**.
You are taken to the Instances page with the progress bar displaying the completion progress.

Manage Moonshot Chassis



This section helps you to add HP Moonshot servers to the Cloud. It allows you to manage Moonshot Chassis by using add, edit and delete options. You can view the details and overall health status of the chassis using Datacenter View or Single Chassis View. Events panel provides the information about chassis related events.

Note: This function can be performed by the Cloud Administrator or any member who is part of the Cloud Administrator group.

To access Moonshot Management option, do the following:

1. Select the **Cloud** Tab to select it.
2. From the options in the left panel, select **Moonshot Management** to display the Datacenter View page.
This option enables two views- Datacenter View and Single Chassis View.

Datacenter View

This view provides an overview of the chassis that are managed in a Datacenter. It displays **Add**, **Edit** and **Delete** options at the top and **Events** Log panel on the right. The Datacenter View has two representations – Grid View and Table View which can be accessed using  and  icons.

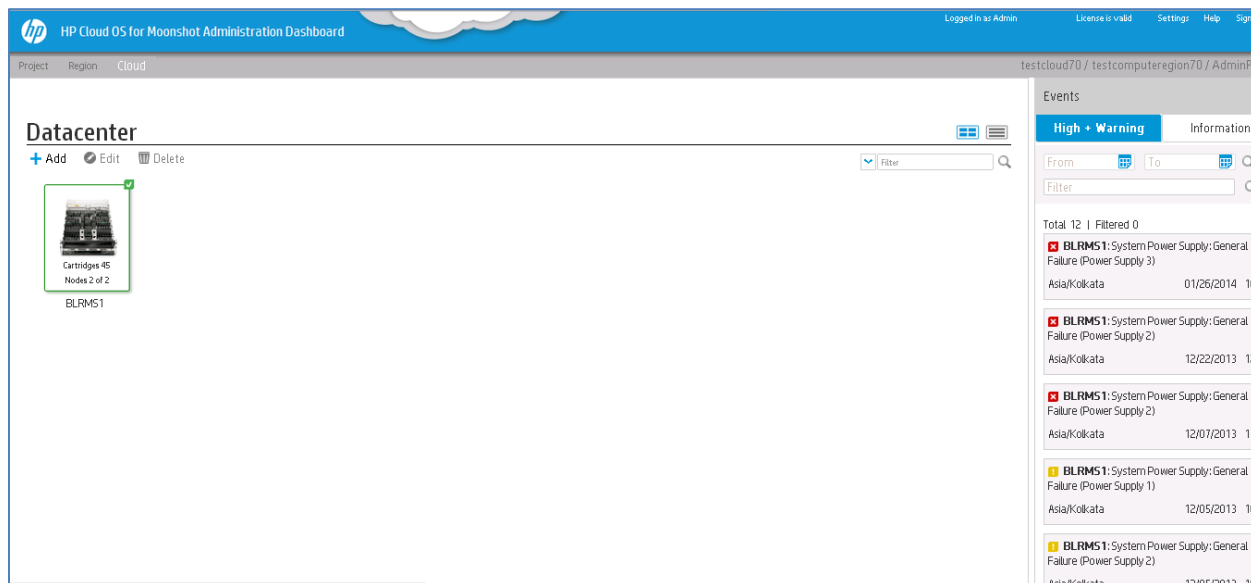


Figure 22: Datacenter –Grid View




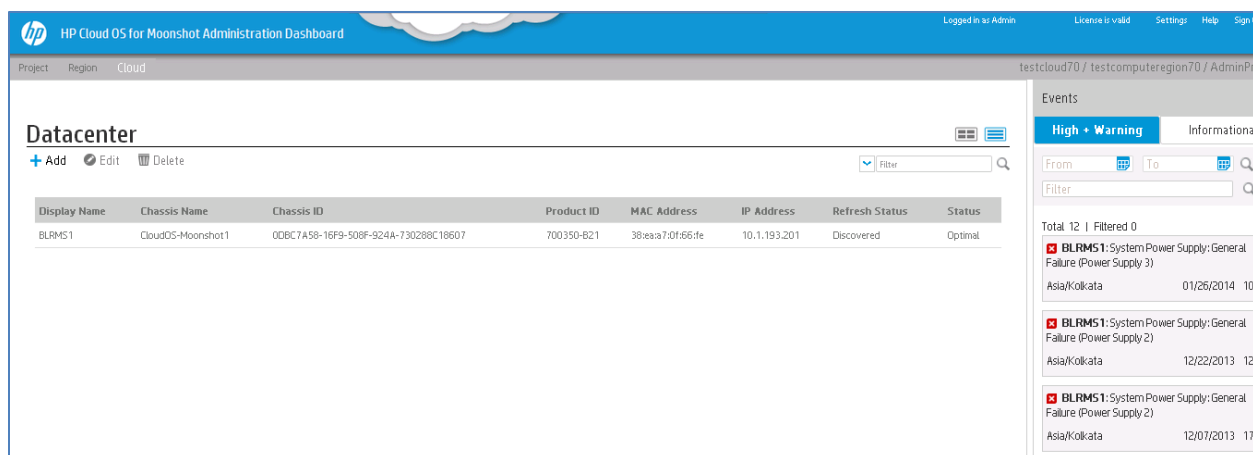
- Click  or  to toggle between the Grid and Table Views.
By default, the chassis information is displayed in the Grid view of the Datacenter view.
- Double-click the Chassis to go to the [Single Chassis View](#).

Table View

The Table View displays the chassis details in a tabular format.

- Click  displayed at the top right corner of the Datacenter View.
The following chassis details are displayed in the table.
 - Display Name
 - Chassis Name
 - Chassis ID
 - Product ID
 - MAC Address
 - IP Address
 - Refresh Status
 - Status



HP Cloud OS for Moonshot Administration Dashboard

Logged in as Admin License is valid Settings Help Sign Out

Project Region Cloud testcloud70 / testcomputeregion70 / AdminPr

Datacenter

+ Add Edit Delete Filter

Display Name	Chassis Name	Chassis ID	Product ID	MAC Address	IP Address	Refresh Status	Status
BLRMS1	CloudOS-Moonshot1	00BC7A58-16F9-508F-924A-730288C18607	700350-B21	38:ea:a7:0f:66:fe	10.1.193.201	Discovered	Optimal

Events

High + Warning Information

From To Filter


Total 12 | Filtered 0

- BLRMS1: System Power Supply: General Failure (Power Supply 3) Asia/Kolkata 01/26/2014 10
- BLRMS1: System Power Supply: General Failure (Power Supply 2) Asia/Kolkata 12/22/2013 12
- BLRMS1: System Power Supply: General Failure (Power Supply 2) Asia/Kolkata 12/07/2013 17

Figure 23: Table View

Add a Chassis

1. Click **+ Add** to display the Enter Chassis Details dialog box.

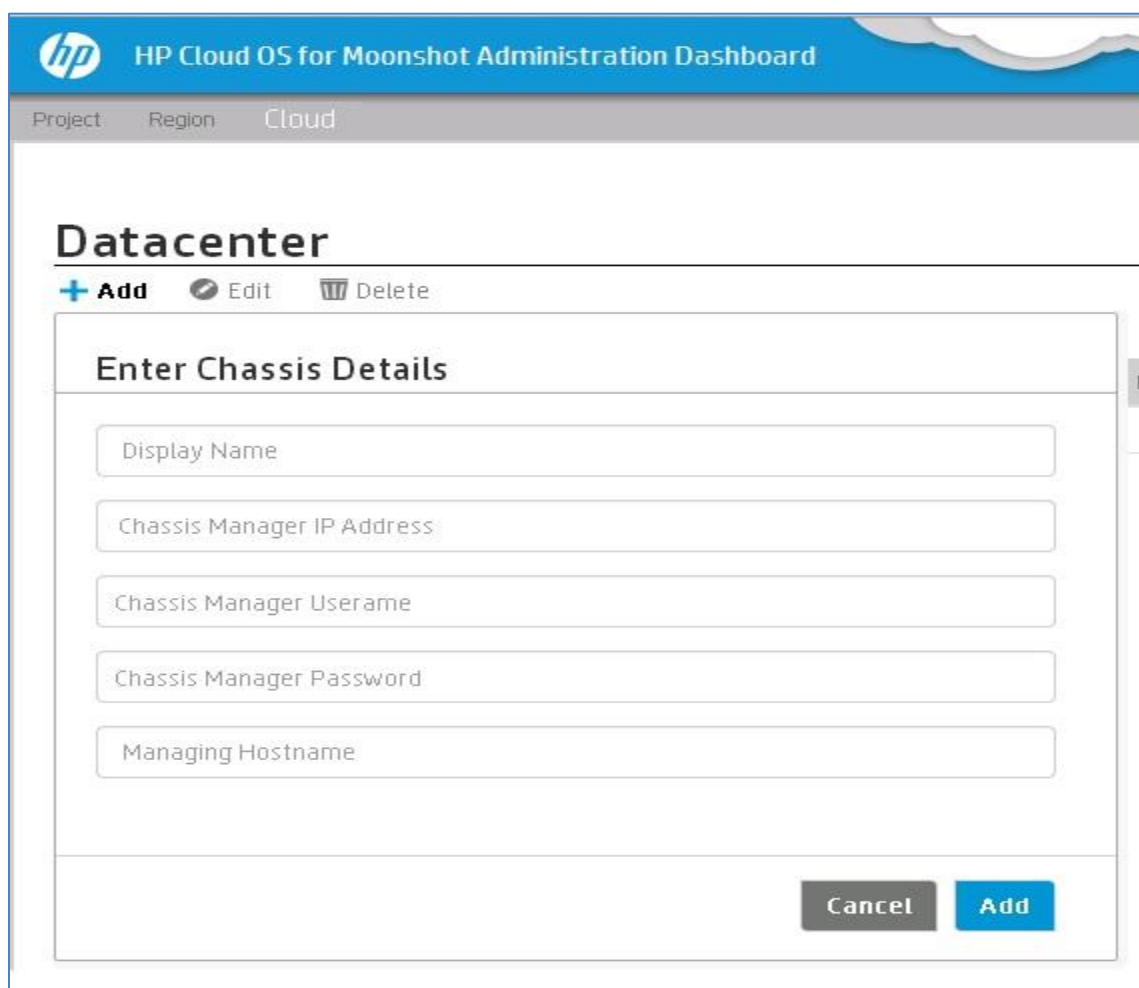

HP Cloud OS for Moonshot Administration Dashboard

Project Region Cloud

Datacenter

+ Add Edit Delete

Enter Chassis Details

Display Name

Chassis Manager IP Address

Chassis Manager Username

Chassis Manager Password

Managing Hostname

Cancel Add

Figure 24: Add Chassis

2. In the **Display Name** box, enter the display name of the chassis.
The name should have a minimum of 4 characters. The name should start with an alphabet and may be followed by numbers or an underscore (_).

Note: Special characters and spaces are not allowed.

3. In the **Chassis Manager IP Address** box, enter the IP address of the Moonshot Chassis.
4. In the **Chassis Manager User Name** box, enter the user name.
5. In the **Chassis Manager Password** box, enter the password.
6. In the **Managing Hostname** box, enter the FQDN of the Baremetal host that will manage the chassis.
For example: [hostname.cloudos.local](#)
7. Click **Add** to add the Moonshot Chassis to the Cloud.
The chassis can be in any of the following states:



- **Discovering** – *When the chassis is being discovered*



- **Warning** - *When a few of the cartridges are not in good condition*



- **Failed** – *When the discovery process fails*




- **Optimal**- *When the chassis is discovered and is in good state*

Once the operation is successful, the Moonshot Chassis is graphically represented on the screen.

Edit Chassis

You can only edit the password of the chassis.

1. In the Datacenter View, select the chassis to edit.
The Edit option does not get activated until you select the chassis in the Grid or Table view.
2. Click  **Edit** to display the Edit Chassis Details dialog box.

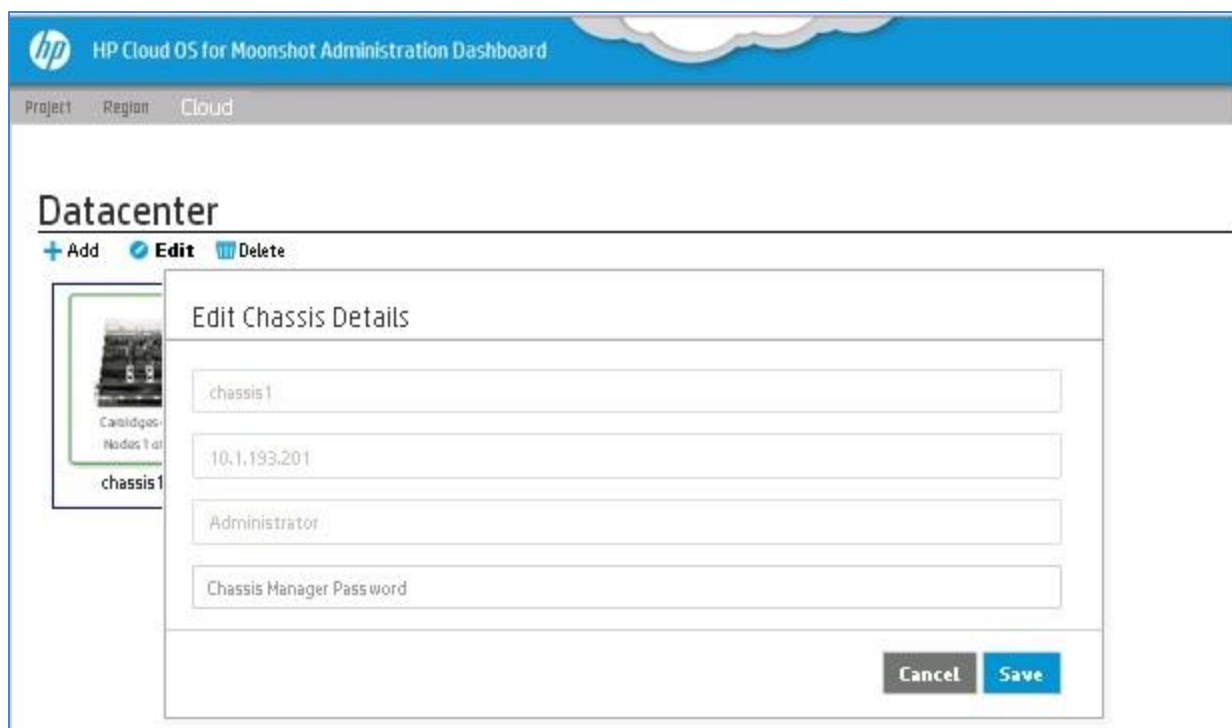



Figure 25: Edit Chassis Dialog Box

3. Enter the new password.
4. Click **Save** to save the password details.

Delete Chassis

You can delete a chassis if it is in maintenance mode and no active instances are running on it. A chassis can also be deleted if the discovery fails when the chassis is being added for the first time.

1. In the Datacenter View, select the chassis to delete.
The Delete option does not get activated until you select the chassis in the Grid or Table view.
2. Click  **Delete** to display a confirmation box.

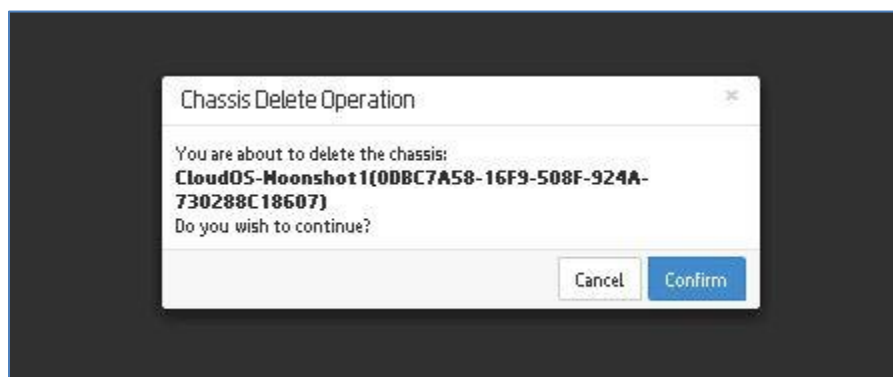


Figure 26: Delete Chassis Confirmation Box

- Click **Confirm** to delete the chassis.
- The chassis is deleted after getting a confirmation.

Single Chassis View

The Single Chassis View displays the detailed information about the selected Chassis in two sections- Chassis Snapshot and Table section. It also displays the Events log panel on the right.

The screenshot displays the HP Cloud OS for Moonshot Administration Dashboard. The main section shows the Chassis Snapshot for BLRMS1. The snapshot includes a visual representation of the chassis with 45 cartridges. To the right of the visual representation, there are several key metrics and status indicators:

- Chassis Name:** CloudOS-Moonshot1
- Chassis UUID:** 00BC7A58-16F3-508F-924A-73028C18607
- Chassis Manager IP:** 10.1.193.201
- Firmware Version:** 1.10 Nov 22 2013
- Cartridges (45):** 45 OK 0
- Available Nodes:** 2 of 2
- Overall Health:** OK
- Last Sync-up Time:** 2014-02-17 02:09:49
- Maintenance Mode:** False
- Fans:** 5 OK 0
- Power Supplies:** 4 OK 0
- Temperature Sensors:** 14 OK 0

Below the snapshot, there is a table listing the cartridges:

Cartridge Name	ID	Serial #	Nodes	Product ID	Type	System ROM Version	Health	Maintenance Mode
HP ProLiant Moonshot Cartridge	c1	CN63150DAK	1	700352-B21	Compute	11/15/2013	OK	False
HP ProLiant Moonshot Cartridge	c2	CN63150DCE	1	700352-B21	Compute	11/15/2013	OK	False
HP ProLiant Moonshot Cartridge	c3	CN63150DC3	1	700352-B21	Compute	11/15/2013	OK	False

The right sidebar shows the Events log, which includes a search bar and a list of events. The events listed are:







- System Power Supply Removed (Power Supply 3) - 01/26/2014 10:
- System Power Supply Inserted (Power Supply 3) - 01/26/2014 10:
- System Power Supply: General Failure (Power Supply 3) - 01/26/2014 10:
- Moonshot Chassis Cartridge Inserted (Slot 30 Serial Number CN63150DDM) - 01/23/2014 11:
- Moonshot Chassis Cartridge Inserted (Slot 29 Serial Number CN63150DDCA) - 01/23/2014 11:
- Moonshot Chassis Cartridge Removed (Slot 3 Serial Number CN63150DDCM) - 01/23/2014 11:


Figure 27: Single Chassis View

The Chassis Snapshot visually represents the chassis with all the cartridges along with power states of the cartridges.

The following table displays a list of icons and their description. These icons are displayed next to the Chassis Snapshot on the right. It also displays the complete state of the chassis in terms of the following:

Icon	Description
	Displays the chassis UUID
	Displays the chassis name
	Displays the Chassis Manager IP address
	Displays the Firmware Version
	Displays the number of cartridges discovered.
	Displays the number of available nodes for provisioning.

	Displays the overall health of the chassis
	Displays the Last Sync-Up Time
	Displays the Maintenance Mode status.
	Displays the fan status
	Displays the power supply status
	Displays the temperature status.

- Click  to view the refreshed Chassis data.
The Force Refresh option takes a minute to complete. During this time you will be unable to perform any action on the cartridge or the nodes.

Note: By default, the chassis data gets refreshed every 30 minutes.

Table View

The Table view section displays two tabs- Cartridges and Nodes. Cartridges Tab provides the Cartridge View and the Nodes Tab provides the Nodes View. By default, the Cartridges View is the active view.

Cartridges View

Click **Cartridges** Tab displayed below the Chassis Snapshot to view the following details about the cartridges:

- Cartridge Name
- ID
- Serial #
- Nodes
- Product ID
- Type
- System ROM Version
- Health
- Maintenance Mode

Nodes View

Click **Nodes** Tab displayed below the Chassis Snapshot to view the following details about the nodes:



- Node ID

- CPU Cores
- Memory(in MB)
- Min Disk (in MB)
- MAC List
- Power Status
- Instance UUID

The Nodes View also displays two tabs on the right- **Workload** and **Configuration**.
To view the workload and configuration details of a particular node, do the following:

- ⇒ Select a node from the table for which you want to view the workload or configuration details.
- ⇒ Click the **Workload** Tab to view the workload details of the selected node.
- ⇒ Click the **Configuration** Tab to view the configuration details of selected node.



Note:

1. Selecting / de-selecting a cartridge or a node in the Cartridges or Nodes table is a toggle function.
2. You can select multiple cartridges or nodes by selecting the particular rows one-by-one, in the Cartridges or Nodes table – as the case may be.
3. Selecting a cartridge in the Cartridges table also selects that cartridge on the Chassis Snapshot and vice versa.
4. Selecting the cartridge also selects all its nodes in the Nodes table.
5. Selecting all the Nodes of a cartridge in the Nodes table selects the parent cartridge also.
6.  Selects all the cartridge/nodes in the table as well as in the Chassis Snapshot section.
7.  De-selects all the cartridges/nodes in the table as well as Chassis Snapshot section.

Changing the Power Status of a Cartridge/Node

Note:

- * You cannot change the power status of a provisioned cartridge.
- * Changing the Power status of a cartridge also changes the power status of all related nodes.

- To power On/Off nodes of a cartridge, click the cartridge or node in the table or click the cartridge on the chassis image in the Chassis Snapshot section to select it.
- Select a cartridge from the table and click  or  button to power On/Off respectively.
OR
From the right-click menu of the cartridge, select **Power On** or **Off** to change the power status.
A Confirmation dialog box “Node Power On/Off” is displayed.
- Click **Confirm** to power On/Off the cartridge/node.
The cartridge/node is powered off or on.



Changing the Maintenance mode of a Cartridge or a Chassis

You can place a cartridge or a chassis in maintenance On or Off mode. This is a scheduled activity that may be done periodically.



Note:

- * If a cartridge is in maintenance mode, then the nodes of the cartridge cannot be used for provisioning.
- * If a chassis is in maintenance mode, then the cartridges and the nodes within the chassis cannot be used for provisioning.

To change the maintenance mode of a chassis, do the following:

- In the Single Chassis view, select  or  displayed at the top right corner to set Maintenance Mode to On or Off.
A Maintenance Mode On/Off dialog box is displayed.
- Click **Confirm** to set the Maintenance Mode for the chassis.

To change the maintenance mode of a cartridge, do the following:



- In the Single Chassis view, select the cartridge from the table and click  or  to set maintenance mode to on or off.

OR

In the Chassis Snapshot, right-click on the cartridge to select **Maintenance Mode On** or **Maintenance Mode Off**. A Maintenance Mode On/Off dialog box is displayed.
- Click **Confirm** to set the Maintenance Mode for the cartridge.

Search a Cartridge



This option allows you to search particular cartridges based on the search criteria defined.

1. In the Single Chassis view, click the **Cartridge** Tab to select it.
2. Click  drop-down displayed at the top right corner of the table and select the column name.
3. In the **Filter** box, enter the search criteria.
4. Click .
The search results are displayed based on the search criterion in the table below.

Search a Node

This option allows you to search particular nodes based on the search criteria defined.

1. In the Single Chassis view, click the **Node** Tab to select it.




2. Click  drop-down displayed at the top right corner of the table and select the column name.
3. In the **Filter** box, enter the search criteria.
4. Click  .
The search results are displayed based on the search criterion in the table below.

View Events Log


Events log displays of the sequence of events in the selected view. You can search for a particular event by defining search criteria.


View Event Log in Datacenter View

Events log is displayed on the right panel of Datacenter View page. The Panel displays two tabs – **High + Warning** and **Informational**. By default High + Warning is the active tab and displays the high severity events and warnings. The **Informational** Tab displays the informational details of general events. You can search for particular events by defining the search criteria.

1. In the **Events Panel**, in the **From** box, click  to select the start date for searching the events.
2. In the **To** box, click  to select the end date for searching the events.
3. Click  .
The search results are displayed in the table below.

OR




- In the **Filter** box, enter the text to base your search on.
- Click  .
The search results are displayed in the table below.

4. (Optional) Click  to clear the search criteria.

Note: * You can also perform search based on both the date and text criteria.
* The Events log refreshes every 10 minutes by default.

View Events Log in Single Chassis View

Events log is displayed in the right panel of Single Chassis View page. It displays the sequence of events related to the particular chassis.

1. In the **Events Panel** of the Single Chassis View, in the **From** box, click  to select the start date for searching the events.
2. In the **To** box, click  to select the end date for searching the events.
3. Click  .
The search results are displayed in the Events panel.
4. (Optional) Click **All** to display all the events.

Note: The Events log refreshes itself every 10 minutes by default.

Working with Region Tab

The Region Tab displays all the options in the left panel for the Cloud Administrators.

- Login to the HP Cloud OS for Moonshot Administration Dashboard with the Cloud Administrator credentials.
The Administration Dashboard is displayed with a menu bar at the top displaying three tabs: **Project**, **Region** and **Cloud**.
- Click **Region** Tab to select it.
The screen is displayed with the region details and the options in the left panel.

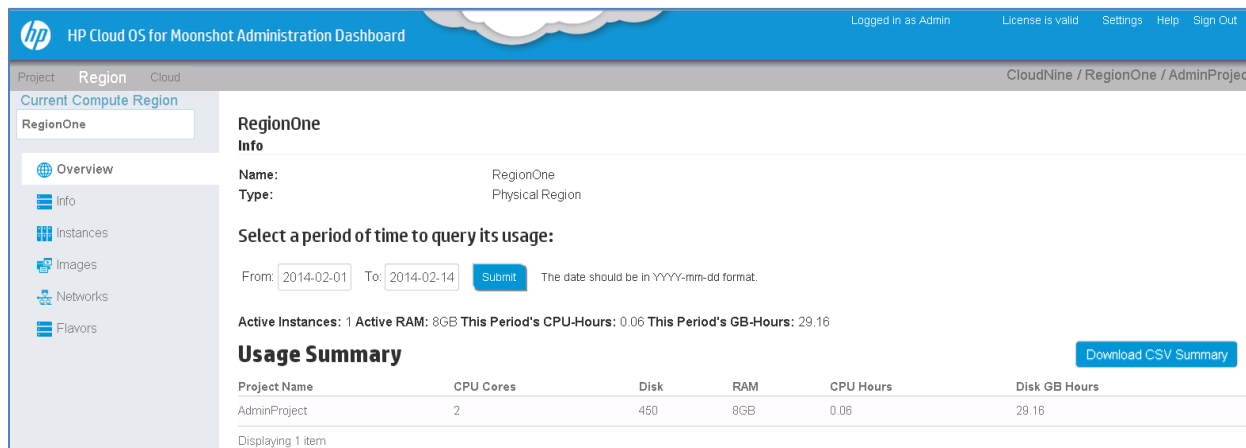


Figure 28: Region Tab

Region Overview

To view the details of the region, do the following:

1. Click the **Region** Tab to select it.
By default, Overview is the active tab and displays the region details and region usage summary of the current month.
2. To view the details of a different month, in the **Select a period of time to query its usage** section, do the following:
 - In the **From** box, click to select the start date.
 - In the **To** box, click to select the end date.
 - Click **Submit**.
The usage summary of the selected period is displayed.
3. Click **Download CSV Summary** to view a text file in Microsoft Excel with the details of the region usage summary.

Region Info

The Info option allows user to view the list of services, compute services and default quotas.

To view the info details of the region, do the following:

1. Click the **Region** Tab to select it.

- From the options in the left panel, select **Info** to display a page with three tabs- **Services**, **Compute Services**, **Default Quotas**.
By default, Services is the active tab and displays all the services being used in the region.
Services can be run on the same node as the compute region controller or they can be run on a different server.

The screenshot shows the HP Cloud OS for Moonshot Administration Dashboard. The left sidebar has a menu with 'Overview', 'Info', 'Instances', 'Images', 'Networks', and 'Flavors'. The 'Info' tab is selected. The main content area has three tabs: 'Services', 'Compute Services', and 'Default Quotas'. The 'Services' tab is active, showing a table of services.

Name	Service	Host	Enabled
nova	compute	192.168.124.82	Enabled
quantum	network	192.168.124.82	Enabled
focus	repository	10.1.244.36	Enabled
glance	image	192.168.124.82	Enabled
ec2	ec2	192.168.124.82	Enabled
eve	provisioner	10.1.244.36	Enabled
apollo	discovery	192.168.124.82	Enabled
keystone	identity (native backend)	192.168.124.82	Enabled
graffiti	registry	10.1.244.36	Enabled

Displaying 9 items

Figure 29: Region Info Page

- To view the compute service details, click the **Compute Services** Tab to activate it.
A list of compute services is displayed for the region.
- To view the default quotas, click the **Default Quotas** Tab to activate it.
A list of default quotas is displayed.

Manage Region Instances

Use this option to view the list of instances in a region.

- Click the **Region** Tab to select it.
- From the options in the left panel, select **Instances** to display a page with the list of instances.
- Click Name to display a page with two tabs- **Overview** and **Console**.
By default, **Overview** is the active tab and displays the specifications, IP addresses and metadata of the selected instance.

The screenshot shows the HP Cloud OS for Moonshot Administration Dashboard. The left sidebar has a menu with 'Overview', 'Info', 'Instances', 'Images', 'Networks', and 'Flavors'. The 'Instances' tab is selected. The main content area has a tab labeled 'Instances'. Below the tab is a table of instances.

Project	Host	Name	Image Name	IP Address	Size	Status	Task	Power State	Uptime	Actions
-	d00-50-56-9c-2b-27	mongodb_-T5-78822fc-d59c-4398-b16e-dafb99dc38d	mongodb		hp_moonshot_server 8GB RAM 2 CPU 450GB Disk	Build	Spawning	No State	1 minute	Edit Instance More
AdminProject	d00-50-56-9c-2b-27	apache_T5-40868ce1-be19-4a22-9a03-994cb701721f	apache2	172.16.1.4	hp_moonshot_server 8GB RAM 2 CPU 450GB Disk	Active	None	Running	10 minutes	Edit Instance More

Displaying 2 items

Figure 30: Region Instances Page

- Click the **Console** Tab to activate it.
A page is displayed to enter a password. Enter the Chassis Manager password for the instance.
Once the password is accepted, the boot process of the instance is displayed.

Note: You cannot login to the instance with this console; it only displays the boot process of the instance. To login, you need to open a separate SSH session using the IP assigned to the instance.

Edit a Region Instance

Once a region instance is created, you can only edit the name of the instance.

Use this option to edit the instance.

- Click the **Region** Tab to select it.
- From the options in the left panel, select **Instances** to display a page with the list of instances.
- Click **Edit Instance**.
An Edit Instance dialog box is displayed. You can only edit the name of the instance.

Figure 31: Edit Region Instance Dialog Box

- Make the required changes.
- Click **Save** to save the details.


Soft Reboot an Instance

Soft reboot can be used to stop the instance and reboot it. This function is similar to the *Restart* option in Microsoft Windows.

To reboot the instance, do the following.

- Click the **Region** Tab to select it.
- From the options in the left panel, select **Instances** to display an Instances page.
- Click **More** against the instance to display the drop-down list.
- Select **Soft Reboot** an Instance.
A confirm Soft Reboot dialog box is displayed.
- Click **Soft Reboot Instance** to reboot the instance.

Terminate Region Instance(s)

1. Click the **Region** Tab to select it.
2. From the options in the left panel, select **Instances** to display an Instances page.
The page displays a list of instances.
3. Click  to select the instances to delete.
4. Click **Terminate Instances**.
The instances are deleted after getting a confirmation from you.

OR

- To terminate a single instance, click **More** against the instance to display a drop-down list.
Select **Terminate Instance** to terminate it.

Force Delete an Instance

Use this option to delete an instance which is in an unresponsive state.

1. Click the **Region** Tab to select it.
2. From the options in the left panel, select **Instances** to display an Instances page.
The page displays a list of instances. Click **More** against the instance to display the drop-down list.
3. Click **Force Delete Instance**.
The selected instance is deleted after getting a confirmation from you.

View Console

To view the console details, do the following:

1. Click the **Region** Tab to select it.
2. From the options in the left panel, select **Instances** to display the Instances page.
The page displays a list of instances.
3. Click **More** against the instance to display the drop-down list.
4. Click the **Console** Tab to activate it.
A page is displayed to enter a password. Enter the Chassis Manager password for the instance.
Once the password is accepted, the boot process of the instance is displayed.

Note: You cannot login to the instance using this console; it only displays the boot process of the instance. To login, you need to open a separate SSH session using the IP assigned to the instance.

Manage Images

Images are stored at the Domain level with a single Glance service and are unaffected by region selection. Only **Public** images are visible to all users. *To create images, refer to the Cloud Image Builder document for more details.*

To view the list of available images, do the following:

1. Click the **Region** Tab to select it.
2. From the options in the left panel, select **Images** to display the Images page with a list of images.

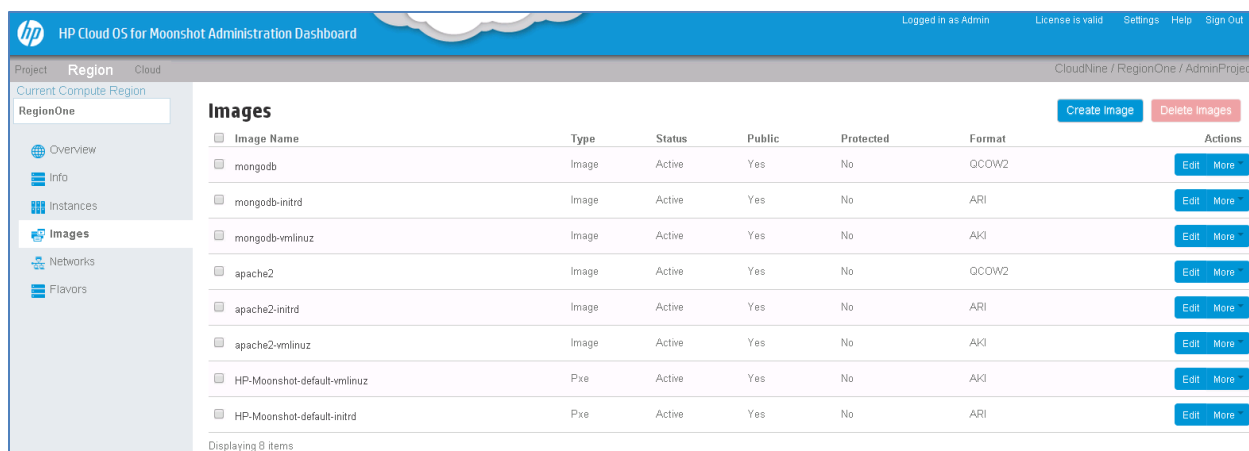


Figure 32: Region Images Page

3. Click Image Name to view the image details and specifications

Create a Region Image

To create a region image, do the following:

1. Click the **Region** Tab to activate it.
The tab displays options in the left panel.
2. Select **Images** from the left panel to open the Images page.


Note:

It is mandatory to create image types such as *QCOW2* and *AMI* with associated *Amazon Kernel Image (AKI)* and *Amazon RAMdisk Image (ARI)*. It is suggested to create the images in the following sequence: *Amazon Kernel Image (AKI)*, *Amazon RAMdisk Image (ARI)* and *QCOW2*.

The **Kernel Image** drop-down list and **RAM Disk Image** drop-down list is displayed when the selected format is *QCOW2* or *AMI*.

To create AKI images, do the following:

- Click **Create Image** to open a Create an Image dialog box.

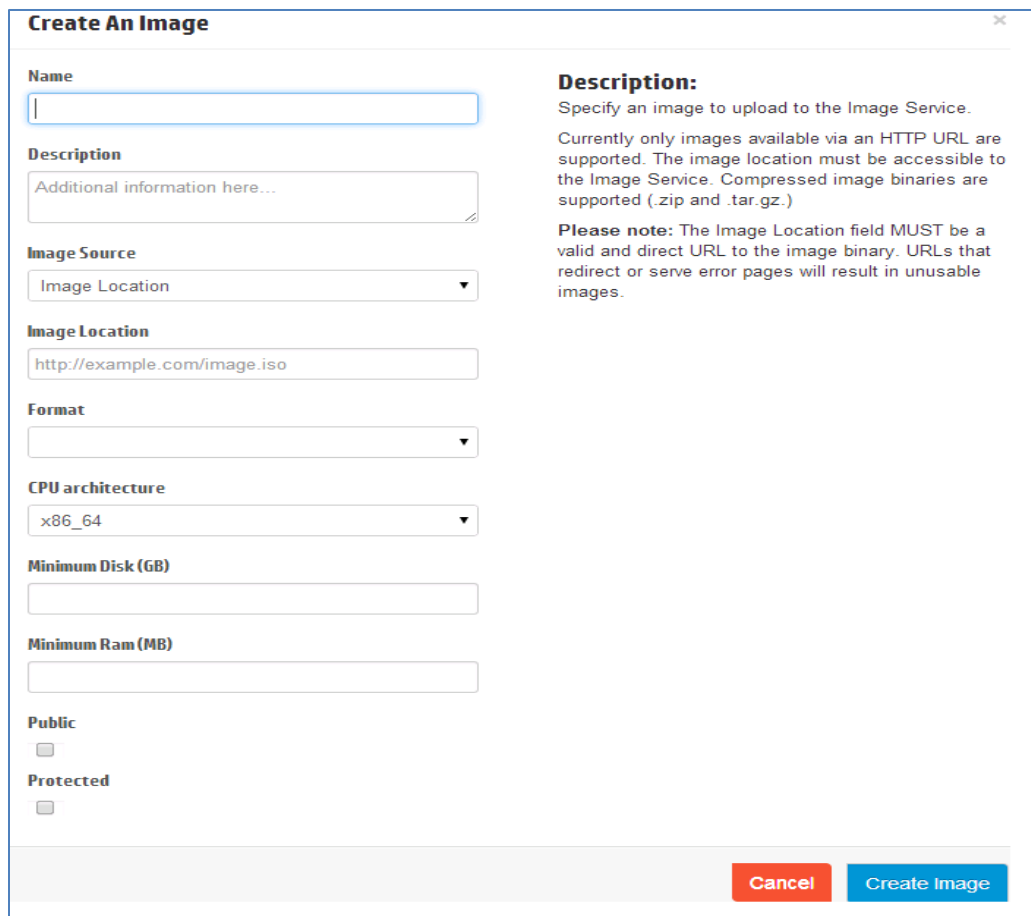

Create An Image

Name

Description

Image Source

Image Location

Format

CPU architecture

Minimum Disk (GB)

Minimum Ram (MB)

Public
☐

Protected
☐

Description:
 Specify an image to upload to the Image Service.
 Currently only images available via an HTTP URL are supported. The image location must be accessible to the Image Service. Compressed image binaries are supported (.zip and .tar.gz.)
Please note: The Image Location field MUST be a valid and direct URL to the image binary. URLs that redirect or serve error pages will result in unusable images.

Cancel **Create Image**

Figure 33: Create Image Dialog Box

- In the **Name** box, enter a name for the image.
- (Optional) In the **Description** box, enter description for the image.
- From the **Format** drop-down list, select the format as *AKI*.
- From the **Image Source** drop-down list, do either of the following:
 - Select *Image location* from the drop-down list.
The Image Location box is displayed.
 - In the **Image Location** box, enter the HTTP URL to load the AKI image from.
- OR
- Select *Image File* from the drop-down-list.
The **Choose File** option is displayed.
- Click **Choose File** to browse the AKI image.
- Select the AKI Image to upload.
- The **CPU Architecture** drop-down list displays *x86_64* by default.
The moonshot hardware supports the above specification.
- In the **Minimum Disk** box, specify a minimum size required to boot image.
If no input is entered, the minimum value defaults to 0.

- In the **Minimum Ram** box, specify a minimum size required to boot image. If no input is entered, the minimum value defaults to 0.
- Click ☐ against **Public** to select it. This will make the image visible to all users.
- Click ☐ against **Protected** to select it. This makes the image as read-only.
- Click **Create Image**. A message is displayed on successful creation. The image displays in the table in the Images page.

To create the ARI image, do the following:

- Click **Create Image** to open a Create an Image dialog box.
- In the **Name** box, enter a name for the image.
- From the **Format** drop-down list, select the format as [ARI](#).
- From the **Image Source** drop-down list, do either of the following:
 - Select [Image location](#) from the drop-down list. The Image Location box is displayed.
 - In the Image Location box, enter the HTTP URL to load the ARI image from.
- OR
- Select [Image File](#) from the drop-down-list. The **Choose File** option is displayed.
- Click **Choose File** to browse the ARI image.
- Select the ARI Image to upload.
- The **CPU Architecture** drop-down list displays [x86_64](#) by default. The moonshot hardware supports the above specification.
- In the **Minimum Disk** box, specify a minimum size required to boot image. If no input is provided, minimum is not considered and it defaults to 0.
- In the **Minimum Ram** box, specify a minimum size required to boot image. If no input is provided, minimum is not considered and it defaults to 0.
- Click ☐ against **Public** to select it. This will make the image visible to all users.
- Click ☐ against **Protected** to select it. This makes the image as read-only.
- Click **Create Image**. A message is displayed on successful creation. The image displays in the table in the Images page.

To create QCOW2, do the following:

- Click **Create Image** to open a Create an Image dialog box.
- In the **Name** box, enter a name for the image.
- From the **Format** drop-down list, select the format as [QCOW2-QEMU Emulator](#).

- From the **Image Source** drop-down list, do either of the following:
 - Select Image location from the drop-down list.
The Image Location box is displayed.
 - In the Image Location box, enter the HTTP URL to load the QCOW2 image from.
- OR
 - Select Image File from the drop-down-list.
The Choose File option is displayed.
 - Click Choose File to browse the QCOW2 image.
 - Select the QCOW2-QEMU Image to upload.
- The **CPU Architecture** drop-down list displays *x86_64* by default.
The moonshot hardware supports the above specification.
- In the **Minimum Disk** box, specify a minimum size required to boot image.
If no input is provided, minimum is not considered and it defaults to 0.
- In the **Minimum Ram** box, specify a minimum size required to boot image.
If no input is provided, minimum is not considered and it defaults to 0.
- Click ☐ against **Public** to select it.
This will make the image visible to all users.
- Click ☐ against **Protected** to select it.
This makes the image as read-only.
- From the **Kernel Image** drop-down list, select the corresponding kernel image.
- From the **RAM Disk Image** drop-down list, select the corresponding RAM disk image.
- Click **Create Image**.
A message is displayed on successful creation. The image displays in the table in the Images page.

Note: Do not navigate from the page while the image is being created.


Edit a Region Image

To edit an image, do the following:

1. Click **More** drop-down list displayed against the image that you wish to edit and select **Edit Image**.
The Edit Image dialog box is displayed.
2. Make the required changes.
3. Click **Update Image** to update the changes.

Delete a Region Image


- Click **More** drop-down list displayed against the image that you wish to delete and select **Delete Image**.
A message is displayed to ask your confirmation. The image is deleted once your confirmation is received.

- To delete a group of images, click  to select the image/images that you want to delete and click **Delete Images**.
The images are deleted and removed from the image list.

Launch a Region Image

To launch an image in the Administration Dashboard, do the following:

- Click the **Region** Tab to select it.
- From the options in the left panel, select **Images** to display the Images page.
- Select **Launch** against the image listed in the table.
A Launch Instance dialog box displays with four tabs: **Details** Tab, **Access & Security** Tab, **Networking** Tab and **Post-Creation** Tab. By default, Details is the active tab.

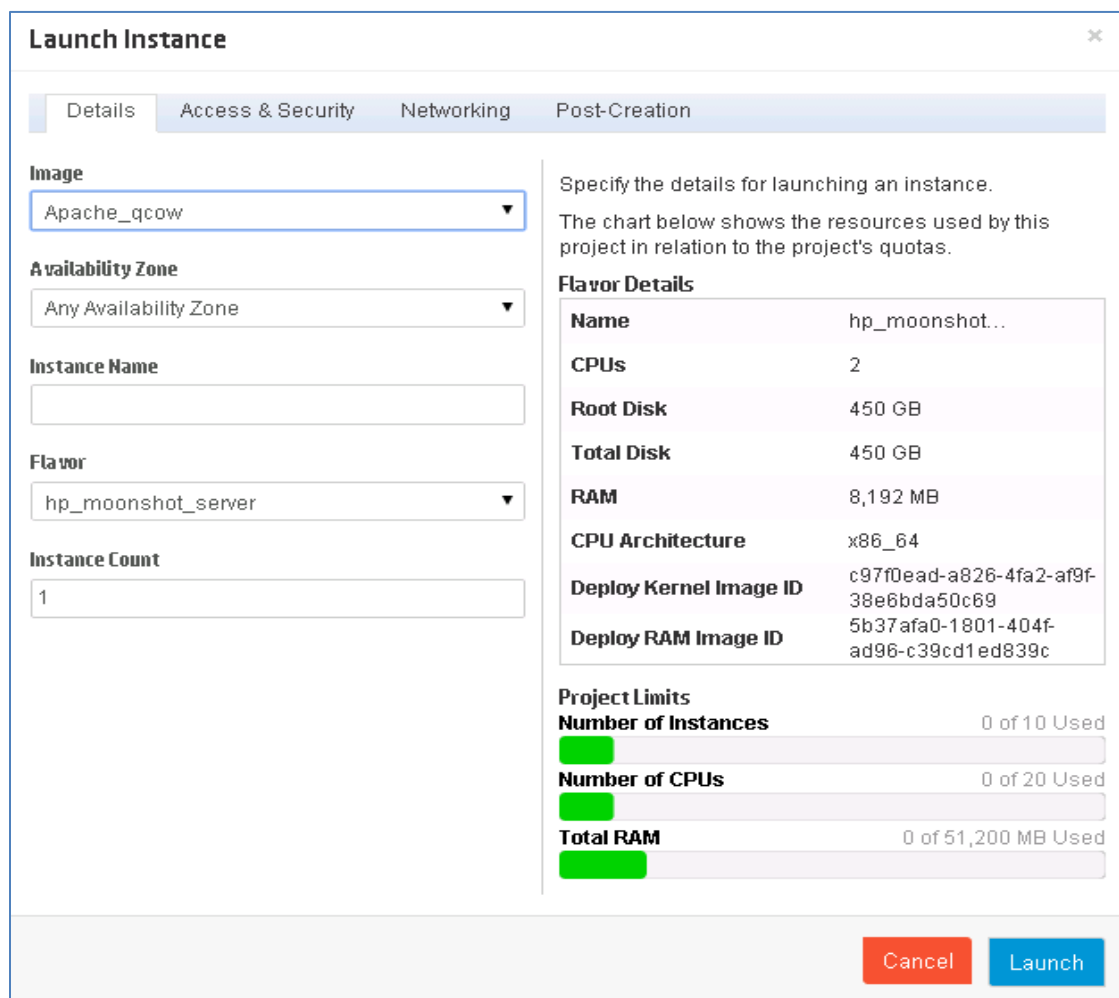

Launch Instance

Details | Access & Security | Networking | Post-Creation

Image
Apache_qcow

Availability Zone
Any Availability Zone

Instance Name

Flavor
hp_moonshot_server

Instance Count
1

Specify the details for launching an instance.
The chart below shows the resources used by this project in relation to the project's quotas.

Flavor Details

Name	hp_moonshot...
CPUs	2
Root Disk	450 GB
Total Disk	450 GB
RAM	8,192 MB
CPU Architecture	x86_64
Deploy Kernel Image ID	c97f0ead-a826-4fa2-af9f-38e6bda50c69
Deploy RAM Image ID	5b37afa0-1801-404f-ad96-c39cd1ed839c

Project Limits

Number of Instances	0 of 10 Used
Number of CPUs	0 of 20 Used
Total RAM	0 of 51,200 MB Used

Cancel Launch

Figure 34: Launch Instance in Region Tab

- On the **Details** Tab, do the following:
 - From the **Instance Source** drop-down list, select the image.
 - From the **Image** drop-down list, select the value.
 - In the **Instance Name** box, enter a name for the instance.

- From the **Flavor** drop-down list, select the Baremetal flavor. This is default flavor that is created.
 - In the **Instance Count** box, enter **1** or more than 1.
- The flavor details are displayed on the right side of the dialog box.
5. On the **Access & Security** Tab, do the following:
 - From the **Keypair** drop-down list, select value from the list.
 6. On the **Networking** Tab, no networks are listed in the **Selected Networks** section.
 - Select the private network from the **Available networks** section.
 7. Click **Launch**.
The image is displayed in the table on the Image page with **Active** status.

Manage Networks

Networks option displays the networks available in the region. You can view and edit networks.

To view the list of available networks, do the following:

1. Click the **Region** Tab to select it.
2. From the options in the left panel, select **Networks** to display a page with the list of networks.

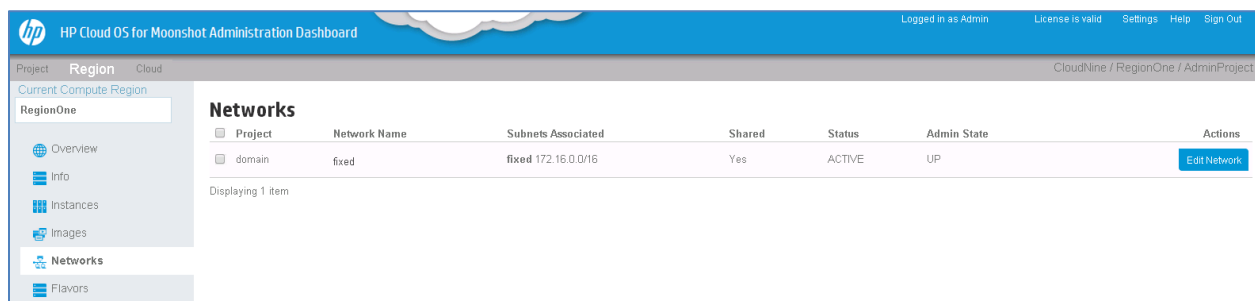


Figure 35: Region Networks Page

3. Click the network name to display the specifications and properties of the network.
4. (Optional) In the network details page, click the subnet name to view the complete subnet details.
5. (Optional) In the network details page, click the port name to view the complete port details.
 - To edit the port details, click **Edit Port** against the port name to display the Edit Port dialog box.
 - Make the required changes.
 - Click **Save Changes** to save the changes.

Edit a Network

Use this option to edit the name of your network.

To edit a network, do the following:

1. Click the **Region** Tab to select it.
2. From the options in the left panel, select **Networks** to display Networks page with a list of networks.

3. Click **Edit Network** against the network that you want to edit.
Edit Network dialog box is displayed.
4. Make the required changes.
5. Click **Save Changes** to save the changes.

Note: You must be logged in as a Cloud Administrator to edit the network. Although the other options are editable, modifying any properties except the name of the network is not recommended.

Manage Flavors

A flavor describes the amount of memory, number of CPUs, and storage capacity of Baremetal instances. Only a Cloud Administrator can create and delete flavors.

To view the list of available flavors, do the following:

1. Click the **Region** Tab to select it.
2. From the options in the left panel, select **Flavors** to display a page with the list of flavors.

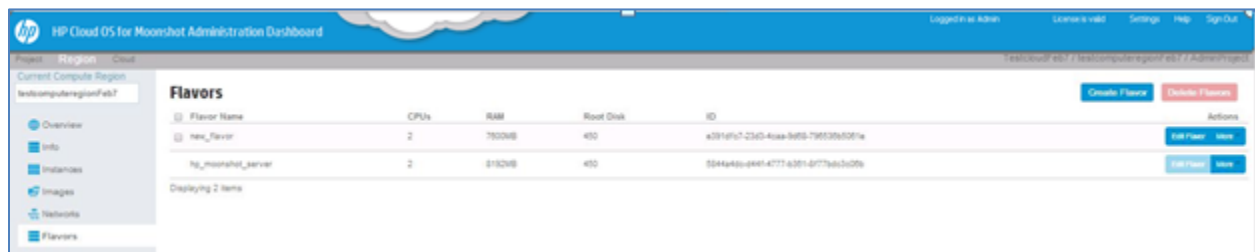



Figure 36: Region Flavors Page

Create a Flavor

Flavors are machine configurations that describe the amount of memory, number of CPUs, and storage capacity of Baremetal instances. The moment you register a chassis, a flavor is created by default. You can use the default flavor or create a flavor of your choice.

To create a flavor, do the following:

1. Click the **Region** Tab to select it.
2. From the options in the left panel, select **Flavors** to display the Flavors page.
3. Click **Create Flavor** to open a Create Flavor dialog box.

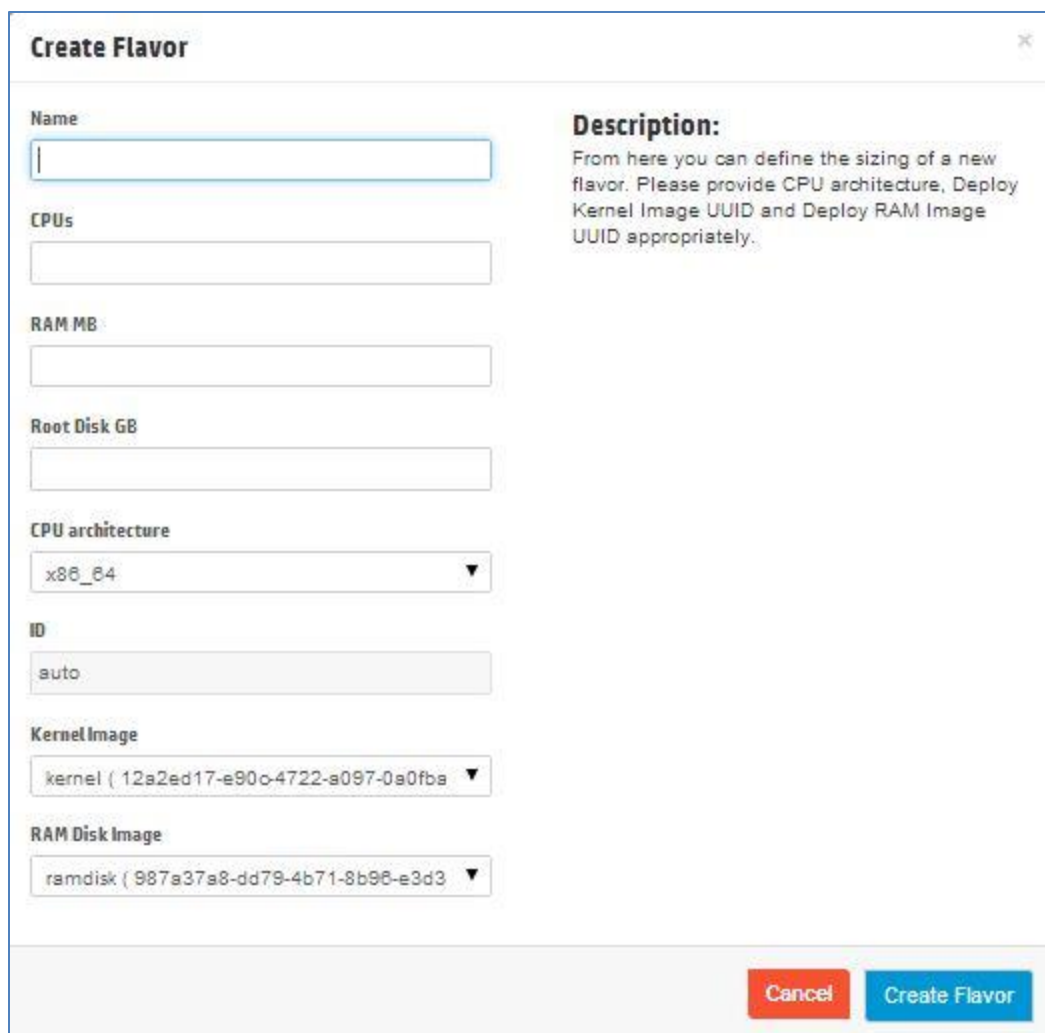

The 'Create Flavor' dialog box is a form for defining a new flavor. It includes a title bar with a close button. The form is divided into two main sections. The left section contains input fields for 'Name', 'CPUs', 'RAM MB', 'Root Disk GB', 'CPU architecture' (a dropdown menu), 'ID', 'Kernel Image' (a dropdown menu), and 'RAM Disk Image' (a dropdown menu). The right section, titled 'Description:', contains a text area with instructions: 'From here you can define the sizing of a new flavor. Please provide CPU architecture, Deploy Kernel Image UUID and Deploy RAM Image UUID appropriately.' At the bottom right, there are two buttons: 'Cancel' (red) and 'Create Flavor' (blue).

Figure 37: Create Flavor Dialog Box

4. In the **Name** box, enter the name that you want to assign to the Baremetal flavor.
5. In the **CPUs** box, enter the required number.
6. In the **RAM MB** box, specify the RAM corresponding to the cartridge.
7. In the **Root Disk GB** box, enter the required space.
8. From the **CPU Architecture** drop-down list, select the architecture.
9. From the **Kernel Image** drop-down list, select the PXE Kernel image.
10. From the **RAM Disk Image** drop-down list, select the PXE RAMdisk image.
11. Click **Create Flavor** to create a new the flavor.
A message is displayed on successful creation.

Note: A Baremetal flavor must have the following extra specifications to provision instance successfully.

- * CPU Architecture
- * Deploy Kernel Image
- * Deploy RAMDisk Image

Edit a Region Flavor

You cannot edit a system generated flavor. To edit a user created flavor, do the following:

1. Click the **Region** Tab to select it.
2. From the options in the left panel, select **Flavors** to display the Flavors page. The Flavors page displays with a list of flavors.
3. Click **Edit Flavor** against the flavor that you want to edit. The Edit Flavor dialog box is displayed.

Edit Flavor

Name
new_flavor

CPUs
2

RAM MB
7800

Root Disk GB
450

CPU architecture
x86_64

Kernel Image
Kernel_Feb7 (ae999d35-5838-4c59-9cb1-)

RAM Disk Image
RAMDiskFeb7 (76480470-df73-480a-9474-)

Description:
From here you can alter the sizing of the current flavor.
Note: this will not affect the resources allocated to any existing instances using this flavor.

Cancel Save

Figure 38: Edit Flavor Dialog Box

4. Make the required changes.
5. Click **Save** to save the details.

Delete a Region Flavor

Use this option to delete a region flavor. You cannot delete a system generated flavor. A flavor cannot be deleted if it is in use.

To delete a flavor, do the following:

1. Click **Region** Tab to select it.

- From the options in the left panel, select **Flavors** to display the Flavors page. The Flavors page displays with a list of flavors.
- Click **More** drop-down list against the flavor that you want to delete.
- Select **Delete**.
A confirmation box is displayed. The flavor is deleted after getting a confirmation from you.

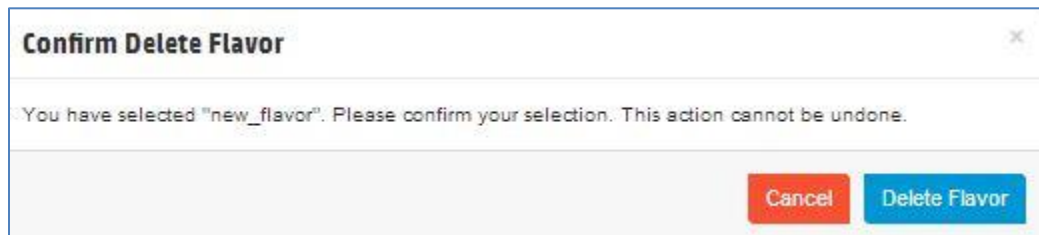


Figure 39: Delete Flavor Confirmation Box

View a Region Flavor Extra Specifications

This option allows you to view the extra specifications key-value pair for the selected flavor.

- Click **Region** Tab to select it.
- From the options in the left panel, select **Flavors** to display the Flavors page. The Flavors page displays with a list of flavors.
- Click **More** drop-down list against the flavor for which you want to view the Extra Specifications and click **View Extra Specs**. The Extra Specs page is displayed with the details of the extra specifications.

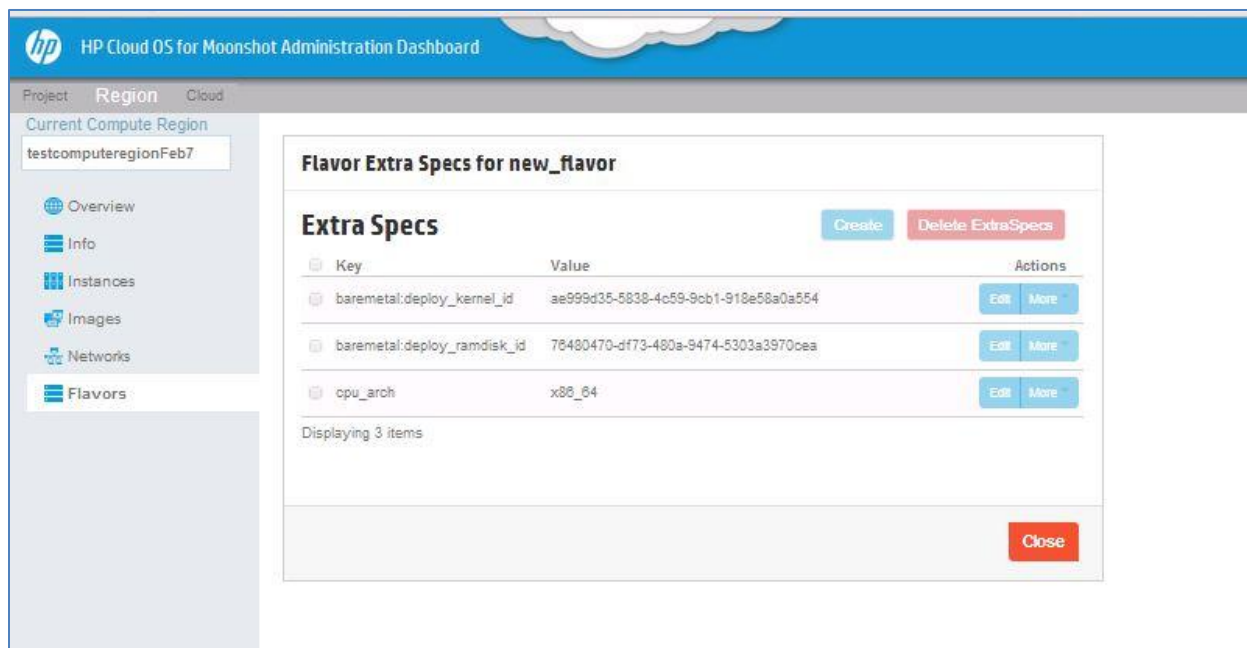


Figure 40: View Extra Specs Dialog Box

- Click **Close** to cancel the dialog box.

Create a Region Flavor Extra Specifications

This option allows you to create an extra specifications key-value pair for the custom flavor. You cannot create extra specifications for default flavor.


1. In the Administration Dashboard, select the **Region** Tab. The tab displays with options in the left panel.
2. Select **Flavors** to display the Flavors window. The Flavors window displays with a list of flavors.
3. Click **More** drop-down list against the flavor for which you want to create that you want to edit and click **View Extra Specs**. The Extra Specs window is displayed with the different items.
4. Click **Create** to display Create Flavor Extra Spec dialog box.
5. In the **Key** box, enter the key, for example `baremetal:deploy_kernel_id`.
6. In the **Value** box, enter the value, for example, `c209db5f-2ee9-479d-ac2a-a9753725e555`.
7. Click Create to create the extra specifications.

Edit a Region Flavor Extra Specifications

 **Important:** Ensure that the following extra specifications for Baremetal are not deleted or wrongly edited:

- * CPU Architecture
- * Deploy Kernel Image
- * Deploy RAMDisk Image

This option allows you to edit extra specifications for the selected custom flavor. You cannot create extra specifications for default flavor.

1. In the Administration Dashboard, select the **Region** Tab.
The tab displays with options in the left panel.
2. Select **Flavors** to display the Flavors page.
The Flavors page displays with a table of flavors.
3. Click **More** drop-down list against the flavor that you want to edit and click **View Extra Specs**.
The Extra Specs page is displayed with the different items.
4. Click  against the item which you want to edit.
5. Click **Edit** to display the Edit Flavor Extra Spec dialog box.
6. Make the required changes in the Key or the value.
7. (Optional) Click **Cancel** to cancel the process and return to the View Extra Specs window.
8. Click **Save** to save the details.
9. Click **Close** to close the window.

Delete a Region Flavor Extra Specifications

 **Important:** Ensure that the following extra specifications for Baremetal are not deleted or wrongly edited:

- * CPU Architecture
- * Deploy Kernel Image
- * Deploy RAMDisk Image

This option allows you to delete extra specifications for the selected custom flavor. You cannot create extra specifications for default flavor.

1. In the Administration Dashboard, select the **Region** Tab.
The tab displays with options in the left panel.
2. Select **Flavors** to display the Flavors page.
The Flavors window displays with a table of flavors.
3. Click **More** drop-down list against the flavor that you want to edit and click **View Extra Specs**.
The Extra Specs window is displayed with the different items.

Click **More** drop-down list against the flavor for which you want to delete extra specifications and click **View Extra Specs**. The extra specification is deleted after receiving a confirmation from you.

Working with Project Tab

The Project Tab displays all the options in the left panel for the all users. The users can perform project specific tasks related to the selected project.

- Login to the HP Cloud OS for Moonshot Administration Dashboard with your credentials.
The Administration Dashboard is displayed with a menu bar at the top displaying three tabs: **Project**, **Region** and **Cloud**.
- Click **Project** Tab to activate it.
The screen is displayed with the options in the left panel.

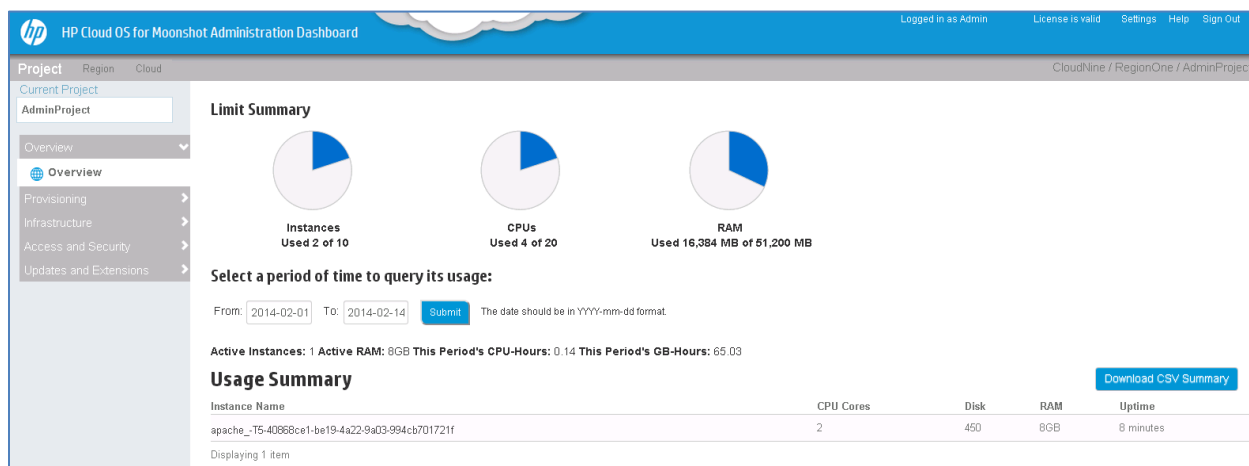


Figure 41: Project Tab

Project Overview

To view the details of a project, do the following:

1. Click the **Project** Tab to select it.
2. From the options in the left panel, select **Overview** to display a page with project details.
By default, Project Usage Summary for the current month is displayed.

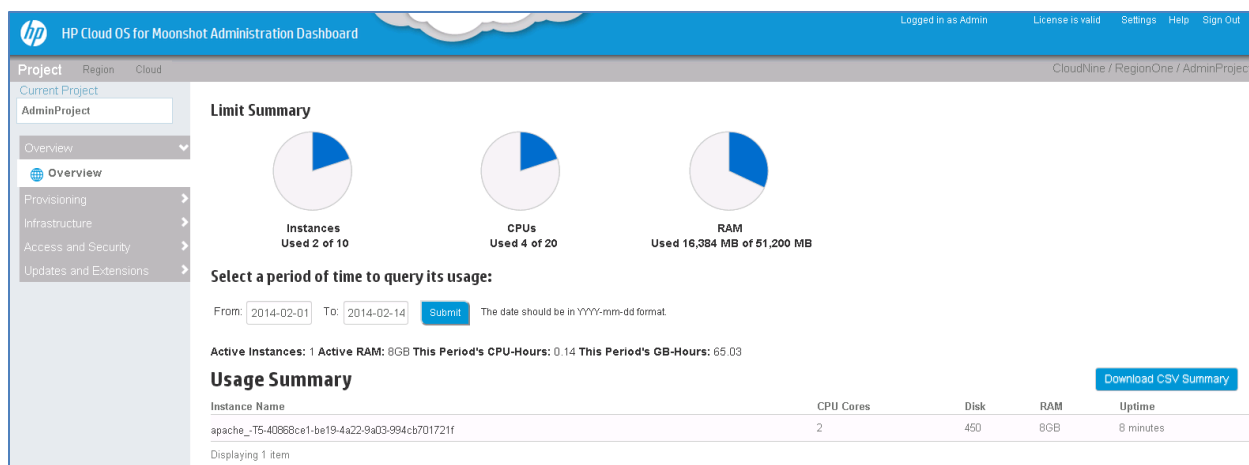


Figure 42: Overview Page

- To view the details of a different month, in the **Select a period of time to query its usage** section, do the following:
 - In the **From** box, click to select the start date.
 - In the **To** box, click to select the end date.
 - Click **Submit**.
The usage summary of the selected period is displayed.
- Click **Download CSV Summary** to view a text file in Microsoft Excel with the details of the usage summary.

Manage Provisioning

The Provisioning option in the left panel of the Project Tab helps you to perform the following tasks:

- [Manage Workloads](#)
- [Manage Running Topologies](#)
- [Manage Deployment Profiles](#)
- [Manage Topology Design](#)
- [Manage Resource Pools](#)

Workloads

Workloads functionality in HP Cloud OS for Moonshot aims to facilitate the end user in deployment of a composite service comprising of different applications and hence different workloads in an easy to use manner.

The end user can browse through HP's catalog listing of pre-tested and pre-crafted workloads, download and publish them to the cloud and launch them to get a running application infrastructure without worrying about the intricate and in-depth understanding of technical details like topology, OpenStack nova flavor, Moonshot Cartridge specification etc. The end user can also define personalized workloads by following a simplified folder structure and can import the same to the cloud.

Understanding Workload Entities

Some of the important entities that help to make up Workloads based provisioning are:



Workloads Service

Facilitates automated deployment of a *workload based service realization*.



Workload

A composite entity comprising Application Image, Infrastructure Design, Infrastructure hints for specific resource requirement.



Workload Topology

An infrastructure blueprint defining infrastructure topology.



Deployment Profile

A cloud specific workload binding document which references cloud resources and can be provisioned (or deployed) as is to create a deployed workload. It references specific cloud resources.



Deployed Workload

A realized service after the deployment profile has been successfully launched by the end user

Relationship between Workload Entities

A workload entity is an abstract representation of a service which maps to a given infrastructure blue-print (technically termed as topology). The same workload can be realized by different cloud resources present in the system which can be uniquely represented as deployment profiles.

For Example: Let us assume that a single server group based workload requirement is, to serve static web hosting. As we know that both Scott_1 and Borman can serve static web hosting, it is thus possible to have two different deployment profiles; where one maps to nova flavor compute resource of Borman while the other maps to Scott_1. Also, a given deployment profile can be launched multiple times for same or different user. Considering this, there is an inherent relationship amongst workloads, topology, deployment profiles and deployed workloads which has been illustrated below:

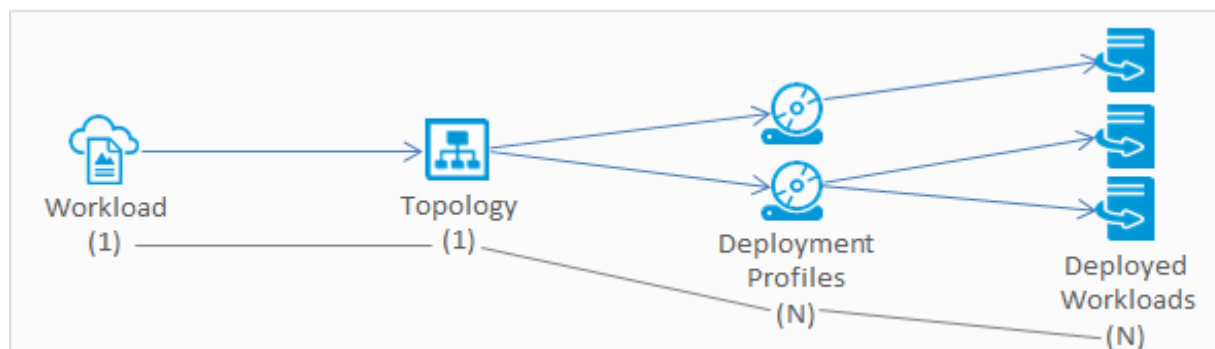


Figure 43: Relationship between Workload Entities

Cloud Personalities

Lifecycle of a Workload is a multi-phase activity and needs different actors to collaborate together to make a simplified realization of a given application infrastructure by the end user. The list below elaborates on the actors along with their roles and responsibilities in entire workload lifecycle.



Content Creator

Responsibility: to create pre-tested workload



Content Publisher

Responsibility: Publishes content on a centralized shared portal maintained by HP



Cloud Administrator

Responsibility: Imports content from different sources using CODN. Currently, CODN allows importing of workload content from local folder (like Glance allows importing images) as well as from remote portal maintained by HP. Cloud Administrator also creates deployment profile(s) (more than one in most of cases) as per resources available in the cloud



Cloud User

Responsibility: Provisions a deployable profile. Cloud User can also create a deployment profile

All the above players contribute towards realizing the lifecycle of a Workload and play relevant role in each stage of its workflow.

Understanding Workload Content

Each workload is represented as a CSU file, which is inherently a data container to store various elements of workload (like images, topology design etc.) in compressed format as shown in the diagram below:

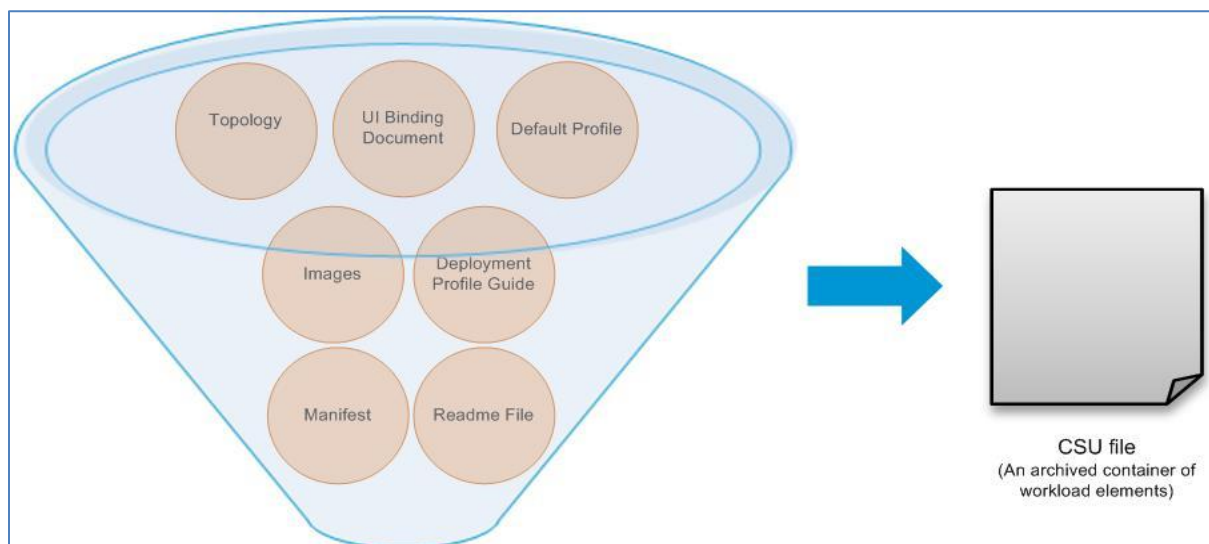


Figure 44: Workload Content

HP Cloud OS for Moonshot provides the functionality to import the CSU file and create a workload (a cloud entity) which can be managed by the Administration Dashboard. This section explains in detail the following:

1. Elements of a Workload
2. Content Structure of CSU File
3. Manifest file

Entire section illustrates the content using a sample Apache workload which allows you to deploy single Apache server on a Moonshot cartridge.

Elements of Workload

A workload typically comprises of images, topology, manifest file etc. Every workload must have the following set of components as described in the table below:

Category	Type	Description
Infrastructure Documents	Topology	Defines the blue print of the infrastructure. Every workload has one topology document.
	UI Binding	Contains graphical aspect of infrastructure design and is needed by CCUE designer to open the topology in Administrator Dashboard. Every workload must have UI binding document corresponding to the topology document.
	Default profile	Defines the structure of deployment profiles for a given topology document. Every workload must have a default profile corresponding to topology document.
Application Software specification	Deployment Profile Guide	Defines the software aspect of the workload. It primarily contains infrastructure hints in cloud agnostic format so that appropriate cloud resources can be discovered and can be referred in deployment profiles, which are used to deploy (often termed as launch) a given workload.
Images	OS image	Specifies OS image used in server provisioning. A workload can have number of OS images depending upon the server design mentioned in the topology.
	Kernel image	Every Baremetal OS image is associated with a kernel image which is used during PXE boot process.
	RAM disk image	Every Baremetal OS image is associated with a RAMdisk image which is used during PXE boot process.
CSU specification	Manifest	Specifies layout of workload and its components and their dependencies. It is used by CODN to import a given workload during the import process of the workload.
Help	Readme	Contains description of a workload.

► Content Structure of a CSU File

As mentioned above, a workload CSU file is an archived version of different content types in a compressed format. The entire content is organized in a folder structure. The below figure explains the layout of Apache workload:

```

C:\Jyoti\HP\Technical\Workshop\IaaS\workload\References\csu_files>tree /F ./hp-ms-apache-local-2014-02-06
Folder PATH listing for volume PC COE
Volume serial number is E2D3-1AC4
C:\JYOTI\HP\TECHNICAL\WORKSHOP\IAASC\WORKLOAD\REFERENCES\CSU_FILES\HP-MS-APACHE-LOCAL-2014-02-06
manifest
  readme.txt
component
  apache
    apache2.qcow2 ————— Refers to the Apache OS Image
  apache-aki
    apache2-vmlinuz ————— Kernel Image Required for PXE Booting
  apache-ari
    apache2-initrd ————— RAMDisk Image required for PXE booting
  default-profile
    hp-ms-apache-default-profile-2014-01.xml ————— CCUE Designer Requirement
    hp-ms-lamp-default-profile-2014-01.xml
  deployment-profile-guide
    hp-ms-apache-deployment-profile-guide-2014-01-16.json ————— Defines the workload. It is a folder that contains the specifications of
                                                                    images, topology and software of a workload. For example: need
                                                                    a Moonshot cartridge which is suitable for static web hosting
  topology
    hp-ms-apache-topology-2014-01.xml ————— Refers to the Infrastructure Topology Document
    hp-ms-lamp-topology-2014-01.xml
  topology-ui-binding
    hp-ms-apache-topology-ui-binding-2014-01.xml
    hp-ms-lamp-topology-ui-binding-2014-01.xml ————— Refers to CCUE Designer Document
C:\Jyoti\HP\Technical\Workshop\IaaS\workload\References\csu_files>

```

Figure 45: File Structure of Apache Workload

► Understanding the Manifest File

A manifest file is a JSON file which contains specification of elements of a workload. The below picture explains the layout of Manifest file Apache workload:


```

1 {
2   "component": [
3     {
4       "created_by": "HP",
5       "dependencies": [],
6       "install": {
7         "requires_admin_permissions": "true",
8         "requires_reboot": "true"
9       },
10      "name": "apache-aki",
11      "image_name": "hp-ms-apache2-vmlinuz",
12      "container_format": "aki",
13      "check_for_duplicates": false,
14      "disk_format": "aki",
15      "file_name": "apache2-vmlinuz",
16      "publication_date": "Sat, Dec 7, 2013 9:00:13 AM",
17      "type": "image",
18      "version": "1.1.2"
19    },
20    {
21      "created_by": "HP",
22      "dependencies": [],
23      "install": {
24        "requires_admin_permissions": "true",
25        "requires_reboot": "true"
26      },
27      "name": "apache-axi",
28      "image_name": "hp-ms-apache2-initrd",
29      "container_format": "axi",
30      "check_for_duplicates": false,
31      "disk_format": "axi",
32      "file_name": "apache2-initrd",
33      "publication_date": "Sat, Dec 7, 2013 9:00:13 AM",
34      "type": "image",
35      "version": "1.1.2"
36    },
37    {
38      "created_by": "HP",
39      "dependencies": [],
40      "install": {
41        "requires_admin_permissions": "true",
42        "requires_reboot": "true"
43      },
44      "name": "apache",
45      "image_name": "hp-ms-apache2",
46      "container_format": "bare",
47      "disk_format": "qcow2",
48      "file_name": "apache2.qcow2",
49      "check_for_duplicates": false,
50      "publication_date": "Sat, Dec 7, 2013 9:00:13 AM",
51      "type": "image",
52      "version": "1.1.2",
53      "properties": {
54        "kernel_id": "${apache-aki.id}",
55        "ramdisk_id": "${apache-axi.id}"
56      }
57    },
58    {
59      "created_by": "HP",
60      "dependencies": [],
61      "install": {
62        "requires_admin_permissions": "true",
63        "requires_reboot": "false"
64      },
65      "name": "topology",
66      "template_name": "hp-ms-apache-topology-2014-01",
67      "template_type": "infrastructure_topology",
68      "check_for_duplicates": false,
69      "file_name": "hp-ms-apache-topology-2014-01.xml",
70      "publication_date": "Fri, Nov 8, 2013 9:00:13 AM",
71      "type": "template",
72      "version": "1.0.0",
73      "properties": {
74        "profile": "hp_cos_moonshot"
75      }
76    },
77    {
78      "created_by": "HP",
79      "dependencies": [],
80      "install": {
81        "requires_admin_permissions": "true",
82        "requires_reboot": "false"
83      }
84    }
85  ]
86 }

```

Image Name

This statement allows duplicate content to exist in the Cloud. In the present case, the duplicate content is the "Image".

Specifies where the content is stored. For example: Image-Glance; Tag-Graffiti; Template- Focus; Workload- Focus

Figure 46: Manifest File Image- Part 1


```

84     "name": "topology-ui-binding",
85     "template_name": "hp-ms-apache-topology-ui-binding-2014-01",
86     "template_type": "ui_binding",
87     "check_for_duplicates": false,
88     "template_reference_id": "${topology.id}",
89     "file_name": "hp-ms-apache-topology-ui-binding-2014-01.xml",
90     "publication_date": "Fri, Nov 8, 2013 9:00:13 AM",
91     "type": "template",
92     "version": "1.0.0",
93     "properties": {
94       "topology_reference": "${topology.id}",
95       "1_topology_version_reference": "1"
96     }
97   },
98   {
99     "created_by": "HP",
100    "dependencies": [],
101    "install": {
102      "requires_admin_permissions": "true",
103      "requires_reboot": "false"
104    },
105    "name": "default-profile",
106    "template_name": "Default Profile",
107    "template_type": "resource_binding",
108    "check_for_duplicates": false,
109    "template_reference_id": "${topology.id}",
110    "file_name": "hp-ms-apache-default-profile-2014-01.xml",
111    "publication_date": "Fri, Nov 8, 2013 9:00:13 AM",
112    "type": "template",
113    "version": "1.0.0",
114    "properties": {
115      "isValid": "true",
116      "published": "true",
117      "design_name": "hp-ms-apache-topology-2014-01",
118      "profile": "hp_cos_moonshot",
119      "profile_container": "false"
120    }
121  },
122  {
123    "created_by": "HP",
124    "dependencies": [],
125    "install": {
126      "requires_admin_permissions": "true",
127      "requires_reboot": "false"
128    },
129    "name": "deployment-profile-guide",
130    "workload_name": "hp-apache-2014-01",
131    "file_format": "json",
132    "file_name": "hp-ms-apache-deployment-profile-guide-2014-01-16.json",
133    "publication_date": "Fri, Nov 8, 2013 9:00:13 AM",
134    "template_type": "deployment_profile_guide",
135    "check_for_duplicates": false,
136    "type": "workload",
137    "version": "1.0.0",
138    "bindings": {
139      "topology_id": "${topology.id}",
140      "default_profile_id": "${default-profile.id}",
141      "apache_server_image_id": "${apache.id}"
142    },
143    "properties": {
144      "topology_reference": "${topology.id}",
145      "1_topology_version_reference": "1",
146      "origin": "codn:local"
147    }
148  },
149 ],
150 "details": {
151   "package": {
152     "name": "ISODocCombo",
153     "notes": {
154       "en_US": "Multi line notes<b>this is in bold</b>"
155     },
156     "priority": "normal",
157     "release_notes": "readme.txt",
158     "title": {
159       "en_US": "HP Cloud OS Distribution Network"
160     },
161     "version": "1.1.2"
162   }
163 },
164 "meta_file_version": "1.0"
165 }

```

Defines the name of the Workload that will appear in the Workload UI

Represents the content source. Currently, we are supporting CODN-Local and CODN-Remote

Figure 47: Manifest File Image- Part2

Understanding Workload Lifecycle

The following figure illustrates the lifecycle of workload entities and the workflow required when the content is being imported from remote folder using CODN:

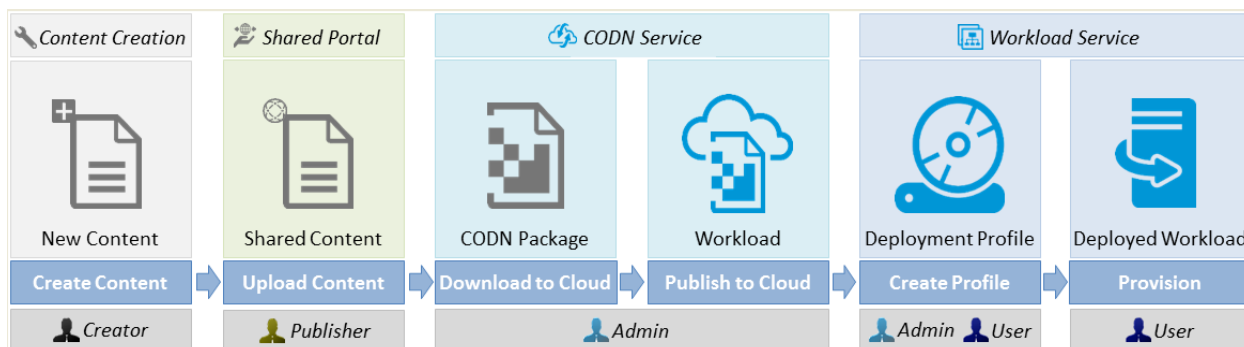


Figure 48: Workload Lifecycle

Each lifecycle phase depicted above, and the various tasks that its respective owner / cloud personality plays, is briefly explained in the following sections.

Note: The next section "Managing Workload Lifecycle using Administrator Dashboard" illustrates Workload workflow in detail.

Phase 1: Create Content

Content Creator is responsible for creating the deployable content that is uploaded to a shared portal. Content creation involves:

1. Workload Creation - packaging different aspects of a workload (as topology, images, infrastructure hints etc.)
2. Modifying the Manifest file

Phase 2: Upload Content

Content Publisher bundles the workload files as a .csu file and uploads it on a centralized portal. It is later published to HP Cloud's Public catalog after necessary approvals. It is then available for importing into the cloud environment using HP Cloud OS for Moonshot Administration Dashboard. Access to the catalog is based on username and password credentials.

Phase 3: Download / Import to Cloud

Workload Management is primarily the task of Cloud Administrator. While the Cloud Administrator downloads the workload content and publishes it for user consumption, he also creates / edits and launches deployment profiles. Other roles can only manipulate the workload content that has been downloaded as per the project requirements.

Phase 4: Publish to Cloud

Once the content is downloaded / imported, the Cloud Administrator publishes it to the Cloud thus enabling the Workloads to be used in different projects depending on the scope defined while publishing the content.

Phase 5: Create Profile

A workload can have multiple deployment profiles. When a workload is downloaded from CODN or is imported from local system, a deployment guide that is part of the setup is also downloaded to your cloud environment. This deployment guide helps in the creation of a deployment profile. Once the deployment profile is created, you can provision the workload.

Phase 6: Provision

Once the Workloads are deployed, Project Administrators / Users can use the workload content to create / edit deployment profile and launch profile as per project requirements.

Managing Workload Lifecycle using Administration Dashboard

Workload workflow using Administration Dashboard can be depicted in the following sequence of steps:

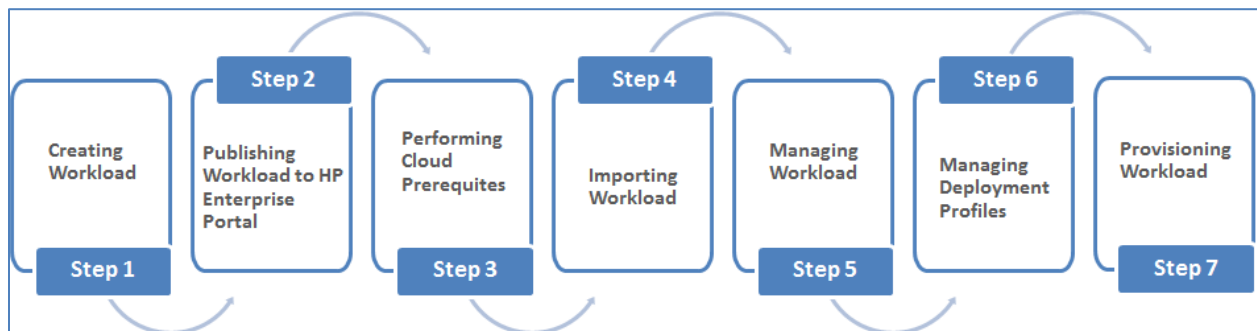


Figure 49: Workload Lifecycle using Administration Dashboard

Each step is explained in detail in the following sections.

► Create Workload

Creation of workload is a manual process. This necessitates the need of assembling the following elements as per the folder structure explained in the [Understanding the Workload](#) section and creating an archive file with a .csu extension:

1. Infrastructures documents
 - a. Topology
 - b. UI binding document
 - c. Default profile
2. Deployment Profile Guide
3. Images
4. CSU file

Currently, you can use CCUE designer to generate infrastructure documents and export its content as an XML file. CSU and Deployment Profile Guide can be generated using normal text editor. Content of the deployment profile needs to be customized as per desired topology.

```

1 {
2   "deployment_profile_guide": {
3     "target_template_type": "urn:x-hp:software:2012:eve:binding",
4     "template_ref": "${workload.topology_id}",
5     "default_deployment_profile_ref": "${workload.default_profile_id}",
6     "template_version": "1",
7     "cloud_profile": "hp_cos_moonshot",
8     "binding": [
9       {
10        "id": "ServerGroup0001",
11        "min_instances": 1,
12        "max_instances": 1,
13        "image_id": "${workload.apache_server_image_id}",
14        "flavor_id": {
15          "requirements": [
16            {
17              "capability_type_namespace": "urn:x-hp:2014-1:cloudos:types:capabilities:moonshot",
18              "capability_type_name": "static_web",
19              "property_criteria": {}
20            }
21          ]
22        }
23      }
24    ]
25  }
26 }
27

```

Defines binding hint for each server group specified in topology

Refer image you want to install for given server group

Specify server capability you need. Please see Appendix to determine server capability supported in current HP Moonshot Cloud OS release.

Figure 50: Deployment Profile Guide

► Publish Workload to HP Cloud OS Enterprise Portal

This process involves uploading content to HP Cloud OS Enterprise portal and initialization of the HP content approval process. Once content is approved by the appropriate authorities, it is published to HP Cloud Public catalog. The Cloud Administrator can now import, download and publish the workload in the Cloud environment using the Administration Dashboard. Refer to [Updates and Extensions](#) section for details.

▶ Perform Cloud Prerequisites

Cloud Administrator has to ensure the following prerequisites before provisioning any workload.

1. Publish Graffiti factory data
2. Automated creation of nova flavors

■ Graffiti Factory Data

Cloud Administrator must publish graffiti factory data before importing any workload in the Cloud. This can be done either by using CODN to import graffiti content from local folder or HP CloudOS Enterprise portal. Refer to the section on [Importing Workload](#) to initialize your cloud with the graffiti factory data.

One can validate if the content from CODN portal or local import is being downloaded or not. To validate the content download, do the following:

1. On the Administration Dashboard, click **Cloud** Tab to select it.
The Cloud tab is activated and the options are displayed in the left panel. By default, all the services are displayed in the right pane.
2. Click **Rest API** displayed against Graffiti to display a Graffiti Service Details page.

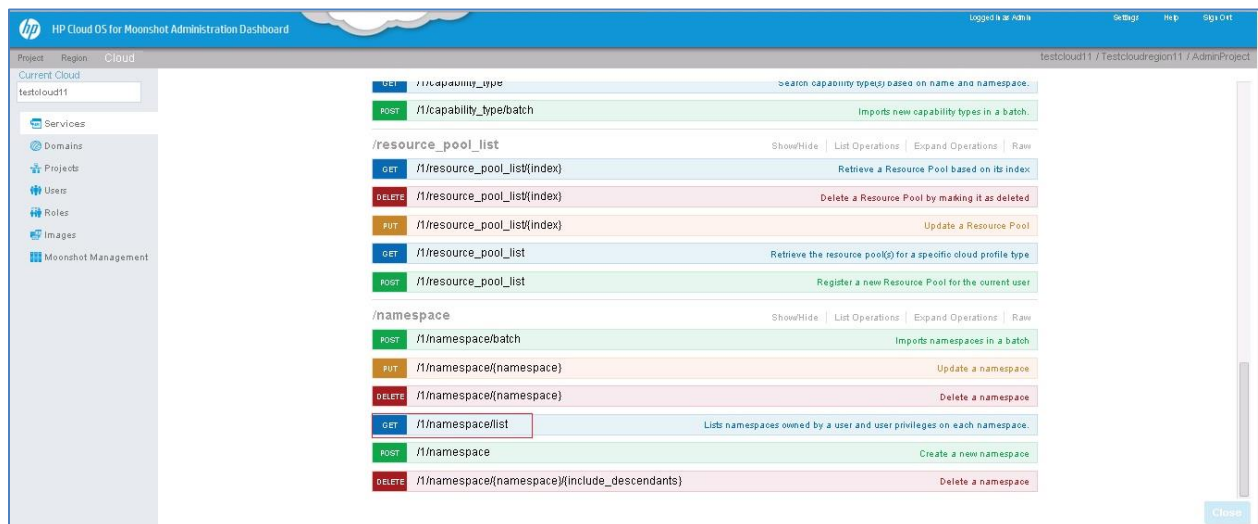


Figure 51: Graffiti Services Screen

3. Go to **namespace** section and click **/1/namespace/list** to expand it.
4. Search for the **URN:X-HP:2014-1:CLOUDOS:TYPES:CAPABILITIES:MOONSHOT** in the list of Moonshot namespace.

OR

Go to Reference UI and replace the token value with the Authentication token.
You can access your Authentication Token from Project->Access and Security->Authentication Token

■ Automated Creation of Nova Flavors

Cloud discovers the cartridges and creates flavors automatically. There is a polling cycle of five minutes to check for new registered cartridges for flavor creation. To validate that the flavor associated to content has been automatically created, do the following:

1. On the **Administration Dashboard**, click **Region** Tab to select it.
The Region tab is activated and the options are displayed in the left panel.

2. Select **Flavors** to display the Flavors page.
The page displays with the list of flavors.
3. Click **More** against the flavor for which you want to view Extra Specs.
4. Click **View Extra Specs** to view the extra specifications of the flavor.

► Populating Cloud with Workload

Cloud Administrator can populate the Cloud with workload by either importing it using local folder (if the .csu file corresponding to workload is available) or by using the remote HP Cloud OS Enterprise portal.

Note: Cloud Administrator should have the necessary permissions to access the HP Cloud OS Enterprise portal.

Populating cloud with workload involves following phases:

1. Import using local folder
and/or
2. Login to CODN remote portal
3. Download
4. Publish

Once you have imported the workload or you have logged in to the remote folder, content is available for you to publish it to your local cloud.

■ Import Using Local Folder

You can import a workload from your local folder. Once the import process is successful, the document displays in the Updates and Extensions page. To import an update that is stored on your local system, do the following:

1. On the Administration Dashboard, click **Project** Tab to select it.
The Project tab is activated and the options are displayed in the left panel.
2. From the options in the left panel, click **Updates and Extensions** and then select **Updates and Extensions** to display the Updates and Extensions page with the list of updates.
3. Click **Import** displayed on the top right corner of the page.
An Import dialog box is displayed.

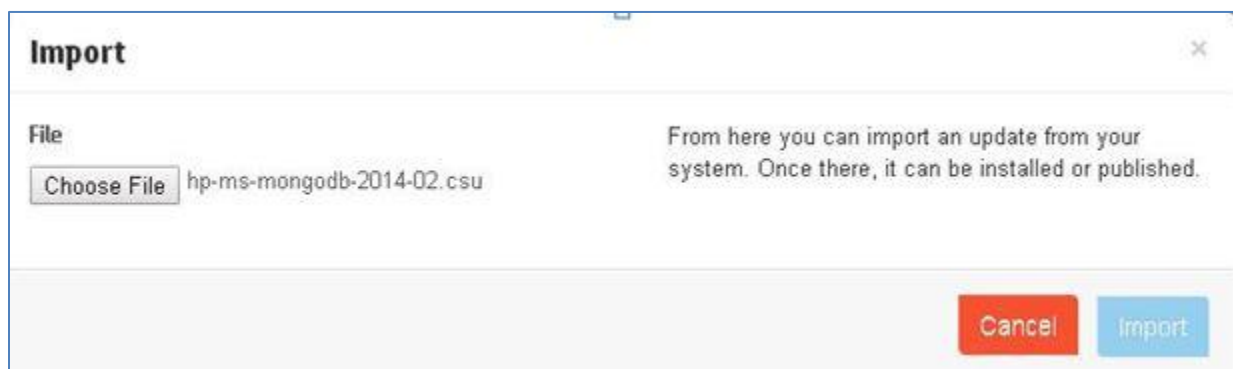


Figure 52: Import Dialog Box

4. Click **Choose File** to display a dialog box to browse and select the file. The file displays in the Import dialog box.

5. Click **Import**. The file is imported to your local cloud and displayed in the Updates and Extensions page.

■ Login to CODN Remote Portal

To import an update from CODN remote portal, do the following:

1. On the Administration Dashboard, click **Project** Tab to select it.
2. The Project Tab is activated and the options are displayed in the left panel.
3. From the options in the left panel, click **Updates and Extensions** and then select **Updates and Extensions** to display the Updates and Extensions page with the list of updates.
4. Click **Configure** displayed at the top right corner of the page to display the Configure dialog box.
5. Enter your credentials.
6. Click **OK** to save the details. The updates are displayed in the Updates and Extensions page.

■ Download

To download the Workload content that has been imported, do the following:

1. On the Administration Dashboard, click **Project** Tab to select it.
The Project tab is activated and the options are displayed in the left panel.
2. From the options in the left panel, click **Updates and Extensions** and then select **Updates and Extensions** to display the Updates and Extensions page with the list of updates.
3. Click **Download** against the workload that you want to download.
4. The workload is downloaded to your local system in the form of a .csu file which is a zip file and the **Publish** option is displayed.

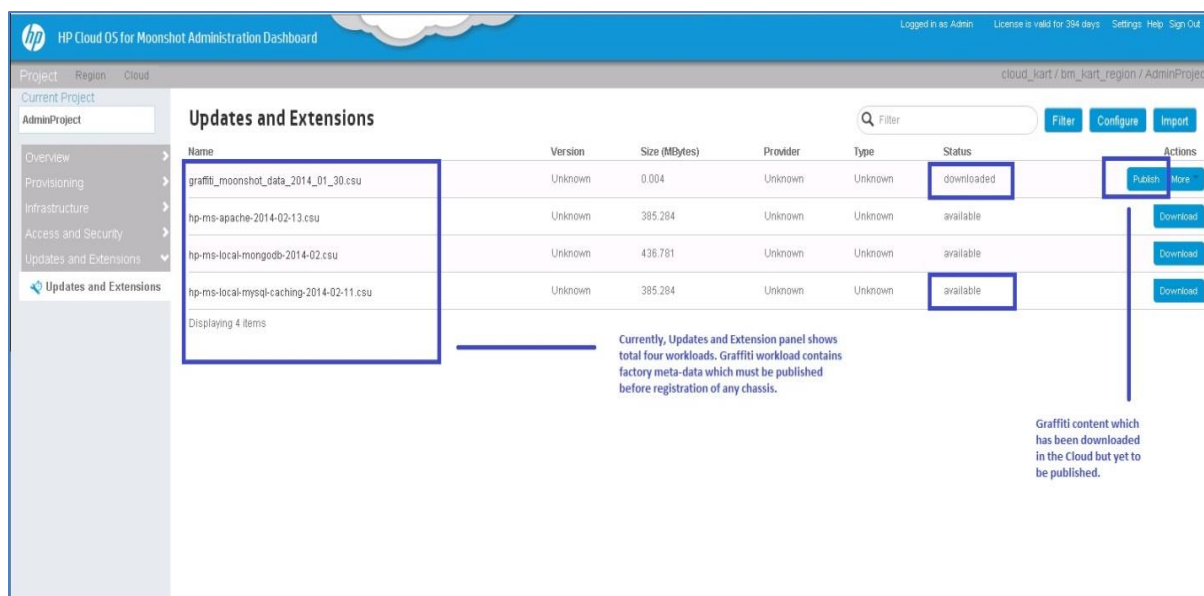


Figure 53: Updates and Extensions Panel with four Workloads

The Updates and Extensions panel in the above screenshot displays four workloads. In the screenshot, the graffiti_moonshot_data_2014_01_30.csu content contains factory meta-data that needs to be published before registration of any chassis.

■ Publish

Once the content is downloaded, you can publish it using the Publish option. The Publish option unzips the .csu file and stores it in the relevant repositories. This enables the Workloads to be used in different projects depending on the scope defined while publishing the content.

Do the following:

1. In the **Updates and Extensions** page, click **Publish** against the document to publish. Publish dialog box is displayed. The Update Name and Update Version are prepopulated.

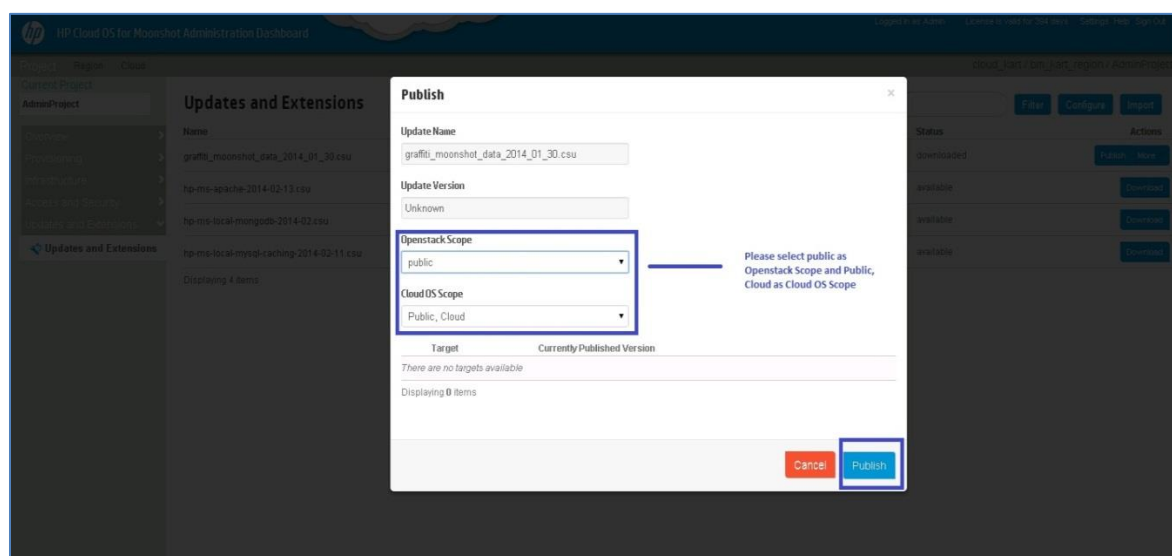


Figure 54: Publish Dialog Box

2. From the **Openstack Scope** drop-down list, select the *Public*.
It displays the following options:
 - Private: This means that the update is private to this project.
 - Public: This means that the update is available to others outside the project.
3. From the **Cloud OS Scope** drop-down list, select *Public, Cloud*.
It displays the following four options:

Scope	Description
Private, Project	Allows you access while working in this project.
Private, Cloud	Allows you access while working in any project.
Public, Project	Allows access to you and other project members.
Public, Cloud	This document can be viewed by anyone in the cloud in any project.

4. Click **Publish** to start the installation process.
A success message is displayed. Once the installation completes, the workload will display in the Workloads page.
5. (Optional) Click **View Progress** to view the installation progress.

Managing Workload

Once the Workload content is downloaded, it is displayed in the Workloads page. The Workloads page displays the Workload Dashboard with the details of the Workload content. The Cloud Administrator and Project Administrator can use the Workloads Page to view the workloads and create deployment profiles.

To view the Workload Dashboard, do the following:

1. On the Administration Dashboard, click **Project** Tab to select it. The Project tab is activated and the options are displayed in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the left panel, click **Provisioning** and then select **Workloads**. The Workloads page is displayed.

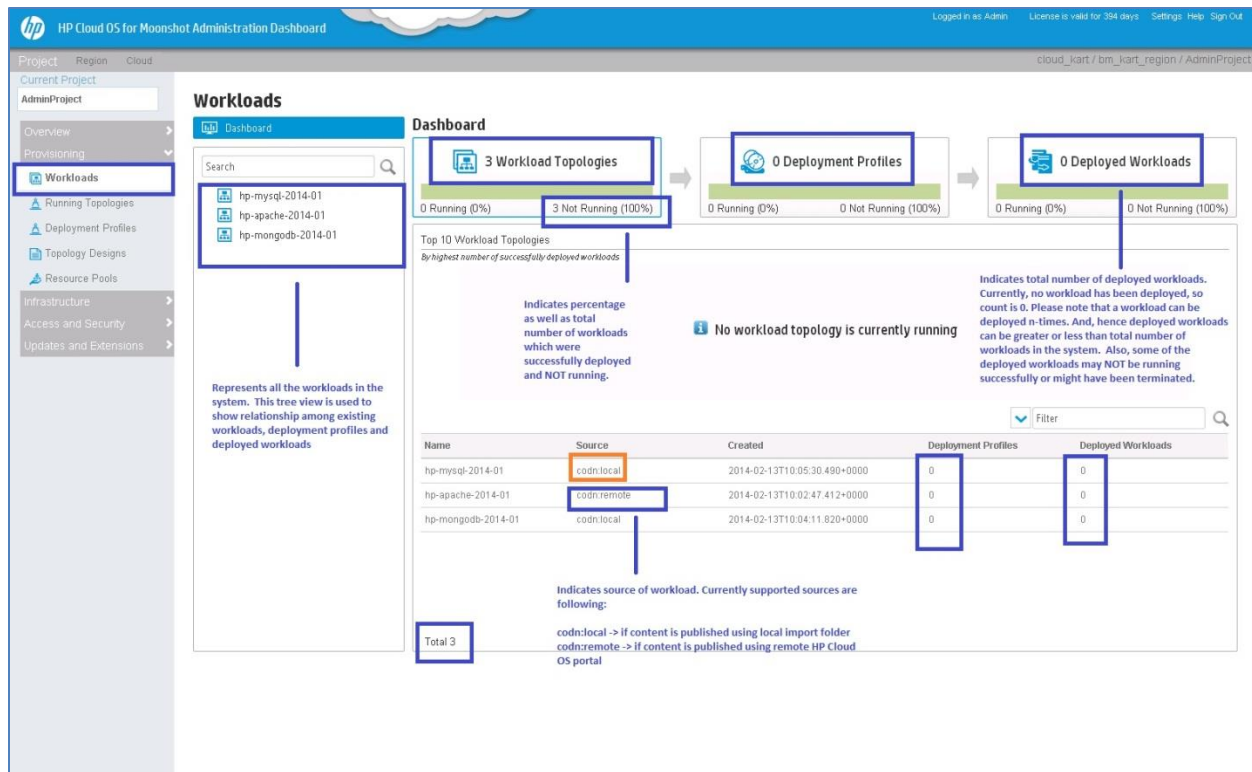


Figure 55: Workloads Dashboard

The Workloads Dashboard displays the details of the total workload topologies, the corresponding deployment profiles and the deployed workloads. The total workloads are the workloads that are downloaded using the Updates and Extensions option or are present on your local system.


The Dashboard page is divided into two views: **Tree View** in the left and **Details View** in the right.

- **Tree View** displays all the workloads in the system. It also represents the relationship between existing workloads, deployment profiles and deployed workloads.
- **Details View** is further divided into three sections:
 - The top section displays the total number of **Workload Topologies**, **Deployment Profiles**, and **Deployed Workloads**. It also displays the progress in terms of running and not running Workload Topologies, Deployed Profiles and Workloads.
 - The above information is also represented in a tabular view in the bottom section of the panel. The table also displays the source of the workload. Currently, supported sources are-
 - CODN-Local**- If the content is being published using local import folder
 - CODN-Remote**- If the content is being published using remote HP Cloud OS Portal.
 - The middle section of the right panel displays a graphical representation of the top ten workload topologies based on the highest number of successfully deployed workloads.
- Click the Workload in the left panel or click Name displayed in the right panel table. The details of the workload are displayed.

Note: This is an optional step at the initial stage as no data is displayed, once you create the profiles, they will be visible in the list.

[Search a workload](#)

To search for a particular workload, in the left panel, do the following:

- In the Search box, enter the first few characters of the workload name and click . The workloads matching the search criteria are displayed.

To search for details of a particular workload, do the following:


- In the right panel, above the table in the search box, enter the first few characters of the workload name. The search results are displayed.

Managing Deployment Profiles

A workload can have multiple deployment profiles. The deployment profile can be created by Cloud Administrator as well as Project Administrator.

Once the deployment profile is created, you can provision the workload. To create a deployment profile from an existing workload, do the following:

1. In the Administration Dashboard, select the **Project** Tab. The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the left panel, click **Provisioning** and then select **Workloads**. The Workloads page is displayed.
4. Click the Workload in the Tree View or click Name displayed in the right panel table.
5. The Deployment Profile Details page of the selected workload is displayed. It has two tabs-**Overview** and **Topology**. By default, Overview is the active tab and displays the profile details of the selected workload. Topology Tab gives a graphical representation of the workload topology.

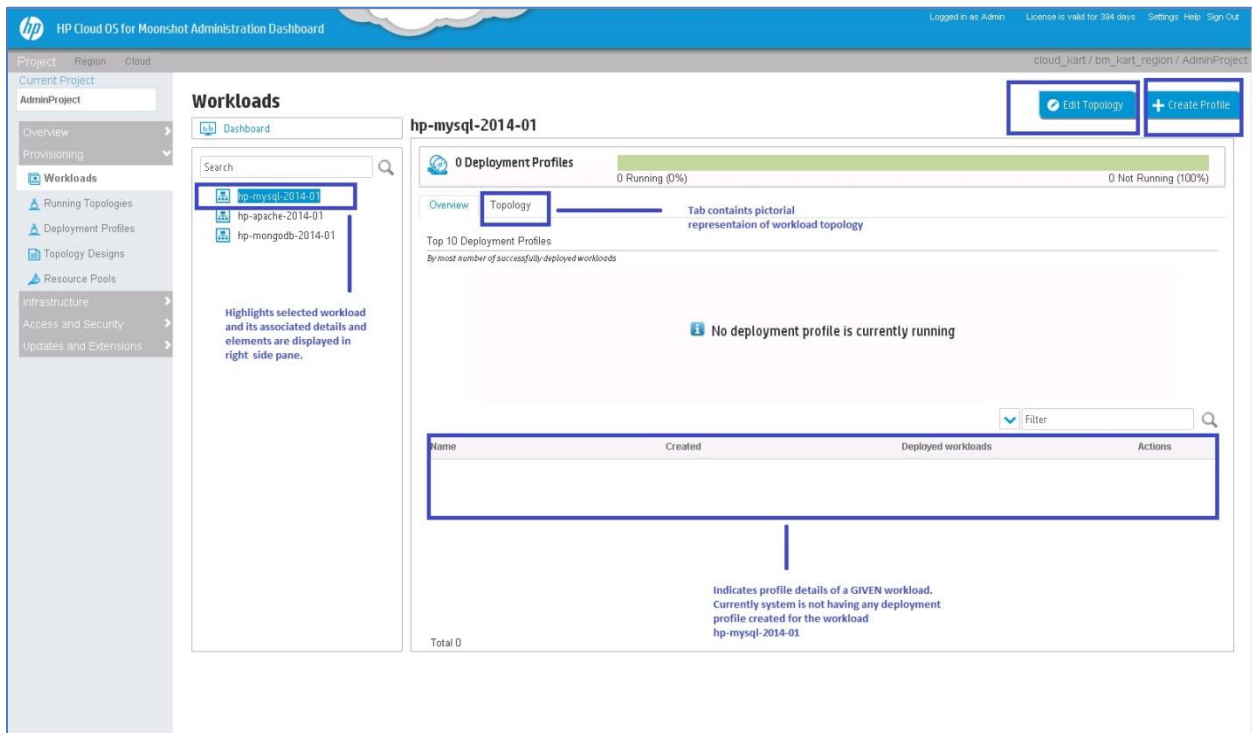

The screenshot displays the HP Cloud OS for Moonshot Administration Dashboard. The left sidebar shows the navigation menu with 'Workloads' selected. The main content area is titled 'Workloads' and shows a list of workloads: 'hp-mysql-2014-01', 'hp-apache-2014-01', and 'hp-mongodb-2014-01'. The 'hp-mysql-2014-01' workload is highlighted. The right panel shows the 'Deployment Profile Details' page for 'hp-mysql-2014-01'. It has two tabs: 'Overview' and 'Topology'. The 'Overview' tab is active, showing '0 Deployment Profiles' and '0 Running (0%)'. A message states 'No deployment profile is currently running'. Below this is a table with columns: Name, Created, Deployed workloads, and Actions. The table is empty. A note at the bottom indicates that the system is not having any deployment profile created for the workload 'hp-mysql-2014-01'.

Figure 56: Deployment Profile Details Page

- Click **Create Profile** displayed at the top right corner of the right panel.
A dialog box is displayed.

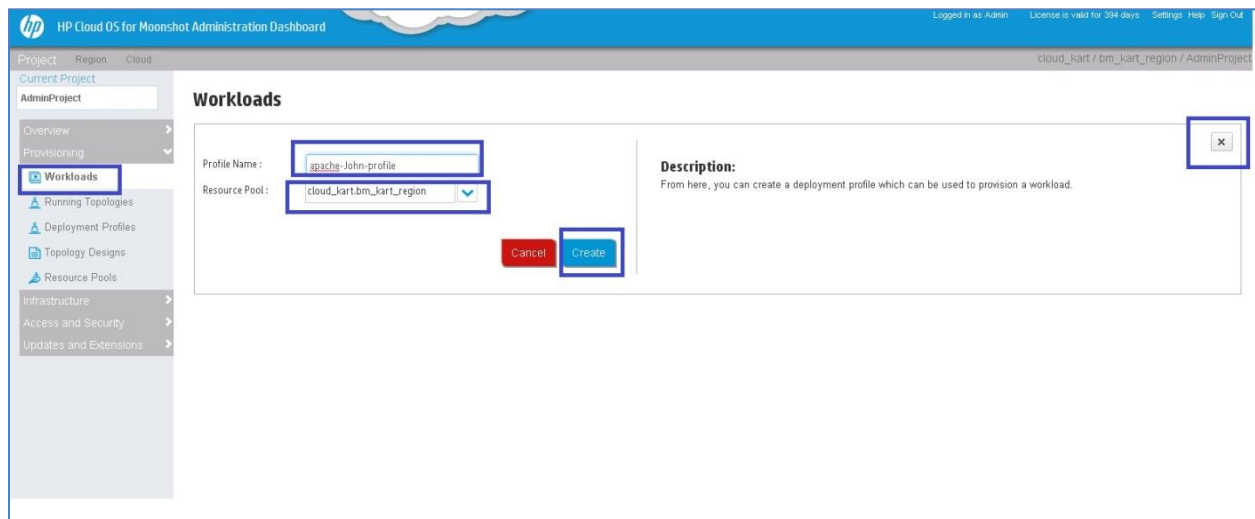


Figure 57: Create Profile Dialog Box

- In the **Profile Name** box, enter the profile name.
- From the **Resource Pool** drop-down list, select the resource pool to associate with the profile.
- Click **Create** to create the profile.
The profile is created and is displayed in the **Editor** Tab of Topology Designer.

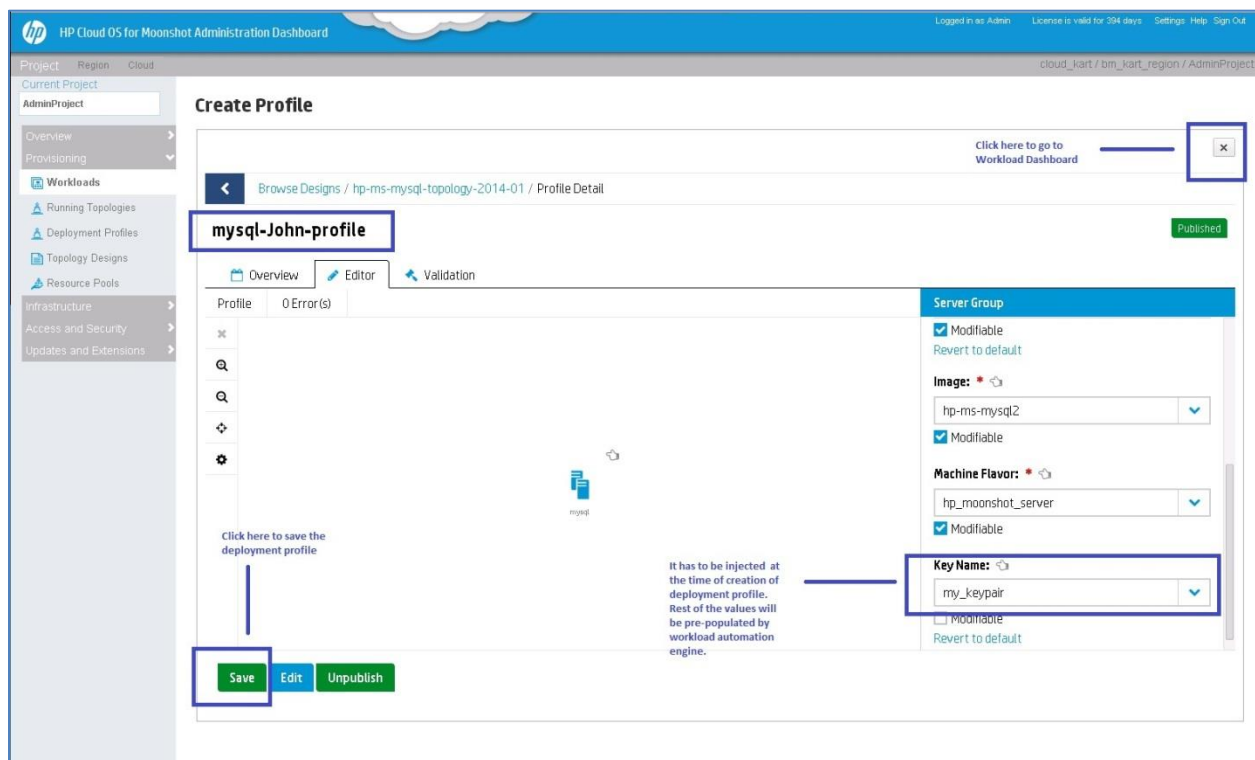



Figure 58: Profile Displayed in Topology Designer

- Click the icon displayed in the canvas to select it. The details are displayed in the right panel.

11. From the **Key Name** drop-down list, select the Keypair. The keypair value has to be injected at the time of profile creation. All other values are pre-populated.
12. Click **Save** to save the profile.
13. Click  to close the Topology Designer page. The deployment profile is displayed in the Workloads page.
14. Click **Workloads** option again to view the Dashboard and then click the Workload for which you created the deployment profile.
15. The profile that you created displays in the table in Deployment Profile Details page of the selected Workload.

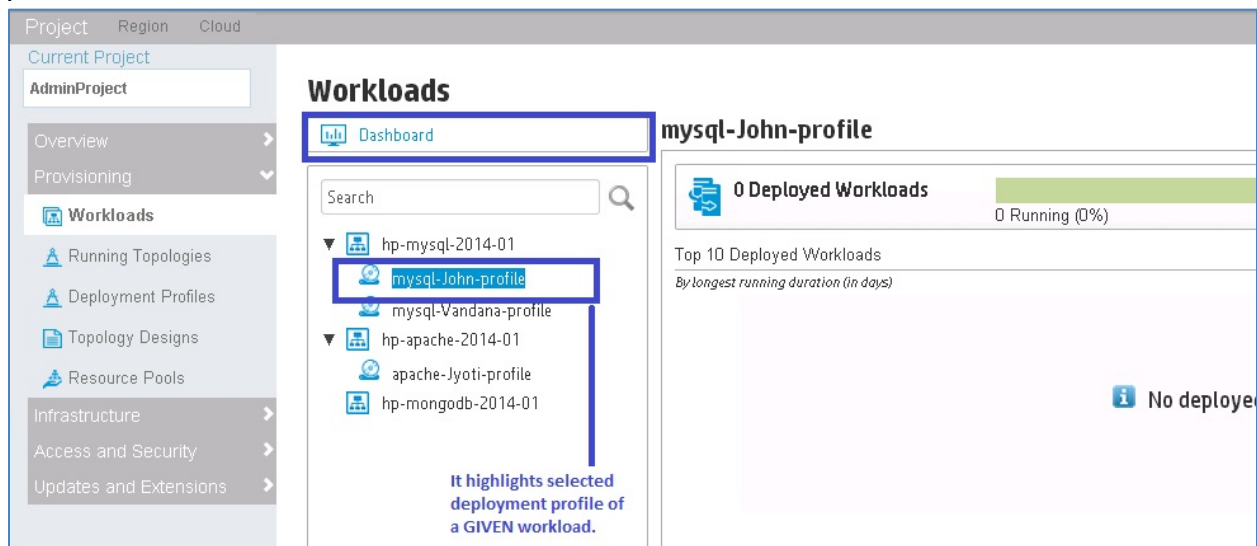


Figure 59: New Deployment Profile

► Provisioning Workload

Once the Deployment Profile is created, it results in provisioning of physical infrastructure and creation of a deployed workload. Once the Workloads are deployed, Project Administrators and Project users can use the workload content to **Launch Profile** and **Edit Profile** as per project requirements. Provisioning a Workload involves the following tasks:

■ Launch a Profile

To launch the profile, do the following:

1. In the Administration Dashboard, select the **Project** Tab. The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the left panel, click **Provisioning** and then select **Workloads**. The Workloads page is displayed.
4. Click Workload in the left panel and then click the arrow displayed against the workload to expand the list.
5. Click the Deployment Profile to display the Deployment Profile Details page of the selected profile.

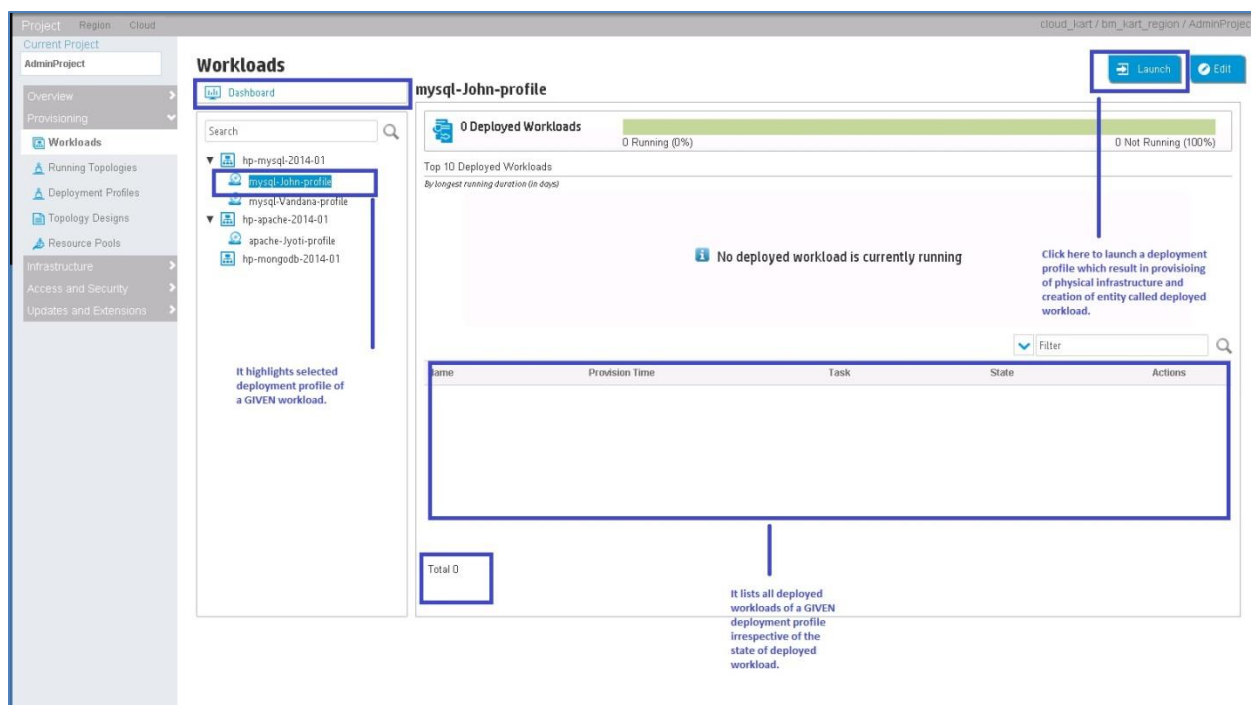


Figure 60: Deployment Profile Page with the Selected Profile

- Click **Launch** displayed at the top right corner of the page.
A Launch Profile dialog box is displayed.

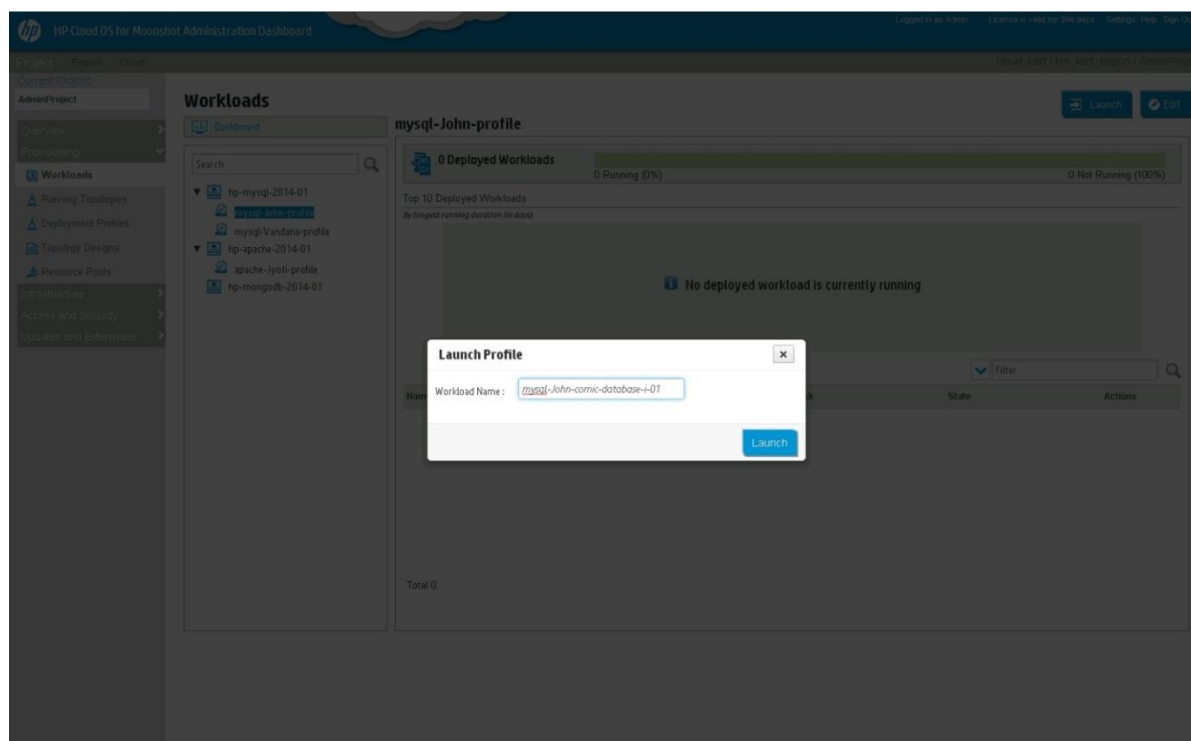

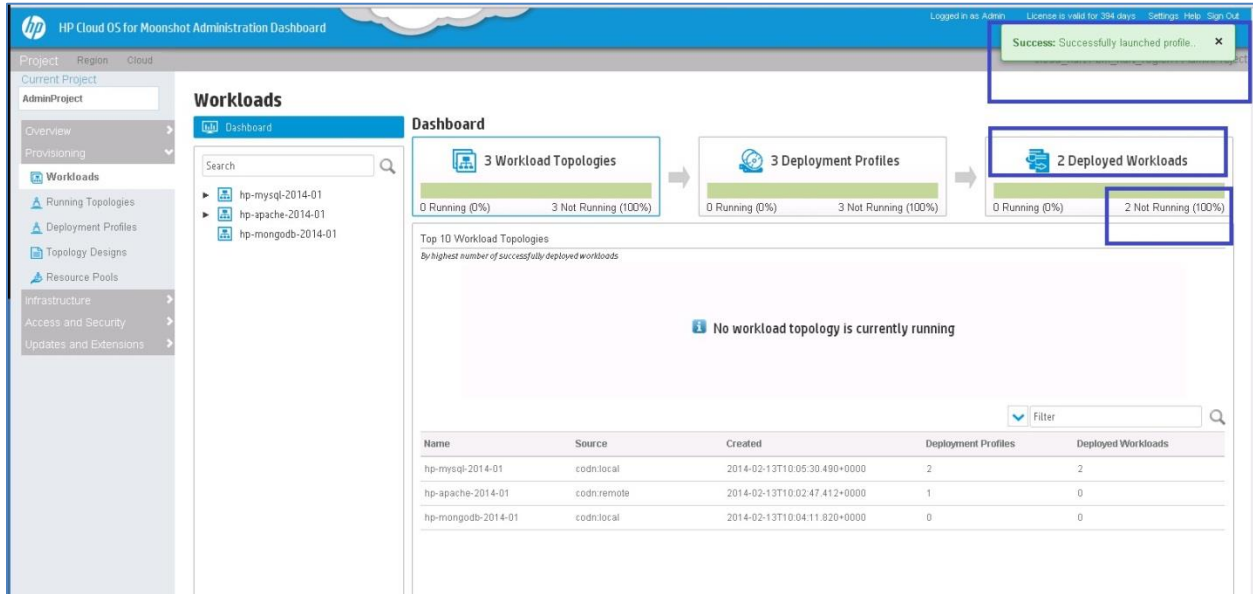


Figure 61: Launch Profile Dialog Box

Note: You can also click  displayed in the table against the profile in the Workload Profile Details page to launch the profile.

7. In the **Workload Name** box, enter the name for the workload.
8. Click **Launch** to launch the profile.
A success message is displayed.




The screenshot shows the HP Cloud OS for Moonshot Administration Dashboard. A success message "Success: Successfully launched profile..." is displayed in the top right corner. The dashboard includes a sidebar with navigation options like Overview, Provisioning, Workloads, Infrastructure, Access and Security, and Updates and Extensions. The main content area shows a "Workloads" section with a search bar and a list of workloads: hp-mysql-2014-01, hp-apache-2014-01, and hp-mongodb-2014-01. Below this is a "Dashboard" section with three metrics: 3 Workload Topologies (0 Running (0%), 3 Not Running (100%)), 3 Deployment Profiles (0 Running (0%), 3 Not Running (100%)), and 2 Deployed Workloads (0 Running (0%), 2 Not Running (100%)). A table titled "Top 10 Workload Topologies" is also present, showing columns for Name, Source, Created, Deployment Profiles, and Deployed Workloads. The table lists three workloads: hp-mysql-2014-01, hp-apache-2014-01, and hp-mongodb-2014-01.

Name	Source	Created	Deployment Profiles	Deployed Workloads
hp-mysql-2014-01	codn:local	2014-02-13T10:05:30.490+0000	2	2
hp-apache-2014-01	codn:remote	2014-02-13T10:02:47.412+0000	1	0
hp-mongodb-2014-01	codn:local	2014-02-13T10:04:11.820+0000	0	0

Figure 62: Success Message

Once the launch is successful, the profile is visible in the Deployed Workload.

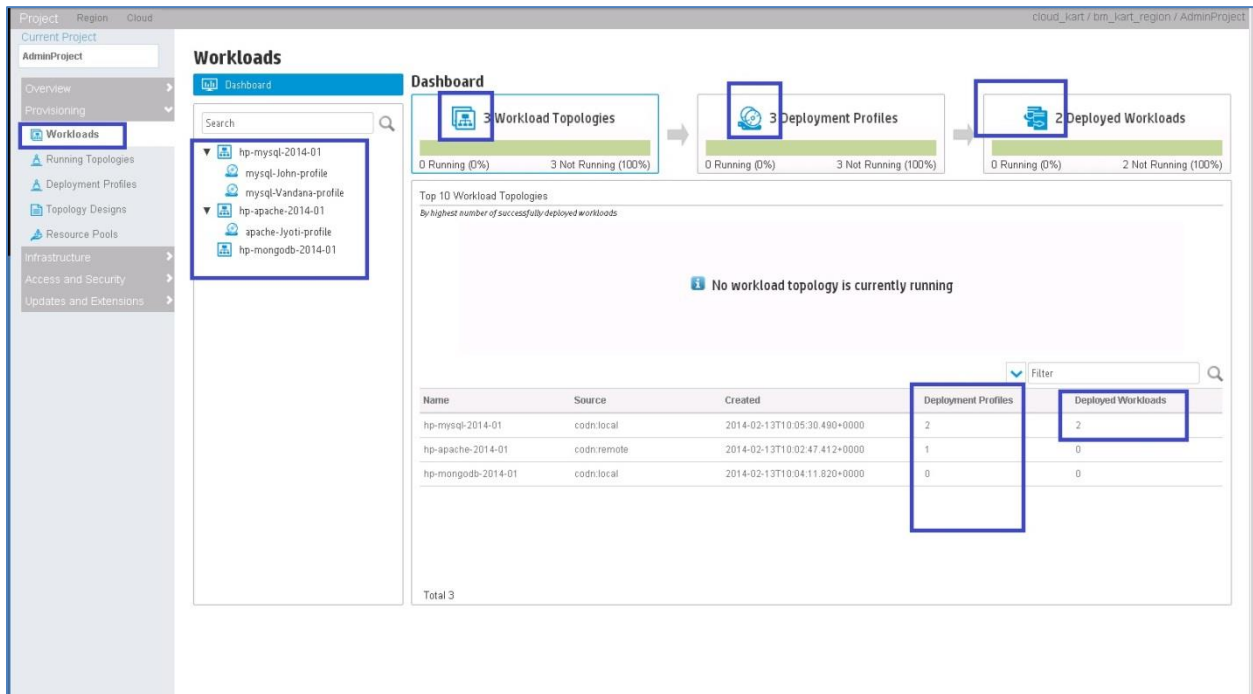

The screenshot shows the HP Cloud OS for Moonshot Administration Dashboard after the profile has been launched. The "Workloads" section in the sidebar now includes additional profiles: hp-mysql-John-profile, mysql-Vandana-profile, hp-apache-2014-01, apache-lyoti-profile, and hp-mongodb-2014-01. The "Dashboard" section shows the same metrics as Figure 62, but the "Deployed Workloads" count is now 2. The "Top 10 Workload Topologies" table is also present, showing the same data as in Figure 62.

Name	Source	Created	Deployment Profiles	Deployed Workloads
hp-mysql-2014-01	codn:local	2014-02-13T10:05:30.490+0000	2	2
hp-apache-2014-01	codn:remote	2014-02-13T10:02:47.412+0000	1	0
hp-mongodb-2014-01	codn:local	2014-02-13T10:04:11.820+0000	0	0

Figure 63: Dashboard after the Profile is launched

■ View Running Topologies

To view the progress of the launch of deployment profiles, do the following:

1. In the Administration Dashboard, select the **Project** Tab. The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the left panel, click **Provisioning** and then select **Running Topologies** to display the Running Topologies page with a list of topologies in the provisioning state. Once it is successfully provisioned and instances associated with it are running, the deployed workload status is counted as successful.

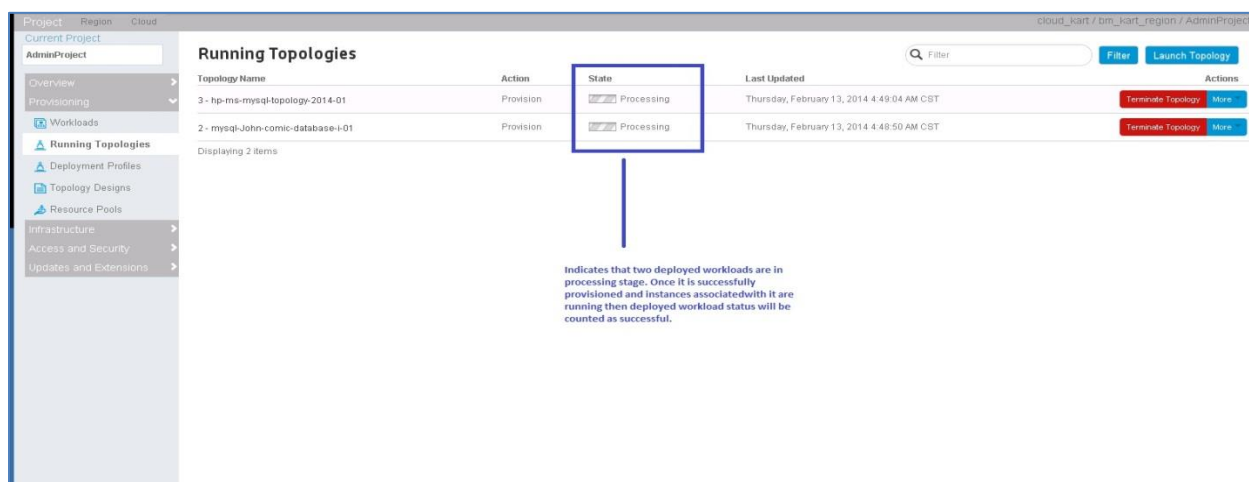



Figure 64: Running Topologies Page

■ Edit a Profile

To edit a deployment profile, do the following:

1. In the Administration Dashboard, select the **Project** Tab. The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the left panel, click **Provisioning** and then select **Workloads**. The Workloads page is displayed.
4. Click Workload in the left panel to display the Workloads Details page.
5. Click  displayed in the table against the profile that you want to edit. The profile displays in the Profile Tab of the Workload Topology Designer.

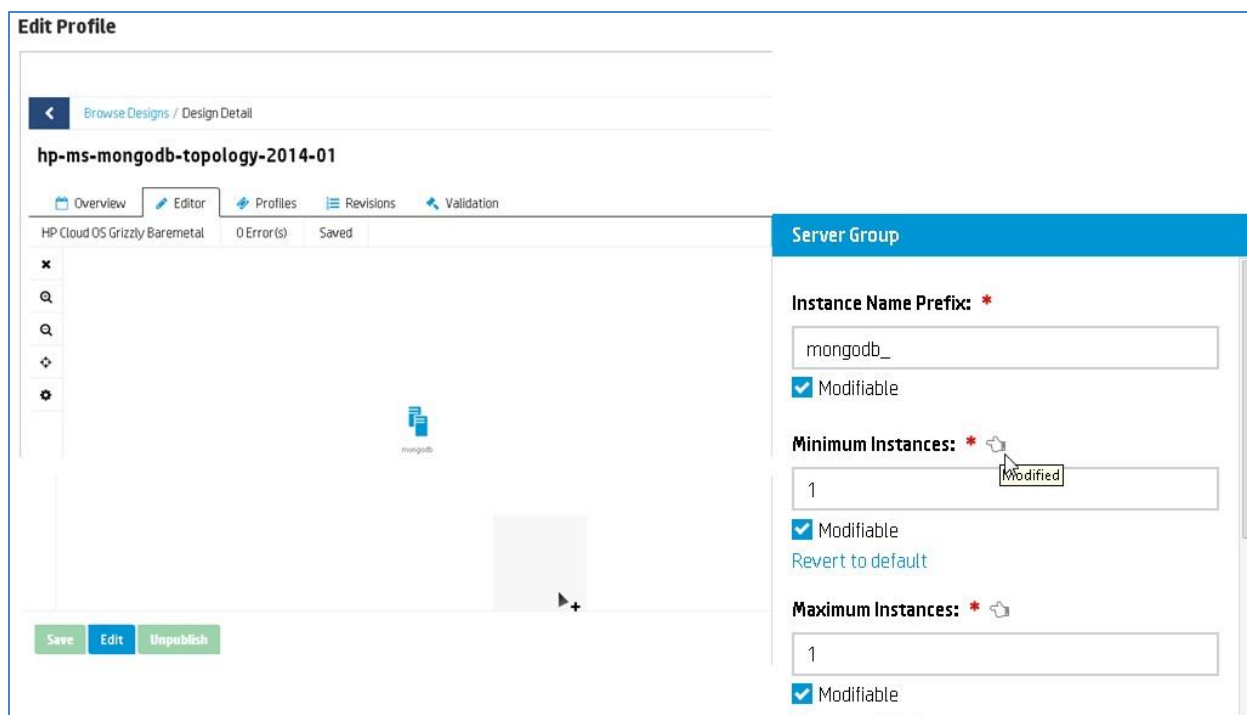


Figure 65: Edit Profile Screen

6. Make the required changes.
7. Click **Save** to save the details.

Manage Running Topologies

Topology is the visual representation of networking resources. Once the Infrastructure Topology and Infrastructure Design are created, the topology is ready to be launched.

The following tasks can be performed using Running Topologies option in the left panel:

- ⇒ **View Topology List**
- ⇒ **Launch Topology**
- ⇒ **Terminate Topology**
- ⇒ **Delete Topology**

View Topology List

To view the existing topologies, do the following:

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the left panel, click **Provisioning** and then select **Running Topologies** to display the Running Topologies page with a list of existing topologies.
The page displays the topology name, state and time stamp.

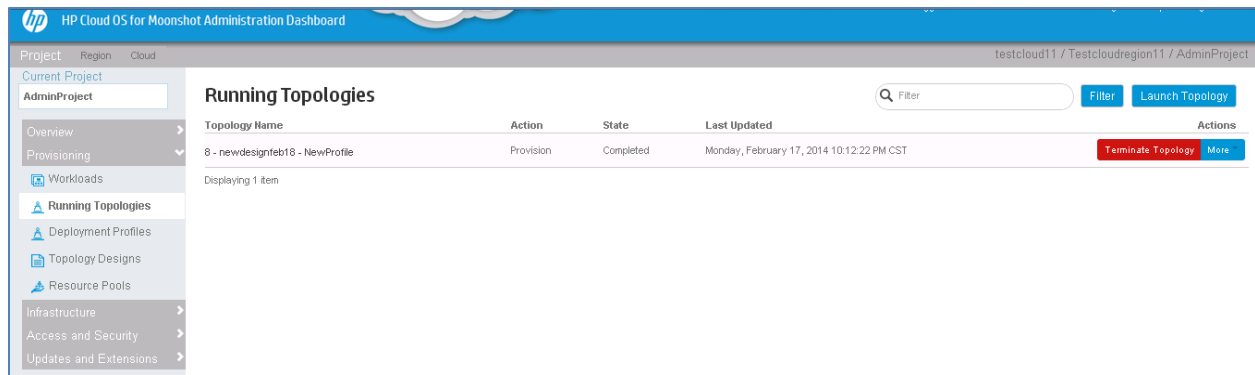


Figure 66: Running Topologies Page

4. (Optional) Click Topology Name to open the topology details page.
The details page opens with three tabs: **Overview**, **Job**, and **Content**. By default, Overview is the active tab and displays the details of the topology.
5. (Optional) Click **Job** Tab to activate it.
The details of all the jobs that were performed are displayed.
6. (Optional) Click **Content** Tab to activate it.
The XML version of the document is displayed.
 - (Optional) Click **Export** to download the design document to your local system.

Launch Topology

Use this option to launch the latest version of the topology document.

Do the following:

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the left panel, click **Provisioning** and then select **Running Topologies** to display the Running Topologies page with a list of existing topologies.
The page displays the topology name, state and time stamp.
4. Click **Launch Topology** to display a launch dialog box.

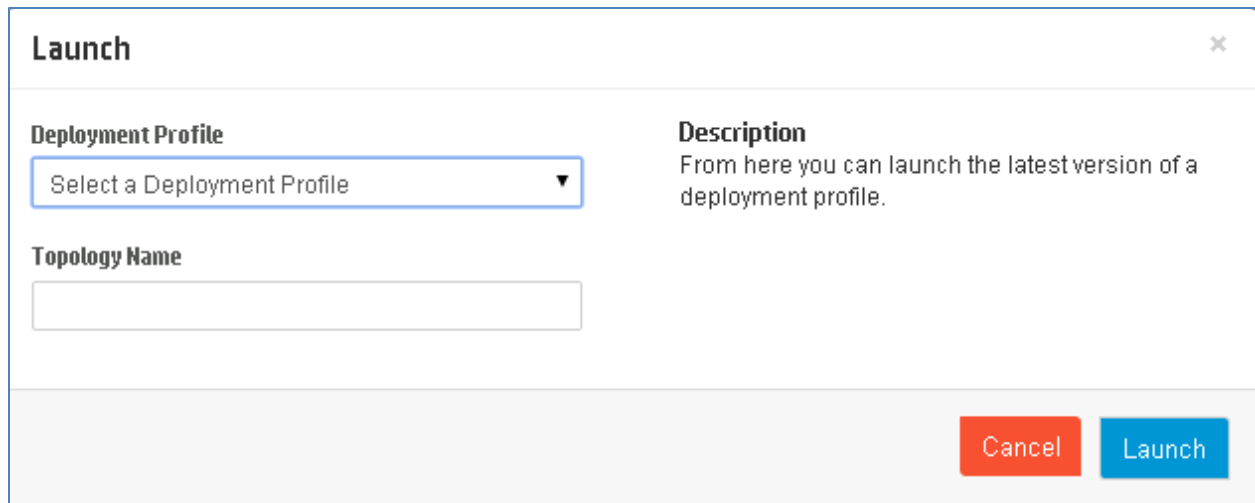
The image shows a 'Launch' dialog box with a title bar containing a close button. Inside, there are two main sections. The left section has a 'Deployment Profile' label above a dropdown menu with the text 'Select a Deployment Profile' and a downward arrow. Below this is a 'Topology Name' label above a text input field. The right section has a 'Description' label followed by the text 'From here you can launch the latest version of a deployment profile.' At the bottom right, there are two buttons: a red 'Cancel' button and a blue 'Launch' button.

Figure 67: Launch Topology Dialog Box

5. From the **Deployment Profile** drop-down list, select the deployment profile.
6. In the **Topology Name** box, enter the name.
7. Click **Launch**.

Terminate Topology

When the topology is terminated, the Administration Dashboard stops the instance.

Note: Even if the terminated topologies are not running, they are still displayed in the list of topologies.

To terminate the topology, do the following:

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the left panel, click **Provisioning** and then select **Running Topologies** to display the Running Topologies page with a list of existing topologies.
The page displays the topology name, state and time stamp.
4. Click **Terminate Topology**.
The topology state changes to inactive.

Delete Topology

When a topology is deleted, the Administration Dashboard stops the instance and permanently removes it. This action cannot be undone.

To delete a running topology, do the following:

1. Click the Project Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the left panel, click **Provisioning** and then select **Running Topologies** to display the Running Topologies page with a list of existing topologies.

4. Select the topology you want to delete and then click **Delete Topology**.
A confirmation box is displayed. The topology is deleted after getting a confirmation from you.


Manage Deployment Profiles

This option allows you to work with the Deployment Profiles. You can perform the following tasks:

View Deployment Profile List

To view the list of deployment profiles, do the following:

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Deployment Profiles** to open the Deployment Profiles page.
It displays deployment name, version, based on, scope, and associated project.

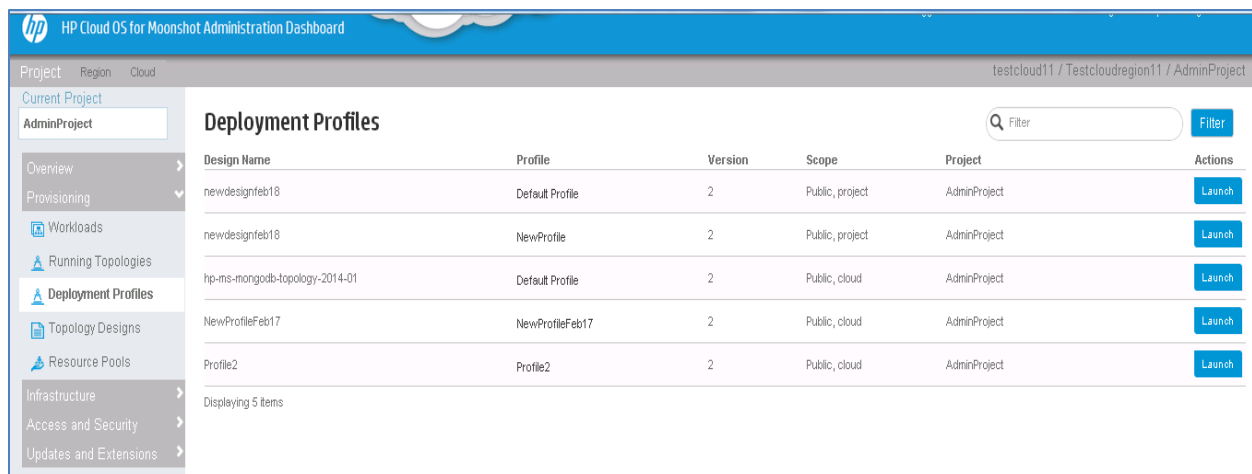

Design Name	Profile	Version	Scope	Project	Actions
newdesignfeb18	Default Profile	2	Public, project	AdminProject	Launch
newdesignfeb18	NewProfile	2	Public, project	AdminProject	Launch
hp-ms-mongoddb-topology-2014-01	Default Profile	2	Public, cloud	AdminProject	Launch
NewProfileFeb17	NewProfileFeb17	2	Public, cloud	AdminProject	Launch
Profile2	Profile2	2	Public, cloud	AdminProject	Launch

Figure 68: Deployment Profile Page

4. (Optional) To view the details of a deployment profile, click the **Deployment Name** to open a window that offers the following tabs:
 - **Overview:** - displays where you see detailed deployment profile information, including versions.
 - **Contents:** - displays the deployment profile content.

Launch Deployment Profile

To launch a deployment profile, do the following:

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Deployment Profiles** to open the Deployment Profiles page.
It displays deployment name, version, based on, scope, and associated project.
4. Select the deployment that you want to launch and click **Launch** to open the Launch dialog box.

Do the following:

- Accept or modify the **Infrastructure Name**.
- Click **Launch**.

If the launch is successful, you create running topology.

Note: A deployment profile can be launched multiple times to create multiple running topologies.

Manage Topology Designs

Use the Topology Designs area of the HP Cloud OS for Moonshot Administration Dashboard to manage service designs, which are the recipes for automating the cloud. A topology design is used for straightforward IaaS deployments, and allows you to design in a free-form layout where connection relationships implicitly define the service fulfillment lifecycle. The provider for Topology Designs is HP Cloud OS for Moonshot. Available components are determined by the version of OpenStack you select within HP Cloud OS for Moonshot, e.g., Diablo, Grizzly.

As part of creating a design, you add nodes and set properties in the **Editor** Tab. Use the **Validation** Tab at any time to view details about design errors. After creating the design, you can optionally create one or more Profiles based on the design which allows you to override some of the original configuration properties. Profiles create an association to a design document and allow you to set different values such as flavors, machine images and keypairs.

Note: Topology Designs can be created by all users but should ideally be created by a Cloud Architect.

- * If the topology design is created by a Project Admin or a Project User, it is suggested that the scope should not be selected as **Public, Cloud** as the user will be unable save and publish the design.
- * Project User cannot edit any topology created by Cloud Architect.
- * Project Administrator can edit topology designs with Project scope only, such as: Public, Project; Private, Project.

The Topology Designer allows you to perform different tasks using the following:

- **Browse Designs Page**
- **Overview Tab**
- **Editor Tab**
- **Profiles Tab**
- **Revisions Tab**
- **Validations Tab**

Browse Designs

The Browse Designs page displays the list of existing topology designs and their status. You can perform the following tasks in the Browse Designs page:

- View Topology Designs
- View Design Details
- Create Topology Design
- Import Topology Design

View Topology Designs

To view the list of topology designs, do the following:

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display list of existing designs and their status in the Browse Designs page.

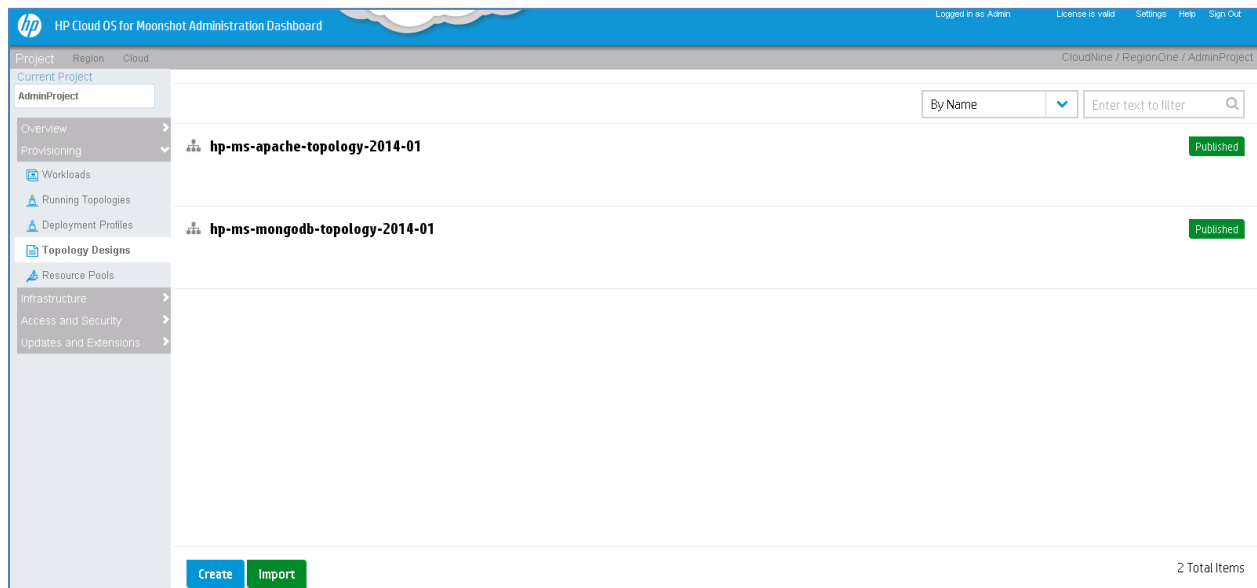




Figure 69: Browse Designs

You can also search for a particular design using the search options. By default, the designs are displayed in alphabetical order. To search for a particular design use any of the following options:

- Click  in the **By Name** box to display the options.
Selecting the required option displays all the designs that meet the criteria
- In the Search field, enter first few characters of the name and click .
The search result is displayed.

View Design Details

To view the design details, do the following:

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display list of existing designs and their status in the Browse Designs page.

4. Select a design from the list of Deployment Templates.
The design details are displayed in the right panel of the **Overview** Tab along with the graphical representation of the design.

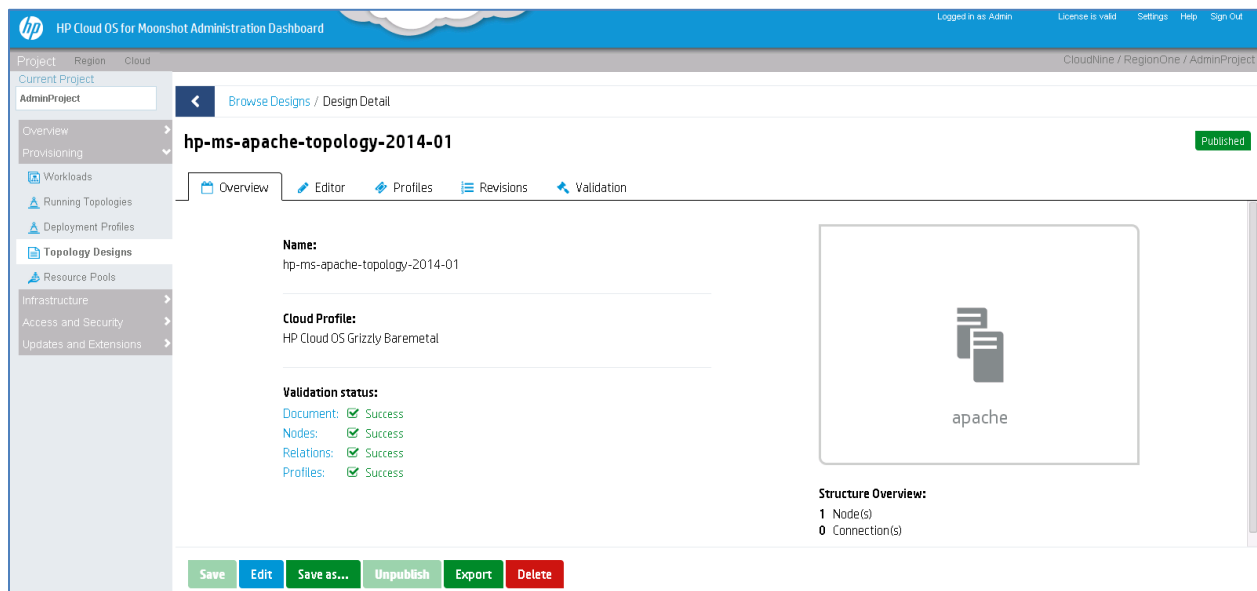



Figure 70: Design Details

The design is displayed in *View only mode* and displays the following details.

- **Name** - The name of the design.
- **Last Modified** - Date, time, and user who last modified the design.
- **Cloud Profile** - Represents the supported OpenStack version and capabilities of the cloud to which you are deploying.
- **Resource Pool** - Indicates the name of the Resource Pool associated with the design
- **Validation Status** - Indicates the validation status of the Document, Nodes, Relations, and Profiles.
- **Structure Overview** - Shows the number of nodes and connections.

Create Topology Design

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display a list of existing designs and their status in the Browse Designs page.
4. Click **Create** to open the Create New Design dialog box.

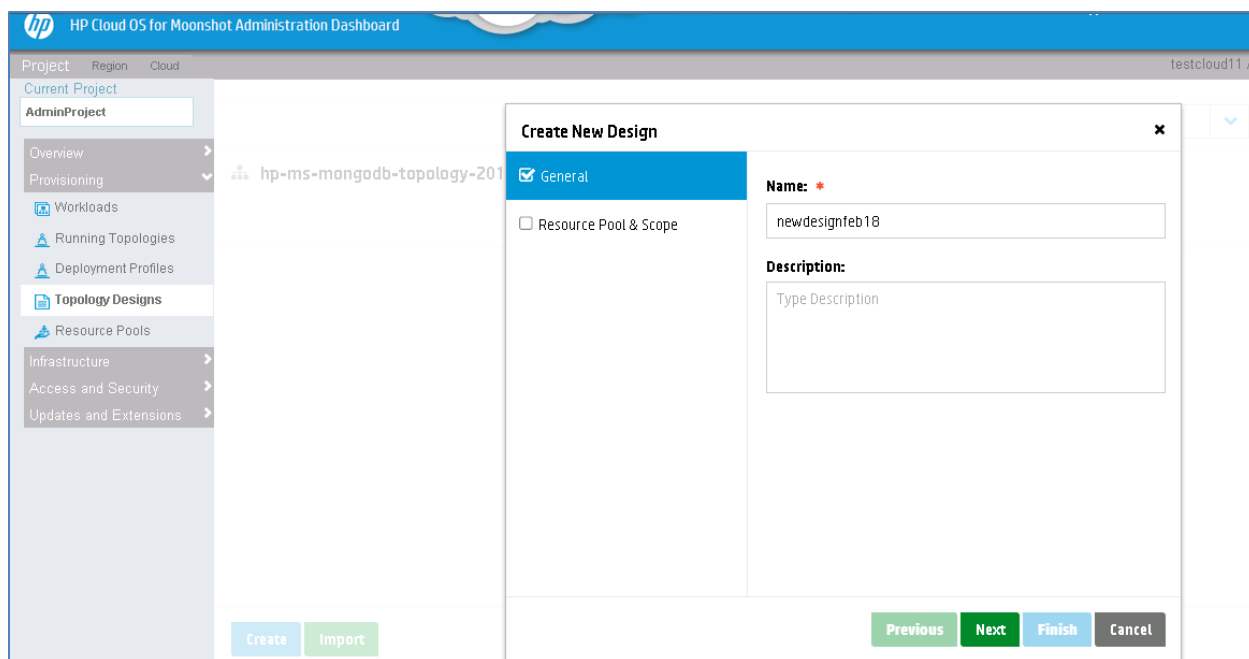

HP Cloud OS for Moonshot Administration Dashboard

Project Region Cloud testcloud11 /

Current Project AdminProject

Overview Provisioning Workloads Running Topologies Deployment Profiles Topology Designs Resource Pools Infrastructure Access and Security Updates and Extensions

hp-ms-mongodb-topology-201

Create New Design

☒ General ☐ Resource Pool & Scope

Name: * newdesignfeb18


Description: Type Description

Create Import Previous Next Finish Cancel

Figure 71: Create Topology Design

5. In the **Name** box, enter a unique descriptive name for the design with or without spaces.
6. In the **Description** box, enter the details about the design for example-size, operating system etc.
7. Click **Next**.

The **General**  appears selected and the **Resource Pool & Scope** option gets highlighted.

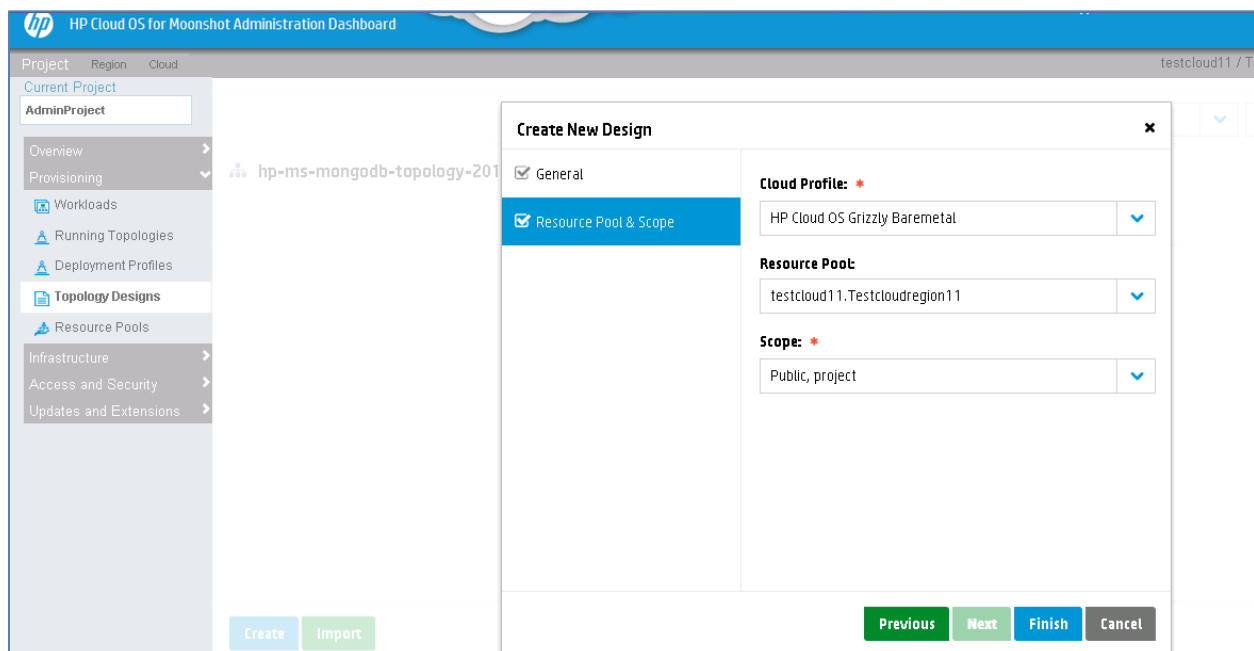

HP Cloud OS for Moonshot Administration Dashboard

Project Region Cloud testcloud11 /

Current Project AdminProject

Overview Provisioning Workloads Running Topologies Deployment Profiles Topology Designs Resource Pools Infrastructure Access and Security Updates and Extensions

hp-ms-mongodb-topology-201

Create New Design

☒ General ☒ Resource Pool & Scope

Cloud Profile: * HP Cloud OS Grizzly Baremetal

Resource Pool: testcloud11.Testcloudregion11

Scope: * Public, project

Create Import Previous Next Finish Cancel

Figure 72: Create Topology Design 2

8. From the **Cloud Profile** drop-down list, select *HP Cloud OS Grizzly Baremetal*. It represents the supported OpenStack version and capabilities of the cloud to which you are

deploying. Your selection here determines which node types are available during design layout in the **Editor** and which Resource Pools are available for selection.

9. (Optional) Select a **Resource Pool**, which is a pool of resources associated with the selected Cloud Profile.
10. Select the required **Scope** from any one of the options defined below:

Scope	Description
Private, Project	Allows you access while working in this project. This document can only be viewed by the user who created it in the project in which it was created and some admin users
Private, Cloud	Allows you access while working in any project. this document can only be viewed by the user who created it from any project of which the user is a member and by some admin users
Public, Project	Allows access to you and other project members. This document can be viewed by members of the project in which it was created and by some admin users
Public, Cloud	Only Cloud Users have the necessary privileges to create documents that are scoped as Public cloud. Allows access for all users. This document can be viewed by anyone in the cloud in any project.

11. Click **Finish**.
12. Click **Save** to save the details.

Import a Design

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display a list of existing designs and their status in the Browse Designs page
4. Click **Import**.
Import dialog box is displayed.
5. In the **Archive** box, enter or click (..) to specify the Archive File (.zip file) that contains the service design you want to import.
Archive filenames for service designs begin with SERVICE_DESIGN_.
6. Click **OK** to import the design.

Overview Tab in Topology Designer

The **Overview** Tab opens with the selected design details at the top and a graphical representation of the topology design at the bottom of the page.

You can perform the following tasks in the **Overview** Tab

- **View Design Details**
- **Edit a Topology Design**
- **Copy a Topology Design**
- **Publish/Unpublish a Topology Design**

- **Export a Design**
- **Delete a Topology Design**

View Design Details

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display Browse Designs page.
The design opens in the **Overview** Tab with the following details:
 - **Name** - Name of the design.
 - **Last Modified** - Date, time, and user who last modified the design.
 - **Cloud Profile** - Represents the supported OpenStack version and capabilities of the cloud to which you are deploying.
 - **Resource Pool** - Indicates the name of the Resource Pool if one was associated to the design.
 - **Validation Status** - Indicates the status of the four validation categories (Document, Nodes, Relations, and Profiles).
 - **Structure Overview** - Displays nodes in the topology design.
 - **Topology diagram** - A graphical view of the nodes and connectors representing the design.

Edit a Topology Design

All design properties except the Cloud Profile can be edited in both the **Overview** and **Editor** Tabs.

1. Click the **Project** Tab to select it
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display the list of existing topology designs in the Browse Designs page.
4. Select the design to edit.
The design displays in the **Overview** Tab of the Design Details page.
5. Click **Edit** to open the Edit Properties dialog box.
6. Make the required changes.
7. Click **Finish** to return to the **Overview** Tab.
8. Click **Save** to save the changes.

Copy a Design

To make a copy of an already existing design and all its components, do the following:

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display the list of existing topology designs.
4. Select the design to copy.
The design opens in the **Overview** Tab of the Browse Designs page.
5. Click **Save as**.
A Save As dialog box is displayed.
6. In the **Name** box, enter a new name or keep the default which appends "copy of" to the original design name.
7. In the **Description** box, enter the description as needed.
8. Click **Save** to save the details.

Publish/Unpublish a Design

The status of a saved topology design displays as **Published** or **Unpublished**. **Published** status indicates the design is fully bound (has a Resource Pool defined), has no validation errors, and can be used to provision. Published designs and their associated profiles can be viewed and launched by selecting Deployment Profiles option under the Provisioning option in the Project Tab:

Project > Provisioning > Deployment Profiles.

Rules regarding saving, validation, and publishing:

- You can create and save a design with validation errors.
- You can create and save a profile with errors.
- You cannot save a profile that has errors if the underlying design is published.

Publishing status can be viewed in Browse Designs and can be changed in the **Overview** or the **Editor** Tabs.

To publish a design:

1. Click the **Project** Tab to select it
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display Browse Designs page.
4. Select the design to publish.
The design is displayed in the **Overview** Tab in the Design Details page.
5. From the **Overview** Tab, click **Publish**.
If the design has no validation errors and publish is successful, the Publish button in the page changes to Unpublish.

To unpublish a design:

1. Follow steps 1-4 defined in the Publish a Design section to unpublish a design.
2. From the **Overview** Tab, click **Unpublish**.
The Publish button becomes available and within Browse Designs the status displays as blank.

Delete a Topology Design

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display Browse Designs page.
4. Select the design to delete.
The design displays in the **Overview** Tab of the Design Details page.
5. Click **Delete**.
A confirmation box is displayed.
6. Click **Yes**.
The design is deleted and the Browse Designs page is displayed. The design does not display in the list of designs.

Export a Design

The export process takes all the topology files, including the design in XML format, and creates a content archive (.zip) file. Exporting is used for data backup within the same HP Cloud OS instance.

The design must be valid and you must specify a Resource Pool before exporting.

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display Browse Designs page.
4. Select the design to export.
5. From the **Overview** Tab, click **Export**.
A dialog box opens prompting you to save the archive (.zip) file.
6. Click **Save** to save the design.

Editor

The **Editor** Tab within Topology Designs helps you to create and edit a design in a free-form component layout.

You can perform the following tasks in the Editor Tab.

- **Create a new design**
- **Use Editor Controls**
- **Design Topology Layouts**

- **Edit a Topology Design**

Create a new design

- From **Browse Designs**, click **Create**.
A blank canvas displays in the **Editor** tab. For more information, refer to Create Topology Design.

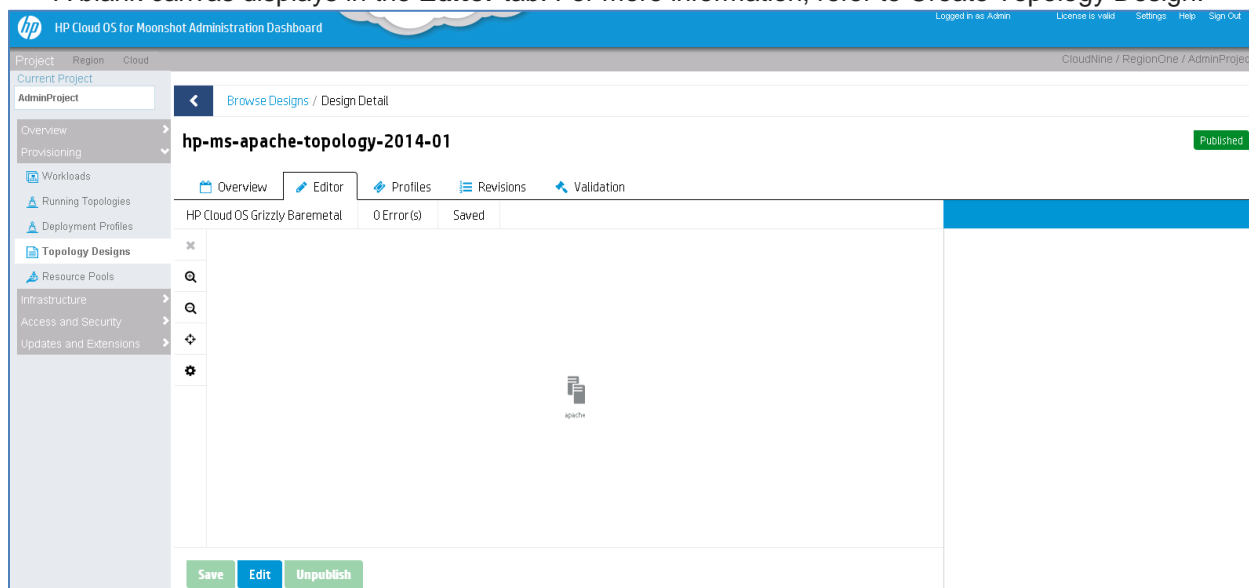


Figure 73: Editor Tab in Topology Designer

Use Editor Controls

When you open the editor, the following controls are available in the left toolbar:

Icon	Description
	Delete selected item.
	Zoom in.
	NOTE: You can also use the wheel on your mouse to zoom in and out within the Editor .
	Zoom out.
	Zoom the design to fit the window.
	Toggle between show or hide a navigator.

Design Topology Layouts


You can design the free-form component layout of nodes and their connections in the **Editor** Tab once the design is created.

As you move your cursor around the canvas in the **Editor**, gray tiles are displayed. Once you click a tile, a list of available node types determined by the Cloud Profile is displayed. A new blank design displays at

least one validation error indicating the design layout is unsaved. As you add nodes, more validation issues will display until you set required properties for the nodes and save the template. By default, the system proposes a **Name** for the node consisting of the node type and a sequential number, e.g., Network Segment 1. This name can be changed by editing the node properties.

To create a design layout, do the following:

1. After you create a new design, the **Editor** opens with a blank canvas.
You can define the design layout in the canvas.
2. Left-click a tile to display a list.
3. Select the node type as [Server Group](#).

The  icon displays in the canvas and the properties are displayed in the right panel.

Note: Currently HP Cloud OS for Moonshot supports only server groups.

To set the properties for the Node (Server Group)

Note: The term Node is used here for Server Group as currently we are supporting only Server Group.

Do the following:

- Click to select the node in the canvas.
The properties panel displays on the right side of the page. The properties that you set in the panel become the default configuration of the design. The following table defines the node properties.

Node Name	Node Properties	Description
Server Group	Name*	By default, the system proposes a name with a sequential number for each server group added to the design, e.g., Server Group 1, Server Group 2. Replace this name, if required.
	Instance Name Prefix*	A prefix to the name of the host you are creating.
	Number of Instances	Controls the minimum and maximum number of servers that can be used in the server group. To create a single server Server Group, specify 1 for both values. For a Server Group where the maximum number of servers is greater than the minimum, the user is allowed to add additional servers in the future up to the maximum.
Image		Image is only available if a Resource Pool was selected during design creation. To add a resource Pool to the design, click the Edit Design Properties button.
Machine Flavor*		A flavor describes the machine configuration size (amount of memory, number of CPUs, and storage capacity of Baremetal instances. Machine Flavor is only available if a Resource Pool was selected during design creation. To add a Resource Pool to the design, click Edit .

Key Name		Select the keypair to be used for this instance. Keypairs are the SSH credentials required for accessing an instance. Key Name is only available if a Resource Pool was selected during design creation.
----------	--	--

- Click **Save** to save the details.

Edit a Topology Design

Once the design is created and saved, you can modify the properties of the components and change the layout of the nodes and connectors within the Editor tab. A selected component is indicated with blue highlighting and associated properties open in the right panel for editing. For more information on creating a design and specific properties, refer to Design Topology Layout section.

- Click the **Project** Tab to select it.
The tab displays with options in the left panel.
- From the **Current Project** drop-down list in the left panel, select the project.
- From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display Browse Designs page.
- Select the design to edit.
- Click the **Editor** tab.
The design displays on the canvas.

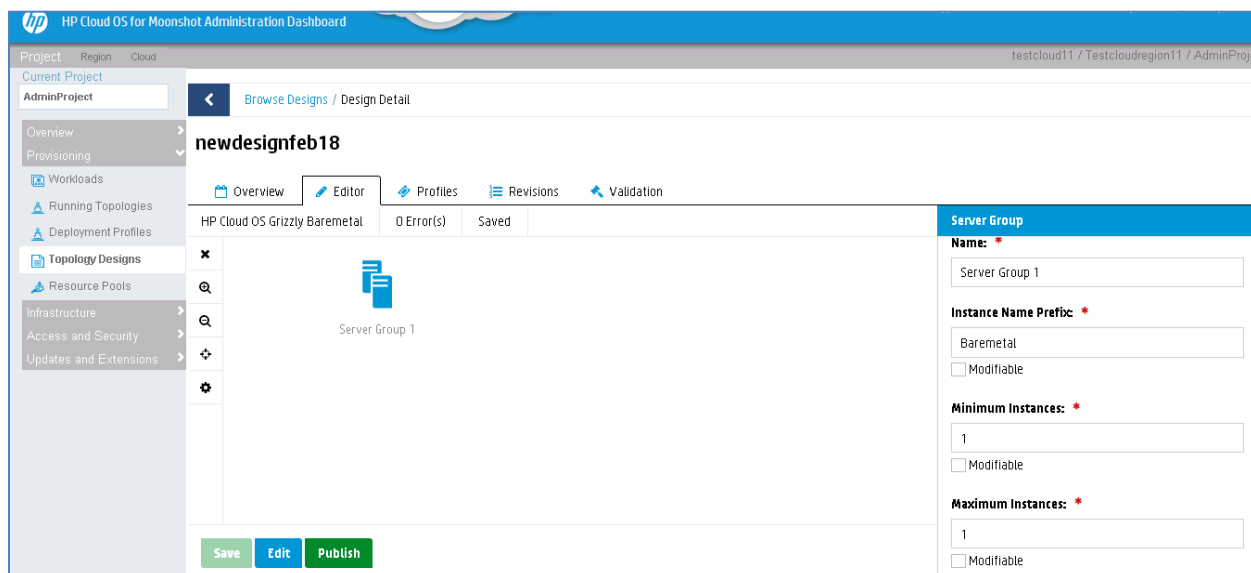


Figure 74: Edit Design

- Make the required changes.
- Click **Save** to save the details.

To edit node properties

- In the **Editor** Tab, click the node to edit.
The properties display in the right panel.

2. Edit the fields as required.
3. Click **Save**.

To delete node/nodes

1. Select the item on the canvas to be deleted.
2. Right-click and select **Delete Item**.
The system prompts you to confirm the deletion.
3. Click **Yes** to confirm.
The item is removed from the layout.

Profiles

When a topology design is created, the properties set for the nodes become the default configuration for the design. This configuration displays as the Default Profile in the Provisioning > Deployment Profiles option. Profiles provide a way to override the default configuration by allowing you to set different values for node properties such as flavors, machine images, or keypairs. They create an association to a binding document. Profiles are optional and are not required in order to publish a design.

Profiles are validated by the topology designer and tracked in the **Validation** Tab. The validation process checks that a profile contains valid values for the configuration properties that are being overwritten.

You can create as many profiles as required. You can also create a new profile based on an existing profile with similar configuration to save time and duplication of effort.

View Profiles List

1. Click the **Project** Tab to select it. The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display Browse Designs page with a list of existing designs.
4. Select the design for which you want to view profiles.
5. Click the **Profiles** tab. A list of existing profiles is displayed.

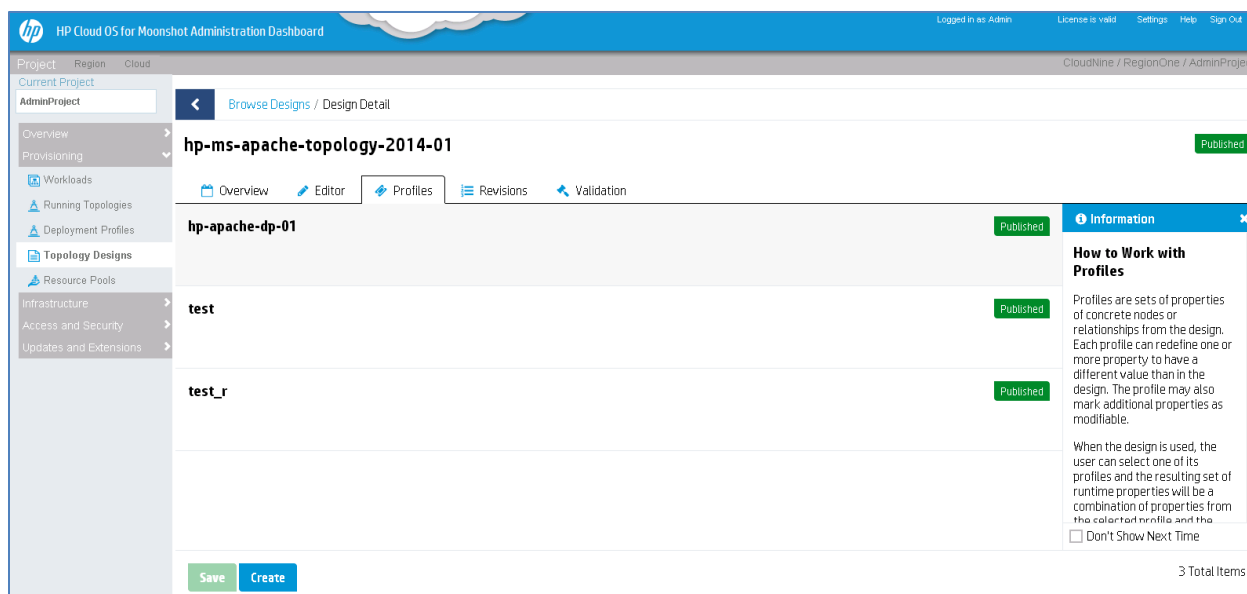


Figure 75: Profiles Page

6. Select a profile.
7. The profile opens in the **Overview** Tab, showing the Name, Description, Changed properties and a visual representation of the topology design.

Create a Profile

1. Click the **Project** Tab to select it. The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display Browse Designs page with a list of existing designs.
4. Select the design for which you want to create a profile.
5. Click the **Profiles** tab.
6. Click **Create**.

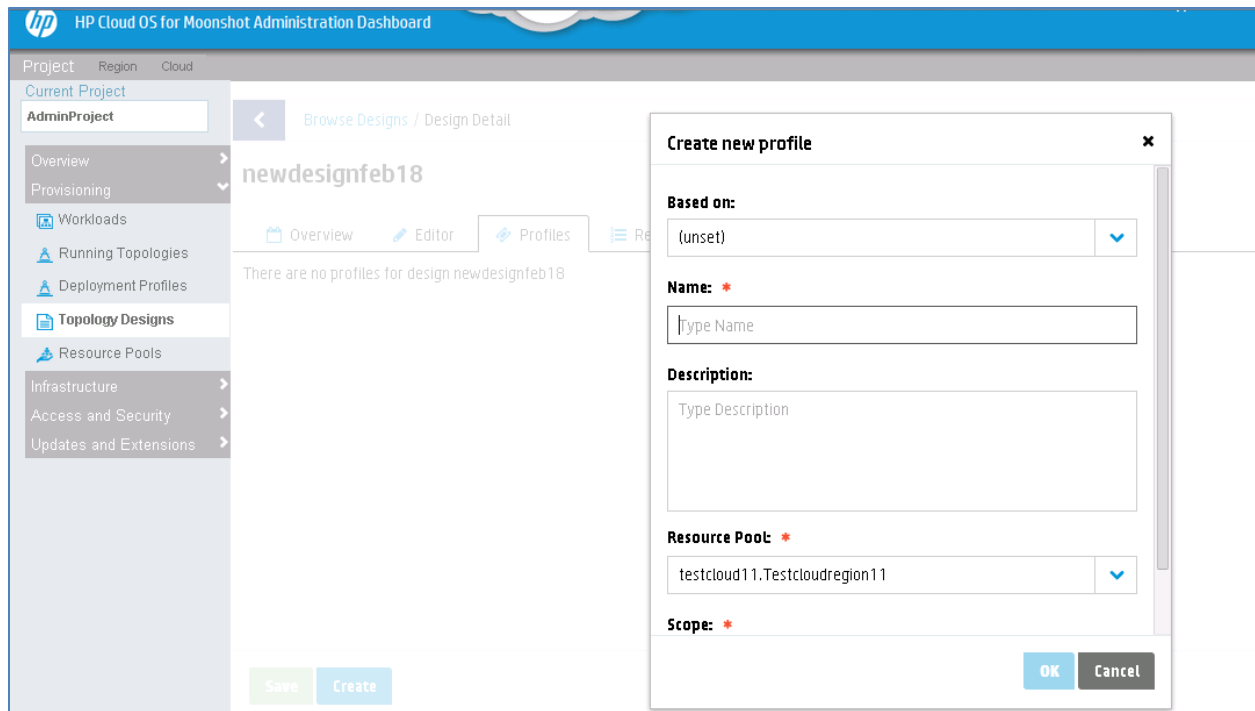


Figure 76: Create a Profile Page

7. From the **Based on** drop-down list, select an existing profile on which you want to base the new profile. If you select an existing profile, you save configuration time and effort as properties for the existing profile are populated in the new profile.
8. In the **Name** box, enter the name for the new profile.
9. In the **Description** box, enter the description for the profile.
10. From the **Resource Pool** drop-down list, select the resource pool.
11. From the **Scope** drop-down list, select the scope.
12. Click **OK**.
13. The profile opens in the **Editor** Tab, with the title bar at the top of the window displaying the path to the Profile Detail of the current design.

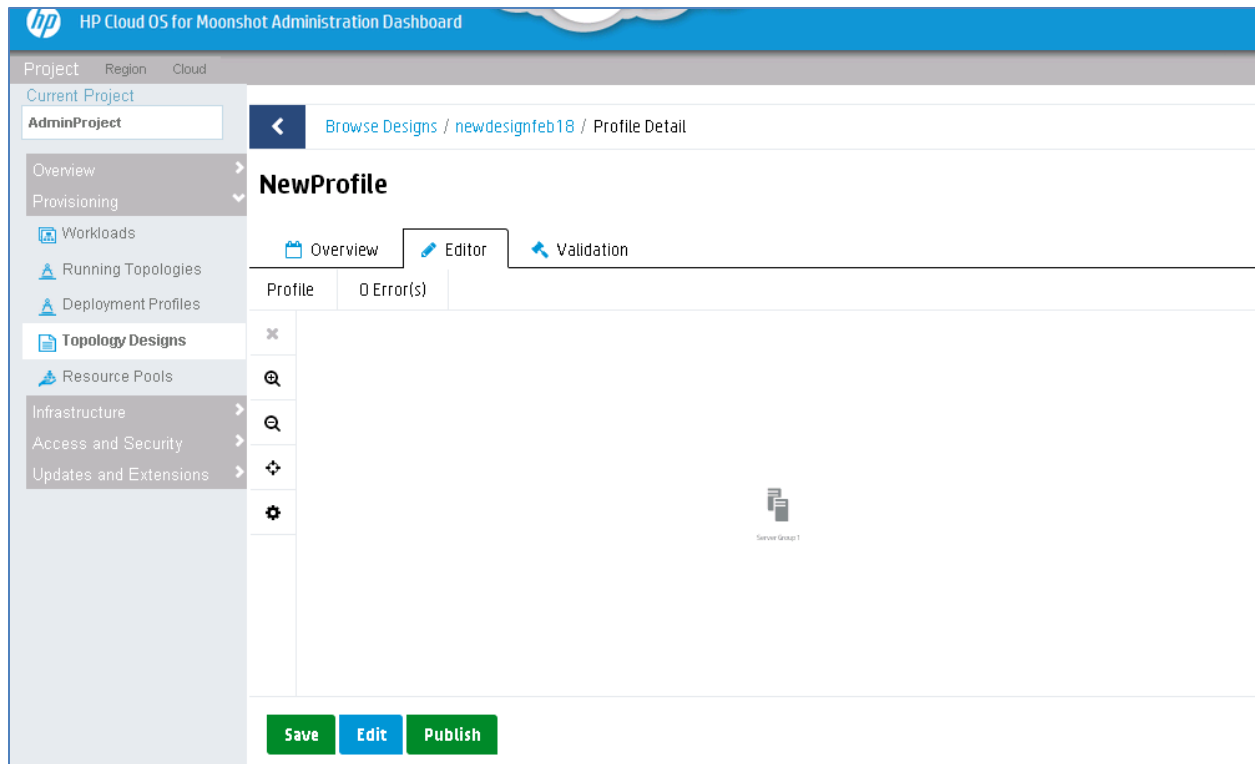


Figure 77: New Profile displays in Editor Tab

14. In the **Editor** Tab, update fields as required for the new configuration profile.
15. Click **Save**.
16. Click the design name in the title bar path to return to the **Profiles** tab,

Edit a Profile

1. Click the **Project** Tab to select it. The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display Browse Designs page with a list of existing designs.
4. Select the design for which you want to view profiles.
5. The design displays in the **Overview** Tab.
6. Click the **Profiles** Tab.
7. Click the profile to edit.
The profile opens in the **Overview** Tab, showing the topology design diagram on the right and details in the left panel.
8. Click **Edit** to make the required changes.
9. Click **OK**. The **Overview** Tab is displayed
10. Click **Save** to save the details.

Delete a Profile

The ability to delete a profile is determined by your Scope. For example, only a Cloud Administrator can create, edit, or delete profiles that are scoped Public, Cloud.

1. Click the **Project** Tab to select it. The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display Browse Designs page with a list of existing designs.
4. Select the design with the profile to delete.
5. From the **Overview** tab, click the **Profiles** tab.
6. Click on the profile you want to delete.
The profile opens in the **Overview** tab, showing the topology design diagram on the right and details in the left panel.
7. Click **Delete**. A confirmation dialog box displays.
8. Click **Yes**. The profile is deleted.

Revisions

The system tracks design revisions sequentially in the **Revisions** tab. Every time a design is edited and saved, the revisions list is updated. You can revert to an earlier version of the design, if required.

To revert to a previous design version, do the following:

1. Click the **Project** Tab to select it. The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display Browse Designs page with a list of existing designs.
4. Select the design for which you want to view profiles.
5. Select the design you want to revert.
6. From the **Overview** Tab, click the **Revisions** Tab. A list of design revisions are displayed with the Revision number and Date & Time.
7. Select a revision from the list.
8. Click **Revert to Selected**.
9. Click **Yes** to confirm. A new version is created (a copy of the selected version) with updated details.

Validation


Validation is a continuing process during design creation, configuration and editing. Topology Designs provide a validation log to view all design detail issues in one place. While creating design in Editor Tab and Profiles in Profiles Tab, an error count is displayed in case of errors. The validation process checks that a Profile contains all the required configuration properties, for example the image is selected etc.

Within the Editor, the following artifacts are validated:

- Document properties
- Node properties

Rules regarding saving, validation, and publishing:

- You can create and save a design with validation errors.
- You can create and save a profile with errors.
- You cannot save a profile that has errors if the underlying design is published.

As part of the validation process, any new node that is added in the Editor immediately displays with an Unsaved icon () and a list of specific property errors highlighted in the right panel. The Validation tab can be accessed at any time during the design process.

To view validation errors, do the following:

1. Click the **Project** Tab to select it. The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Provisioning** and then select **Topology Designs** to display Browse Designs page with a list of existing designs.
4. Select the design. The design details are displayed in the **Overview** Tab
5. Click the **Validation** Tab to activate it. The Validation page displays with following details.
 - The icon representing the component
 - The name of the component
 - A brief description of the error/errors
 - The type of component
6. Click error to go to the source of the issue and correct it.

Manage Resource Pool

Resource pools are used to access various cloud providers. A resource pool consists of resources in a single cloud. A resource pool could represent one compute region, or a pool of resources on another cloud provider. Resource pools help you locate compute and storage regions to use when you provision. The cloud you create might automatically contain a default resource pool, depending on the way it was created.

Create Resource Pool

Use this option to create resource pool definitions which can be used while topology provisioning.

To create a resource pool, do the following:

1. Click the **Project** Tab to select it. The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the left panel, click **Provisioning** and then select **Resource Pools** to display the Resource Pools page with a list of resource pools.

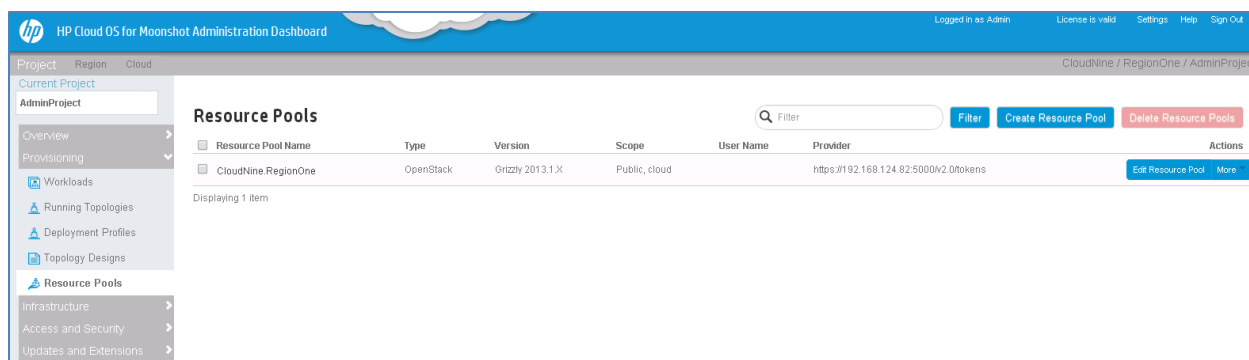


Figure 78: Resource Pools Page

- Click **Create Resource Pool** to display the Create Resource Pool dialog box.

Cloud Type

Custom

Compute Region

Custom

Description: From here you can create resource pool definitions to be used in Topology Provisioning.

Details

Name

Scope

Select a Value

Type

Select a Value

Cloud Profile

Select a Value

Region ID

Provider URL

Version

Select a Value

Provider Details

Project ID

User Domain Name

default

Project Domain Name

default

User Name

pradeep.av@hp.com

Password

.....

Confirm Password

Cancel

Create Resource Pool

Figure 79: Create Resource Pool Dialog Box

- From the **Cloud Type** drop-down list, select the *HP Cloud OS-OpenStack Grizzly*. Based on the cloud type selected, the options in the Compute Region field change.

Page | 102

© Copyright 2014 Hewlett-Packard Development Company

Note:

- * If the **Cloud Type** is selected as **Custom**, Provider Details are required.
- * If the **Cloud Type** is selected as **HP Cloud OS Grizzly**, Provider Details are not required.
- * If the **Cloud Type** is selected as **HP Cloud OS Diablo**, Provider Details are required.
- * If the **Cloud Type** is selected as **OpenStack Grizzly**, Provider Details are required.

6. From the **Compute Region** drop-down list, select the region from the options displayed.
7. In the **Details** section, do the following:
 - In the **Name** box, enter the name for the resource pool.
 - From the **Scope** box, select the scope.
Scope refers to the permissions and privileges for the resource pool. The Scope displays different options:
 - **Private, cloud** — Allows you the access while working in any project. This resource pool can only be viewed by the user who created it, from any project of which the user is a member, and also by some admin users.
 - **Private, project** — Allows you access while working in this project. This resource pool can only be viewed in the project in which it was created by the user who created it and also by some admin users.
 - **Public, cloud** — Allows access for all users. This resource pool can be viewed by anyone in the cloud, in any project.
 - **Public, project** — Allows you and other project members access. This resource pool can be viewed by members of the project in the project in which it was created, and by some admin users.

The **Type**, **Version**, **Region ID**, and **Provider URL** fields are prepopulated based on the Cloud Type and Compute Region that you selected.

8. From the **Cloud Profile** drop-down list, select *HP Cloud OS Grizzly Baremetal*.

Note: As the Cloud Type is selected as HP OpenStack Grizzly, Provider Details are not required.

9. Click **Create Resource Pool** to save it. A message is displayed on successful creation.

Edit Resource Pool

This option allows you to update resource pool definitions that will be used during topology provisioning. You can:

- Change the name of the resource pool
- Update the OpenStack server domain URL
- Modify different provider credentials when the resource is an HP Cloud
- Modify values that were not accurate when you originally entered them.

Note: Modification of the default resource pool is not suggested.

To edit the resource pool, do the following:

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.

2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the left panel, click **Provisioning** and then select **Resource Pools** to display the Resource Pools page with a list of resource pools.
4. Click **Edit Resource Pool** displayed against the Resource Pool that you want to edit.
Edit Resource Pool page is displayed.

Edit Resource Pool

Cloud Type Custom

Compute Region Custom

Description: From here you can create resource pool definitions to be used in Topology Provisioning.

Details

Name

Scope Select a Value

Type Select a Value

Cloud Profile Select a Value

Region ID

Provider URL

Version Select a Value

Provider Details

Project ID

User Domain Name default

Project Domain Name default

User Name pradeep.av@hp.com

Password

Confirm Password

Cancel **Create Resource Pool**

Figure 80: Edit Resource Pool

5. Make the required changes.
6. Click **Update Changes** to save the details.
A message is displayed on success.

Delete Resource Pool/Pools

Use this option to delete a resource pool. Use the option cautiously as the process cannot be undone.

Note: Deletion of the default resource pool is not suggested.

To delete a resource pool, do the following:

1. Click the **Project** Tab to select it
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the left panel, click **Provisioning** and then select **Resource Pools** to display the Resource Pools page with a list of resource pools.
4. Click **More** drop-down list displayed against the Resource Pool which you want to delete and select **Delete Resource Pool**.
Confirm Delete Resource dialog box is displayed.
5. Click **Delete Resource Pool** to delete the resource pool.

Manage Infrastructure

Once the instance is created, the required infrastructure can be defined using this option.

The following tasks can be performed using the option:

- [*Manage Project Instances*](#)
- [*Manage Project Images*](#)
- [*Manage Networks*](#)

Manage Project Instances

Once the instances are created, they are displayed under the Instance option. The following tasks can be performed using Instance option in the left panel:

- View Instance Details
- Edit Project Instance
- Launch an Instance
- Terminate an Instance
- Force Delete an Instance

View Instance Details

Use this option to view the list of Project Instances.

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Infrastructure** and then select **Instances** to display Instances page with the list of instances.

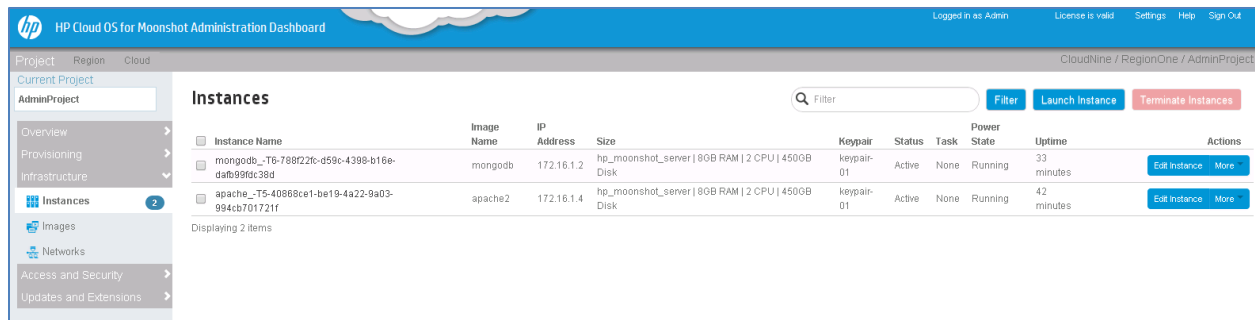


Figure 81: Project Instance Page

- Click Instance Name to display a page with the Overview Tab.
The Overview Tab displays the specifications, IP addresses and metadata of the selected instance

Note: The page displays two tabs: Overview and Console for the Cloud Administrator. Console Tab displays the Instance UI after accepting a valid password.

Edit a Project Instance

Once the instance is created, you can only edit its name.

Use this option to edit the instance details.

- Click the **Project** Tab to select it.
The tab displays with options in the left panel.
- From the **Current Project** drop-down list in the left panel, select the project.
- From the options in the left panel, click **Infrastructure** and then select **Instances** to display Instances page with the list of instances.
- From the options in the left panel, select **Instances** to display a page with the list of instances.
- Click **Edit Instance**.
An Edit instance dialog box is displayed.
- Make the required changes.
- Click **Save** to save the details.

Launch an Instance

- Click the **Project** Tab to select it.
The tab displays with options in the left panel.
- From the **Current Project** drop-down list in the left panel, select the project.
- From the options in the left panel, click **Infrastructure** and then select **Instances** to display Instances page with the list of instances.
- Click **Launch Instance** to open a Launch Instance dialog box with four tabs- **Details**, **Access and Security**, **Networking** and **Post Creation**. By default, Details is the active tab.

Launch Instance ✕

Details
Access & Security
Networking
Post-Creation

Instance Source

Image ▼

Image

ImageFeb11 ▼

Availability Zone

Any Availability Zone ▼

Instance Name

Flavor

hp_moonshot_server ▼

Instance Count

1

Specify the details for launching an instance.

The chart below shows the resources used by this project in relation to the project's quotas.

Flavor Details

Name	hp_moonshot...
VCPUs	2
Root Disk	450 GB
Ephemeral Disk	0 GB
Total Disk	450 GB
RAM	8,192 MB

Project Limits

Number of Instances 0 of 10 Used

Number of VCPUs 0 of 20 Used

Total RAM 0 of 51,200 MB Used


Cancel

Launch

Figure 82: Launch Instance

- From the **Instance Source** drop-down list, select the instance source.
- From the **Image** drop-down list, select the image.
- In the **Instance Name** dialog box, enter the name for the instance.
- From the **Flavor** drop-down list select the flavor.
By default, the auto generated flavor is displayed.
- In the **Instance Count** box, enter the number of instances required.
- Click the **Access & Security** Tab to activate it.
- From the **Keypair** drop-down list, select the keypair that you have created for the instance.
- Click the **Networking** Tab to activate it.
- From the **Available Networks** list, select the required network.
The network is displayed in the **Selected Networks** box.
- Click **Launch** to launch the instance.

Terminate an Instance(s)

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Infrastructure** and then select **Instances** to display Instances page with the list of instances.
4. Select  against the instance(s) that you want to delete.
5. Click **Terminate Instances**.
The instances are deleted after getting a confirmation from you.

Force Delete an Instance

Use this option to delete an instance which is in unresponsive state.

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Infrastructure** and then select **Instances** to display Instances page with the list of instances.
4. Click **More** against the instance to display the drop-down list.
5. Click **Force Delete Instance**.
The selected instance(s) is deleted after getting a confirmation from you.

Manage Project Images

Note:

- * A Project Administrator can create an image for full use within a project.
- * Project Administrator can create Private and Protected images only.
- * Cloud Architect can also create Protected and Private images only.

An instance is launched based on an image. The following tasks can be performed using Images option in the left panel:

- View Image List
- Create an Image
- Edit an Image
- Delete an Image
- Launch an Image

To create images, refer to the Cloud Image Builder document for more details.

View Image List

To view different images that are present in the given project, do the following:

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.

2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Infrastructure** and then select **Images** to display Images page with the list of images.

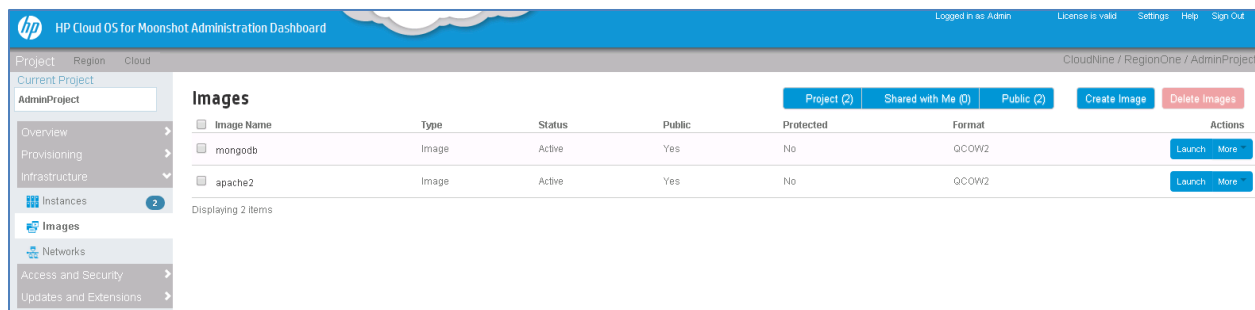


Figure 83: Project Images Page

The page also displays the total number of images under the following headings:

- Project- Images that are specific to the selected project
 - Public- Images that are public
 - Shared- Images that are shared with the selected project from other projects
4. Click Image Name to view the image details and specifications.

Create a Project Image

To create a project image, do the following:

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Infrastructure** and then select **Images** to display Images page with the list of images. Click the **Project** Tab to activate it.
The tab displays options in the left panel.
4. Click **Create Image** to open a Create an Image dialog box.
5. Select **Images** from the left panel to open the Images page.

Note:

It is mandatory to create image types such as **QCOW2** and **AMI** with associated **Amazon Kernel Image (AKI)** and **Amazon RAMdisk Image (ARI)**. It is suggested to create the images in the following sequence: **Amazon Kernel Image (AKI)**, **Amazon RAMdisk Image (ARI)** and **QCOW2**.

The **Kernel Image** drop-down list and **RAM Disk Image** drop-down list is displayed when the selected format is **QCOW2** or **AMI**.

To create AKI images, do the following:

- Click **Create Image** to open a Create an Image dialog box.
- In the **Name** box, enter a name for the image.
- (Optional) In the **Description** box, enter description for the image.
- From the **Format** drop-down list, select the format as AKI.

- From the **Image Source** drop-down list, do either of the following:
 - Select *Image location* from the drop-down list.
The Image Location box is displayed.
 - In the **Image Location** box, enter the HTTP URL to load the AKI image from.

OR

- Select *Image File* from the drop-down-list.
The **Choose File** option is displayed.
 - Click **Choose File** to browse the AKI image.
 - Select the AKI Image to upload.
- The **CPU Architecture** drop-down list displays *x86_64* by default.
The moonshot hardware supports the above specification.
 - In the **Minimum Disk** box, specify a minimum size required to boot image.
If no input is entered, the minimum value defaults to 0.
 - In the **Minimum Ram** box, specify a minimum size required to boot image.
If no input is entered, the minimum value defaults to 0.
 - Click ☐ against **Public** to select it.
This will make the image visible to all users.
 - Click ☐ against **Protected** to select it.
This makes the image as read-only.
 - Click **Create Image**.
A message is displayed on successful creation.

To create the ARI image, do the following:

- Click **Create Image** to open a Create an Image dialog box.
- In the **Name** box, enter a name for the image.
- From the **Format** drop-down list, select the format as *ARI*.
- From the **Image Source** drop-down list, do either of the following:
 - Select *Image location* from the drop-down list.
The Image Location box is displayed.
 - In the Image Location box, enter the HTTP URL to load the ARI image from.

OR

- Select *Image File* from the drop-down-list.
The **Choose File** option is displayed.
 - Click **Choose File** to browse the ARI image.
 - Select the ARI Image to upload.
- The **CPU Architecture** drop-down list displays *x86_64* by default.
The moonshot hardware supports the above specification.
 - In the **Minimum Disk** box, specify a minimum size required to boot image.
If no input is entered, the minimum value defaults to 0.
 - In the **Minimum Ram** box, specify a minimum size required to boot image.
If no input is entered, the minimum value defaults to 0.

- Click ☐ against **Public** to select it.
This will make the image visible to all users.
- Click ☐ against **Protected** to select it.
This makes the image as read-only.
- Click **Create Image**. A message is displayed on successful creation.

To create QCOW2, do the following:

- Click **Create Image** to open a Create an Image dialog box.
- In the **Name** box, enter a name for the image.
- From the **Format** drop-down list, select the format as *QCOW2-QEMU Emulator*.
- From the **Image Source** drop-down list, do either of the following:
 - Select Image location from the drop-down list.
The Image Location box is displayed.
 - In the Image Location box, enter the HTTP URL to load the QCOW2 image from.
- OR
 - Select Image File from the drop-down-list.
The Choose File option is displayed.
 - Click Choose File to browse the QCOW2 image.
 - Select the QCOW2-QEMU Image to upload.
- The **CPU Architecture** drop-down list displays *x86_64* by default.
The moonshot hardware supports the above specification.
- In the **Minimum Disk** box, specify a minimum size required to boot image.
If no input is entered, the minimum value defaults to 0.
- In the **Minimum Ram** box, specify a minimum size required to boot image.
If no input is entered, the minimum value defaults to 0.
- Click ☐ against **Public** to select it.
This will make the image visible to all users.
- Click ☐ against **Protected** to select it.
This makes the image as read-only.
- From the **Kernel Image** drop-down list, select the corresponding kernel image.
- From the **RAM Disk Image** drop-down list, select the corresponding RAM disk image.
- Click **Create Image**.
A message is displayed on successful creation. The image displays in the Images page.

Note: Do not navigate from the page while the image is being created.

Edit a Project Image

To edit an image, do the following:

1. Click the **Project** Tab to select it. The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.

3. From the options in the left panel, click **Infrastructure** and then select **Images** to display Images page with the list of images.
4. Click **More** drop-down list displayed against the image that you wish to edit and select **Edit Image**. The Edit Image dialog box is displayed.
5. Make the required changes.
6. Click **Update Image** to update the changes.

Note: Project Administrator cannot edit AKI and ARI Images.

Delete a Project Image

1. Click the **Project** Tab to select it. The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Infrastructure** and then select **Images** to display Images page with the list of images.
4. Click **More** drop-down list displayed against the image that you wish to delete and select **Delete Image**. A message is displayed to ask your confirmation. The image is deleted once you give your confirmation.

Launch a Project Image

To launch an image in the Administration Dashboard, do the following:

1. Click the **Project** Tab to select it. The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Infrastructure** and then select **Images** to display Images page with the list of images.
4. Select **Launch** against the image listed in the table. A Launch Instance dialog box displays with four tabs: **Details** Tab, **Access & Security** Tab, **Networking** Tab and **Post-Creation** Tab. By default,

Details is the active tab.

Launch Instance

Details | Access & Security | Networking | Post-Creation

Image
ImageFeb11

Availability Zone
Any Availability Zone

Instance Name

Flavor
hp_moonshot_server

Instance Count
1

Specify the details for launching an instance.
The chart below shows the resources used by this project in relation to the project's quotas.

Flavor Details

Name	hp_moonshot...
CPUs	2
Root Disk	450 GB
Total Disk	450 GB
RAM	8,192 MB
CPU Architecture	x86_64
Deploy Kernel Image ID	bc7acb7f-a390-49ad-9cda-e780fbc4e52c
Deploy RAM Image ID	1707af78-03d7-45a6-bc04-6e773c4da626

Project Limits

Number of Instances 1 of 10 Used

Number of CPUs 2 of 20 Used

Total RAM 8,192 of 51,200 MB Used

Cancel **Launch**

Figure 84: Launch Project Image Dialog Box

- On the **Details** Tab, do the following:
 - From the **Instance Source** drop-down list, select the image.
 - From the **Image** drop-down list, select the value.
 - In the **Instance Name** box, enter a name for the instance.
 - From the **Flavor** drop-down list, select the Baremetal flavor.
 - In the **Instance Count** box, enter **1** or more than 1.

The flavor details are displayed on the right side of the dialog box.

- On the **Access & Security** Tab, do the following:

- From the **Keypair** drop-down list, select value from the list.
7. On the **Networking** Tab, no networks are listed in the **Selected Networks** section.
 - Select the private network from the **Available networks** section.
 8. Click **Launch**.
The image is displayed in the table on the Image page with **Active** status.

Manage Networks

Use this option to view and edit networks. The following tasks can be performed using this option:

- View Network List
- Edit a Network

View Network List

Use this option to view the existing networks. To view the existing networks, do the following:

1. Click the **Project** Tab to select it
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Infrastructure** and then select **Networks** to display the Networks page with a list of networks.

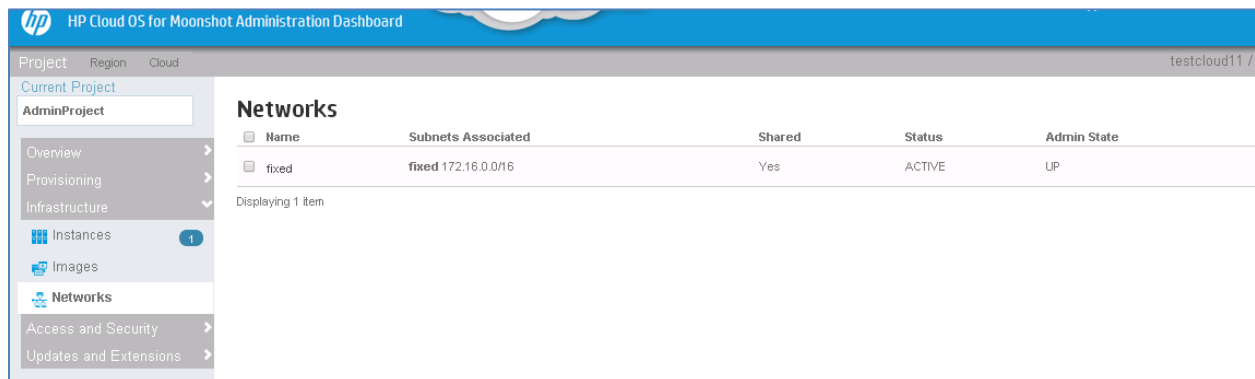


Figure 85: Networks Page

4. Click the network name to view the details of the network including the Subnet and Port details.
6. (Optional) In the network details page, click the subnet name to view the complete subnet details.
7. (Optional) In the network details page, click the port name to view the complete port details.
 - To edit the port details, click **Edit Port** against the port name to display the Edit Port dialog box.
 - Make the required changes.
- 5.

Edit a Network

You can only edit the network name that is assigned to the project.

1. In the Administration Dashboard, select the **Project** Tab.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Infrastructure** and then select **Networks** to display the Networks page with a list of networks.
4. Click **Edit Network** against the network that you want to edit to display the Edit Network dialog box.
5. Make the required changes.
6. Click **Save Changes** to save the changes.

OR

Click **Cancel** to cancel the process.

Manage Access and Security

Use this option to manage and view the following access and security elements:

- ⇒ **Keypairs** — Keypairs are SSH security keys that provide authentication and allow you to exchange traffic securely within the instance.
- ⇒ **API Access**
- ⇒ **Authentication Token**

The following tasks can be performed using Access and Security option in the left panel:

- View Keypair List
- Create Keypairs
- Delete Keypairs
- Import Keypairs
- Download API Access
- Access Authentication Token

View Keypair List

To view the list of keypairs, do the following:

1. Click the **Project** Tab to select it. The tab displays with options in the left panel.
2. From the left panel, select **Access and Security** and click **Access and Security** again.
A page is displayed with three tabs-, **Keypairs**, **API Access** and **Authentication Token**. By default, **Keypairs** is the active tab. The list of Keypairs is displayed in a table.

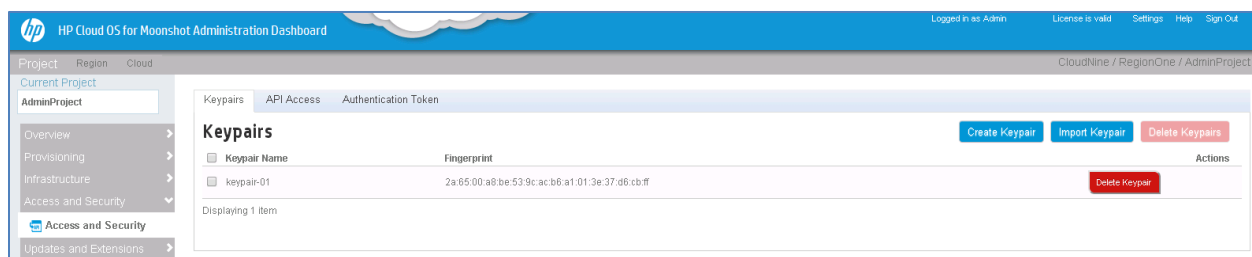


Figure 86: Keypairs Page

3. Click the **API Access** Tab to activate it. The window displays a list of API endpoints.
 - (Optional) Click **Download OpenStack RC File** to download the file.
 - (Optional) Click **Download EC2 Credentials** to download the EC2 details.
4. Click **Authentication Token** Tab to activate it. The window displays the details of the Authentication Token.

The Administration Dashboard manages your authentication token. The Administration Dashboard retrieves your token from the Keystone service when you successfully log in to the dashboard. You can access your authentication token in the Administration Dashboard for accessing the Baremetal host outside the dashboard.

Create Keypairs

Keypairs are SSH security keys that are used to launch secure, provisioned cloud instances, images or topologies. The **keypair** is injected into the launched instance. Each project user needs to create a keypair(s) for use. Project Administrator cannot create it on behalf of the user.

To create keypairs, do the following:

1. Click the **Project** Tab to select it. The tab displays with options in the left panel.
2. From the left panel, select **Access and Security**. A window is displayed with three tabs- **Keypairs**, **API Access** and **Authentication Token**. By default, Keypairs is the active tab.
3. Click **Create Keypair** displayed in the right panel. Create Keypair dialog box is displayed.

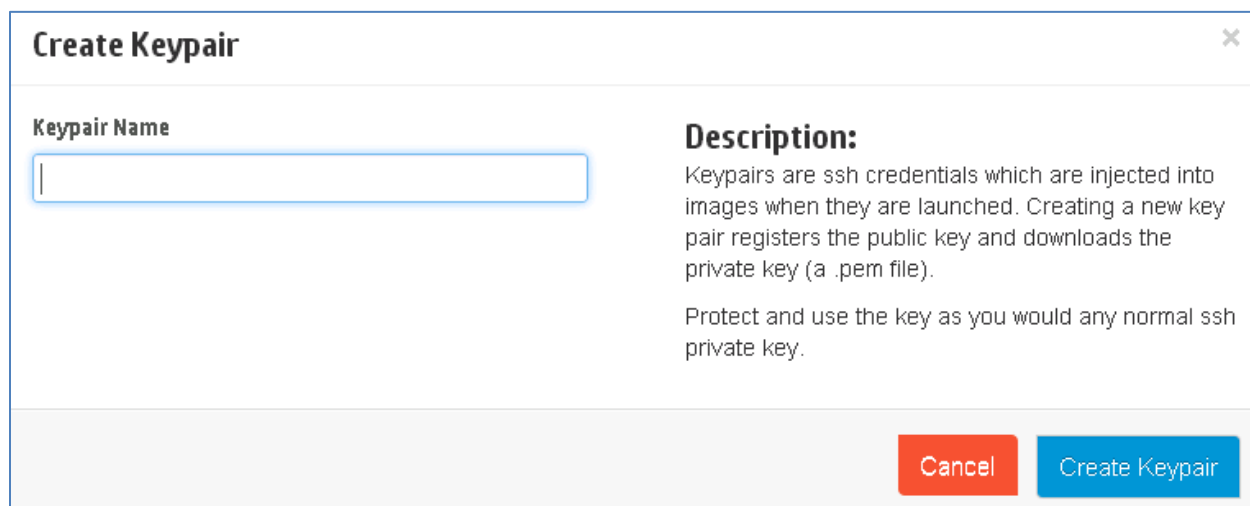
The image shows a 'Create Keypair' dialog box. It has a title bar with a close button (X). Inside, there's a 'Keypair Name' label followed by a text input field. To the right of the input field is a 'Description:' section. The description text reads: 'Keypairs are ssh credentials which are injected into images when they are launched. Creating a new key pair registers the public key and downloads the private key (a .pem file). Protect and use the key as you would any normal ssh private key.' At the bottom right, there are two buttons: 'Cancel' (red) and 'Create Keypair' (blue).

Figure 87: Create Keypair Dialog Box

4. In the **Keypair Name** box, enter the name of the keypair.
5. Click **Create Keypair**.

The credentials are downloaded onto your machine. Depending your browser, the download is either automatic or a dialog box prompts you to download the keypair.

Delete Keypairs


To delete a keypair, do the following:

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the left panel, select **Access and Security**.
A window is displayed with three tabs- **Keypairs**, **API Access** and **Authentication Token**. By default, Keypairs is the active tab.
3. Click **Delete Keypair** against the keypair that you want to delete,
A Confirm Delete Keypair dialog box is displayed.
4. Click **Delete Keypair**.
A message is displayed on successful deletion.

Import Keypairs

To import a project keypair, do the following:

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the left panel, select **Access and Security**.
A window is displayed with three tabs- **Keypairs**, **API Access** and **Authentication Token** By default, Keypairs is the active tab.
3. Click **Import Keypair** to display the Import Keypair dialog box.

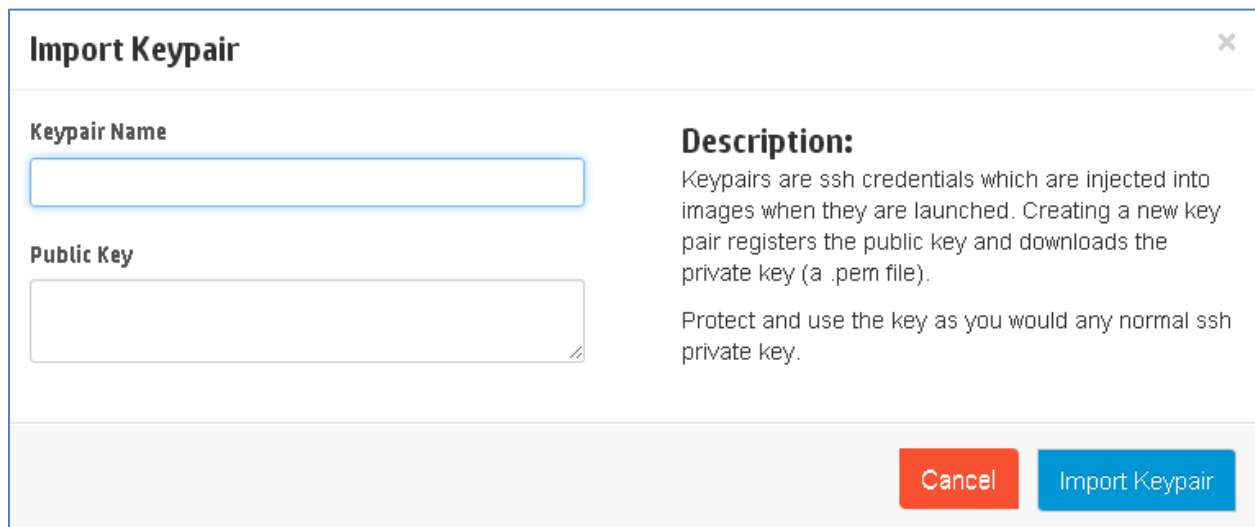

The dialog box is titled "Import Keypair" and has a close button (X) in the top right corner. It contains two input fields: "Keypair Name" and "Public Key". To the right of these fields is a "Description:" section. The description states: "Keypairs are ssh credentials which are injected into images when they are launched. Creating a new key pair registers the public key and downloads the private key (a .pem file). Protect and use the key as you would any normal ssh private key." At the bottom right of the dialog box are two buttons: "Cancel" (red) and "Import Keypair" (blue).


Figure 88: Import Keypair Dialog Box

4. In the **Keypair Name** box, enter the name of the keypair.
5. In the **Public Key** box, enter the public key.
6. Click **Import Keypair**.

Delete Multiple Keypairs

To delete multiple keypairs with a single command, do the following:

1. Click the **Project** Tab to select it. The tab displays with options in the left panel.
2. From the left panel, select **Access and Security**.
A window is displayed with three tabs- **Keypairs**, **API Access** and **Authentication Token**. By default, Keypairs is the active tab.

3. Click **Keypairs** Tab to activate it. Keypairs window is displayed.
4. Click  against the keypairs that you want to delete.
5. Click **Delete Keypairs** to display a Confirm Delete Keypairs dialog box.
6. Click **Delete Keypairs**. A message is displayed on successful deletion.

Download API Access

To download the API Access, do the following:

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the left panel, select **Access and Security**.
A window is displayed with three tabs- **Keypairs**, **API Access** and **Authentication Token**. By default, Keypairs is the active tab.
3. Click **API Access** Tab to activate it.
The API Access page is displayed with the details services and service endpoints.

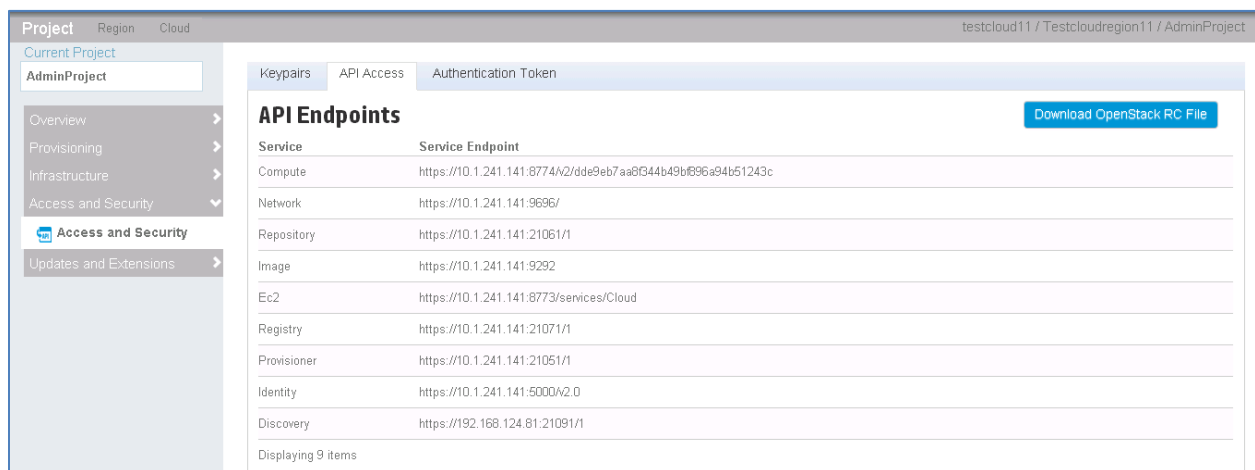


Figure 89: API Access Page

4. (Optional) Click **Download OpenStack RC File** to download the file.

Access Authentication Token

The Administration Dashboard manages your authentication token. The Administration Dashboard retrieves your token from the Keystone service when you successfully log in to the Administration Dashboard. You can use this authentication token to access outside services. For example: if you want to use API service endpoints, you will need this token to access it.

To access authentication token, do the following:

1. Click the **Project** Tab to select it.
The tab displays with options in the left panel.
2. From the left panel, select **Access and Security**.
A window is displayed with three tabs- **Keypairs**, **API Access** and **Authentication Token**. By default, Keypairs is the active tab.
3. Click **Authentication Token** Tab to activate it.
The Authentication Token page is displayed with the details of the authentication token.

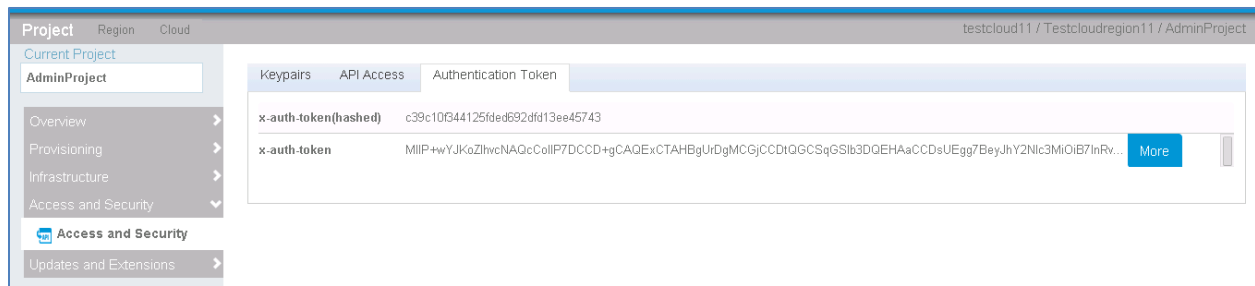


Figure 90: Authentication Token Page

Manage Updates and Extensions

The updates and extensions feature allows you to connect to, list, and retrieve hot fixes and updates from the HP Cloud OS Delivery Network and apply them to your Cloud environment. These hot fixes and updates are referred to as *content packages*. After a package is imported and installed, you can view product and package details.

The Update and Extensions page will be blank for the first time user. You need to configure your credentials for HP Cloud OS Delivery Network to view the updates.

You can perform the following tasks:

- Configure Credentials
- View Updates List
- Download Updates or Extensions
- Publish an Update

Configure Credentials

You cannot access the updates from the HP Cloud OS Delivery Network (CODN) unless you are a registered user. To Sign up to the Cloud OS Delivery Network, do the following:

Signup Now

To Sign up to the HP Cloud OS Delivery Network, do the following:

1. Click the **Project** Tab to select it
The Project tab is activated and the options are displayed in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. Click **Updates and Extensions** to open the Updates and Extensions page.
4. Click **Configure** displayed at the top right corner of the page to display the Configure dialog box.

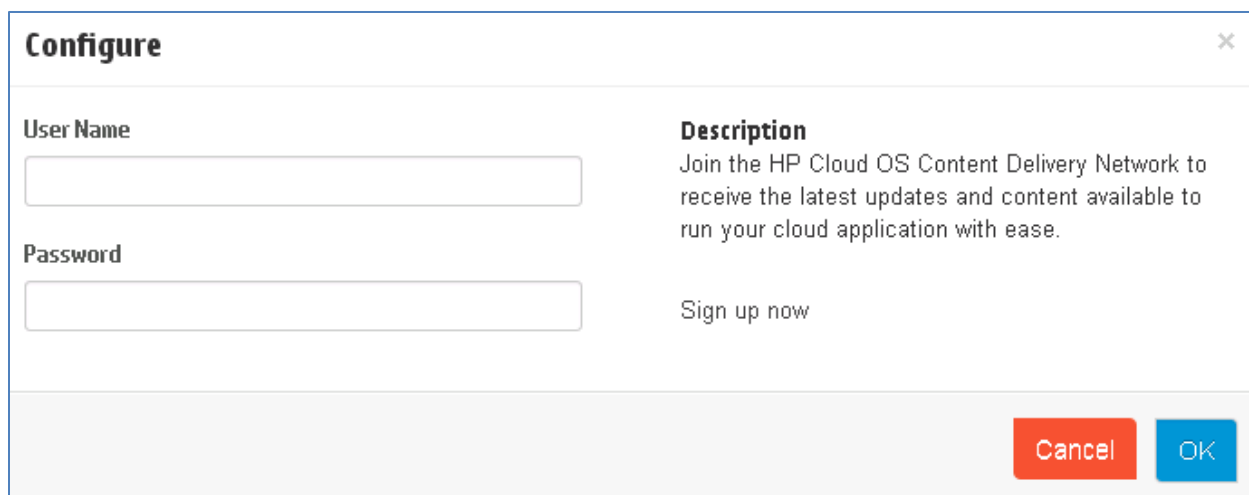


Figure 91: Configure Dialog Box

5. If you have a CODN account, go to STEP 6 else do the following:
 - Click **Signup Now** displayed at the bottom of the page.
It displays the HP Cloud OS Delivery Network Page. Do the following:
 - Click **Sign In** displayed at the top of the page to open the HP Web ID dialog box.
 - Click **Sign Up for Web ID** to open create a HP Web ID dialog box.
 - Enter the required details.
 - Click ☐ against **I agree to the Terms of Use**.
 - Click **Submit**.
The credentials are authenticated and the account is created.
6. In the **User Name** box, enter the email ID that you used while setting up your account in HP Cloud OS for Moonshot Distribution Network.
7. In the **Password** box, enter the password that you used for your account in the HP Cloud OS Delivery Network.
8. Click **OK** to save the details.
The Updates and Extensions page is displayed with the list of available patches.

View the Updates List

To view the updates list, do the following:

1. In the Administration Dashboard, select the **Project** Tab.
The tab displays with options in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Updates and Extensions** and then select **Updates and Extensions** to display the Updates and Extensions page with the list of updates. The following information is displayed:
 - **Name:** of the update.
 - **Version:** of the update. Information for each version is listed on a separate line.
 - **Size:** of the update.

- **Provider:** which organization created and is responsible for the update.
 - **Type:** the kind of image that downloads.
 - **Status:** the state of the update in the catalog. This state is independent of your local system. For example, you may successfully download an update, but the update later becomes suspended in the catalog. You can continue to publish and use the update on your local system.
 - **Actions:** tasks you can perform on the update.
4. (Optional) Click a **Name** to open an Overview page with details of the update name, version, targets where it is installed.

Import an Update

You can import a workload from your local folder or from HP Cloud OS Enterprise portal. Once the import process is successful, the document displays in the Updates and Extensions page.

Import content from local Folder

To import an update that is stored on your local system, do the following:

1. Click the **Project** Tab to select it.
The Project tab is activated and the options are displayed in the left panel
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Updates and Extensions** and then select **Updates and Extensions** to display the Updates and Extensions page with the list of updates.
4. Click **Import** displayed on the top right corner of the page.
An Import dialog box is displayed.

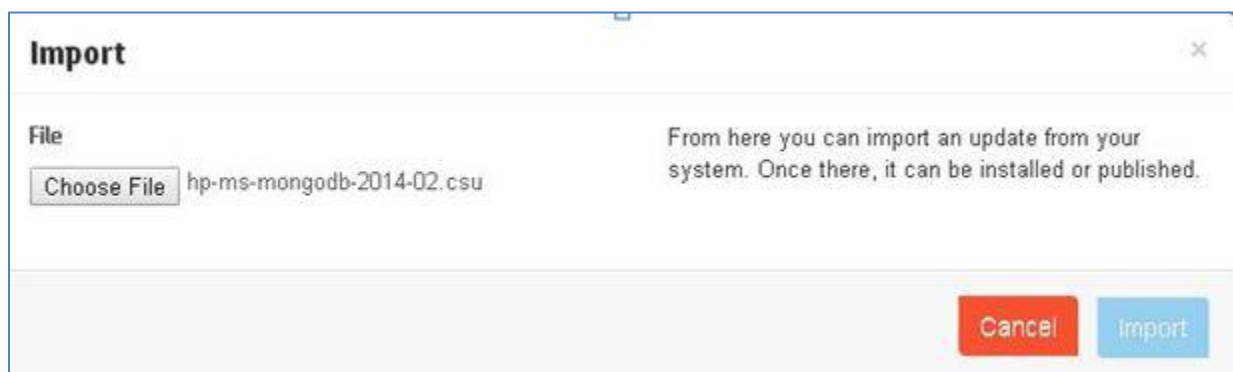


Figure 92: Import Dialog Box

5. Click **Choose File** to display a dialog box to browse and select the file.
The file displays in the Import dialog box.
6. Click **Import**.
The file is imported to your local cloud and displayed in the Updates and Extensions page.

Login to CODN Remote Portal

To import an update from CODN remote portal, do the following:

1. Click the **Project** Tab to select it.
The Project Tab is activated and the options are displayed in the left panel.

2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Updates and Extensions** and then select **Updates and Extensions** to display the Updates and Extensions page with the list of updates.
4. Click **Configure** displayed at the top right corner of the page to display the Configure dialog box.
5. Enter your credentials.
6. Click **OK** to save the details.
The updates are displayed in the Updates and Extensions page.

Download Updates or Extensions

To download the packages, do the following:

1. Click the **Project** Tab to select it
The Project tab is activated and the options are displayed in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Updates and Extensions** and then select **Updates and Extensions** to display the Updates and Extensions page with the list of updates.
4. Click **Configure** displayed at the top right corner of the page to display the Configure dialog box.
5. Enter your credentials.
6. Click **OK** to save the details.
The updates are displayed in the Updates and Extensions page.
7. Click **Download** against the package that you want to download on your local system.
Once the download completes successfully, the Publish option is displayed.
8. (Optional) To view the installation progress, click the **More** drop-down list and select **View Progr**

Note: Ensure that you have enough disk space before you start the download process as these need large disk space.

Publish an Update or Extension

Once you download an update, you can publish it. The **Publish** option is displayed once the download is complete. A download can consist of one or more pieces that must be distributed to multiple HP Cloud OS repositories. Publish routes the download contents to their appropriate repositories.

To publish an update, do the following:

1. Click the **Project** Tab to select it
The Project tab is activated and the options are displayed in the left panel.
2. From the **Current Project** drop-down list in the left panel, select the project.
3. From the options in the left panel, click **Updates and Extensions** and then select **Updates and Extensions** to display the Updates and Extensions page with the list of updates.
4. Click **Publish** to open the Targets dialog box.
5. Enter **Scope** to define who can use the update.
The Administration Dashboard offers scope choices, depending upon the update type.
6. Click **Publish**.
After a successful publish, you see the update in the appropriate section of the Administration Dashboard. For example, if the update is a Glance image, you can see it in the **Images** page under

the **Infrastructure** option and if the update is a workload, you can see it in the Workloads page under the Provisioning option.

Settings Tab

On the top right corner of the Administration Dashboard window, the **Settings** link is displayed. The link is available to all users. The Settings link helps you to modify dashboard settings for all users of your site, change password and gives details about the HP Cloud OS for Moonshot Administration Dashboard.

Customize Site Settings

All Administration Dashboard users can access settings for User, Password, About and Help. Only the Admin user can access the Administration Dashboard Site Settings window. When the Admin user changes site settings, the changes affect all users of the site.

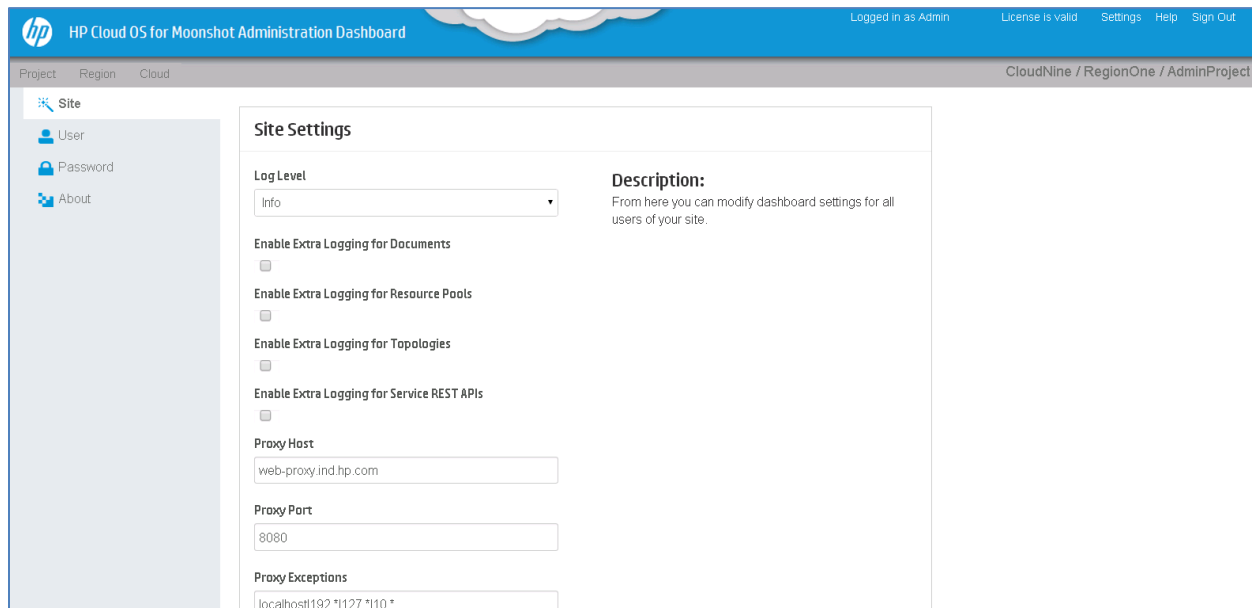


Figure 93: Settings Page

To access site settings:

1. Log into the Administration Dashboard as Admin User.
2. Click **Settings** in the upper right corner of the window.
3. Click **Site** to display the Site page.

In the Site page, you can:

- Change the log level.
- Enable extra logging.
- Change proxy settings.

To Change the Log Level

Use log level to capture more detailed log files when you need to troubleshoot, or to save disk space with less detailed log files when your system is running routinely.

The different Log levels are as follows:

- **Debug** — Writes the most detailed log file messages.
- **Info** — writes informational, warning, error, and critical messages to the log file.
- **Warning** — writes warning, error, and critical messages to the log file. Informational messages are not written.
- **Error** — Writes error and critical messages to the log file. Informational and warning messages are not written.
- **Critical** — Writes only critical messages to the log file. Informational, error, and warning messages are not written.

The default log level is Info. To change the default, select a log level from the drop down list

Enable Extra Logging

Certain functional areas are set to generate informational messages. Log level does not control the functional area level of log information unless you select that area. Select a functional area to change log file messages from informational to more detailed messages. You can select the following areas to enable extra logging:

- Documents
- Resource Pools
- Topologies
- Service REST APIs

Change Proxy Settings

Cloud Administrators can change proxy information from the default values that were entered in the Admin Node. You use a proxy when you upload or create images, and when you provision to HP Cloud Services.

You might need to change your proxy information if your default server fails or if you prefer to use a different proxy server. You can change the following proxy information:

- **Proxy Host**
- **Proxy Port**
- **Proxy Exceptions**
- **Proxy Username**
- **Proxy Password and Confirm Proxy Password**

Customize User Settings

This option allows you to customize the settings as per your requirements. To change the settings, do the following:

1. Click the **Settings** link on the upper right corner of the Administration Dashboard window. The Settings page is displayed with options in the left panel.
2. Click **User** from the left panel. The User Settings window is displayed.
3. From the **Language** drop-down list, select the language. For example: *English*
4. From the **Timezone** drop-down list, select the time. For example: *UTC*
5. In the **Table Page Size** box, enter a number. For example *20*, meaning a maximum of 20 line items will be displayed at a given time.
6. Click **Save**. A message is displayed on successful completion.

Change Password

To change your password, do the following:

1. Click the **Settings** link on the upper right corner of the Administration Dashboard window. The Settings page is displayed with options in the left panel.
2. Click **Password** from the left panel. The Change Password window is displayed.
3. In the **Current Password** box, enter your current password.
4. In the **New Password** box, enter your new password.
5. In the **Confirm New Password**, enter your new password again.
6. Click **Change** to save the changes.

About HP Cloud OS for Moonshot Administration Dashboard

This option gives detailed information about the HP Cloud OS for Moonshot Administration Dashboard.

1. Click the **Settings** link on the upper right corner of the Administration Dashboard window. The Settings page is displayed with options in the left panel.
2. Click **About** to display the About HP Cloud OS for Moonshot Administration Dashboard window. It displays the product version number.

Help

This option takes you to the Help documentation page of the Administration Dashboard (this document).



Hewlett-Packard Company Confidential © Copyright 2012-2013 Hewlett-Packard Development Company, L.P. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Disclaimer of Warranty: HP MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND REGARDING THIS SOFTWARE INCLUDING ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE OR NON-INFRINGEMENT. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT OR ANY OTHER LEGAL THEORY, IN CONNECTION WITH OR ARISING OUT OF THE FURNISHING, PERFORMANCE OR USE OF THIS SOFTWARE.

